

M 2.4L and 3.0L OEM Diesel Engines (PowerTech™)



OPERATOR'S MANUAL

PowerTech™ M 2.4 L and 3.0 L OEM Diesel Engines

OMRG34851 ISSUE 13JUL21 (ENGLISH)

CALIFORNIA

Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

If this product contains a gasoline engine:

⚠ WARNING

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

The State of California requires the above two warnings.

Additional Proposition 65 Warnings can be found in this manual.

John Deere Power Systems

Worldwide Edition
PRINTED IN U.S.A.

Introduction

OEM Engine and Drivetrain Warranty Registration

RG24614 —UN—21OCT13



Scan this code to register your OEM engine or drivetrain product online.
You can also visit us directly at JohnDeere.com/warranty.

Why registering your OEM engine or drivetrain product is a really smart idea:

- **Get faster service.** Registering your engine or drivetrain product gives us the information we need to meet your service needs promptly and completely.
- **Protect your investment.** You'll be kept up-to-date on engine or drivetrain product updates.
- **Extend your warranty.** You'll be given the option to extend your coverage before your standard warranty term expires.
- **Stay informed.** Be the first to know about new products and money-saving offers from John Deere.

You're Covered

When you buy a John Deere engine or drivetrain product you aren't just buying pistons and crankshafts and gear drives. You're buying the ability to get work done. Without downtime, without worries, and without hassles. And you're buying the assurance that if you do need help, a strong support network will be there — ready to step in.

Confidence. That's what John Deere engines, John Deere drivetrains, and John Deere Warranties are all about.

Long durations. Warranties designed to give you confidence in your engine or drivetrain product.

Worldwide support. Get service when and where you need it. John Deere has 4,000+ service locations worldwide.

Genuine John Deere parts and service. Authorized service outlets will use only new or remanufactured parts or components furnished by John Deere.

Warranty Duration

Equipment operators can't afford downtime or unexpected repairs. That's why we offer comprehensive warranties

on our OEM industrial engines, marine engines, and drivetrain products.

- **OEM Engines:** 2-year/2,000-hour warranty, with unlimited hours in the first year.
- **Drivetrain Products:** 12-month/2000-hour warranty. In the absence of a functional hour meter, hours of use will be determined on the basis of 12 hours of use per calendar day.

These warranties take effect the date the engine or drivetrain product is delivered to the first retail purchaser. Be sure to register your engine or drivetrain product and take full advantage of the John Deere service and support network.

In addition, engine extended warranties are available under certain conditions. John Deere offers a variety of purchased warranties to extend the warranty period for your engine. You'll be given the option to extend your coverage before your standard warranty term expires.

Obtaining Warranty Service

Warranty service must be requested through an authorized John Deere service outlet before the expiration of the warranty. Evidence of the engine's or drivetrain product's delivery date to the first retail purchaser must be presented when requesting warranty service. Authorized service outlets include:

- John Deere distributor
- John Deere OEM service dealer
- John Deere equipment dealer
- John Deere marine dealer

Worldwide Support Network

Visit JohnDeere.com/dealer to find the authorized engine or drivetrain service location nearest you. For complete warranty details visit JohnDeere.com/warrantystatements to view, download, or print the warranty statement for your engine or drivetrain product.

GM52594,0000996 -19-02JUL21-1/1

Foreword

READ THIS MANUAL carefully to learn how to operate and service your engine correctly. Failure to do so could result in personal injury or equipment damage.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your engine and should remain with the engine when you sell it.

MEASUREMENTS IN THIS MANUAL are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by standing at the drive or flywheel end (rear) of the engine and facing toward the front of the engine.

WRITE ENGINE SERIAL NUMBERS and option codes in the spaces indicated in the Record Keeping Section. Accurately record all the numbers. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the engine.

SETTING FUEL DELIVERY outside the published factory specifications or otherwise modifying or tampering with the engine fuel system settings including ECU software parameters may subject the user to civil fines and penalties. Such actions will also be taken into consideration if claims are made under the provisions of John Deere's engine warranty.

CERTAIN ENGINE ACCESSORIES such as radiator, air cleaner, and instruments are optional equipment on John Deere OEM Engines. These accessories may be provided by the equipment manufacturer instead of John Deere. This operator's manual applies only to the engine and those options available through the John Deere distribution network.

NOTE: This manual covers only engines provided to OEM (Outside Equipment Manufacturers). For engines in Deere machines, refer to the machine operators manual.

VP98307,00000A5 -19-20SEP12-1/1

Engine Owner


John Deere Engine Owner:

It is important for you to register your new engine for factory warranty. Registering your engine will allow your Service Dealer to verify that your warranty status should a repair be needed. The easiest way to register your engine is via the internet. To register your engine for warranty via the internet, please use the following URL: <http://www.johndeere.com/enginewarranty>

Your John Deere Engine Distributor or local John Deere Service Dealer will also be happy to provide this service. Engine service can be done by all Ag, C&FD, and JDPS branded dealers. To view the John Deere Service Dealer network or locate your nearest Dealer, use the following URL: <http://www.johndeere.com/dealer>

JR74534,000026F -19-21JUN12-1/1

Download Instructions

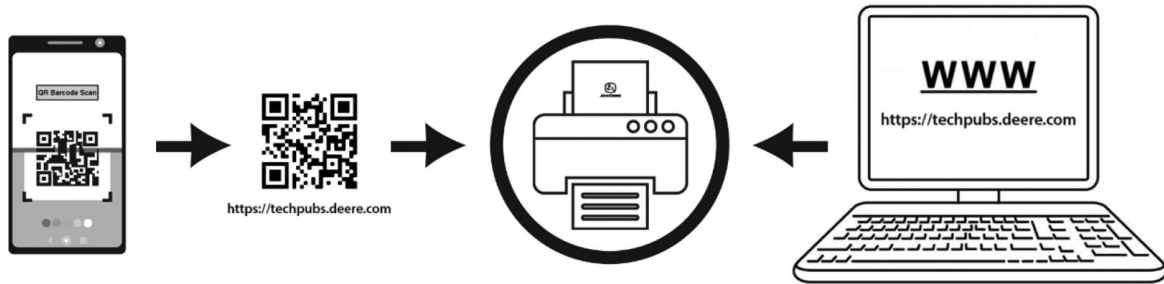

Instructions, manuals, and other documents may be downloaded at [www.techpubs.deere.com](https://techpubs.deere.com). Scanning the QR code on a mobile device will route to the site automatically.

Les instructions, les manuels et autres documents peuvent être téléchargés à cette adresse: [www.techpubs.deere.com](https://techpubs.deere.com). Scanner le QR code via un appareil mobile mène automatiquement au site.

Istruzioni, manuali e altri documenti possono essere scaricati su [www.techpubs.deere.com](https://techpubs.deere.com). La scansione del codice QR su un dispositivo portatile indirizza automaticamente al sito.

Anleitungen, Handbücher und andere Dokumente können unter [www.techpubs.deere.com](https://techpubs.deere.com) heruntergeladen werden. Durch Scannen des QR-Codes mit einem Mobilgerät wird man automatisch zur Webseite weitergeleitet.

Las instrucciones, los manuales y otros documentos se pueden descargar en [www.techpubs.deere.com](https://techpubs.deere.com). Al escanear el código QR en un dispositivo móvil, se abrirá automáticamente el sitio web.

Instruções, manuais e outros documentos podem ser baixados em [www.techpubs.deere.com](https://techpubs.deere.com). A leitura do código QR em um dispositivo móvel levará você automaticamente para o site.

Инструкции, руководства и другие документы можно загрузить на странице [www.techpubs.deere.com](https://techpubs.deere.com). Сканирование QR-кода на мобильном устройстве будет автоматически отправлять на сайт.


Identification Views

*NOTE: There are multiple engine configurations.
Base engine model shown.*



John Deere 2.4L Base Engine

RG12961—UN—03JUN03

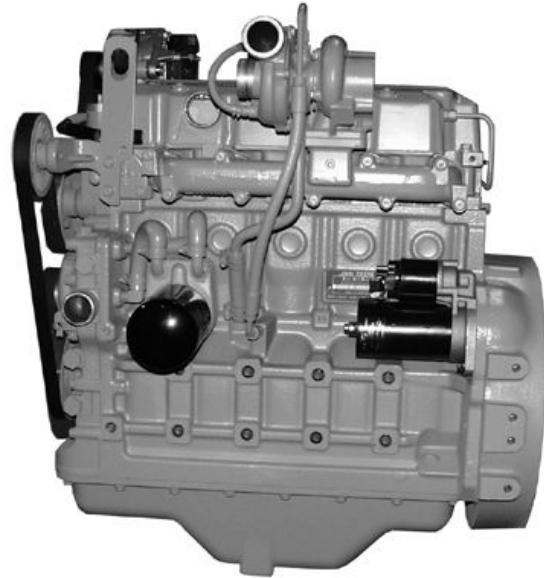

John Deere 3.0L Base Engine

RG12963—UN—03JUN03

OUOD006,00000AD -19-28JUN21-1/1

Contents

	Page		Page
Record Keeping			
POWERTECH™ Medallion	01-1	Handling and Storing Diesel Fuel	10-2
Engine Serial Number Plate	01-1	Biodiesel Fuel	10-3
Record Engine Serial Number	01-2	Testing Diesel Fuel	10-4
Engine Option Codes	01-3	Aviation (Jet) Fuels	10-4
		Burner Fuels	10-4
Safety		Minimizing the Effect of Cold Weather on Diesel Engines	10-5
Understand Signal Words	05-1	Diesel Engine Break-In Oil — Non-Emissions Certified and Certified Tier 1, Tier 2, Tier 3, Stage I, Stage II, and Stage III	10-6
Recognize Safety Information	05-1	Diesel Engine Oil — Non-Emissions Certified and Certified Tier 1 and Stage I	10-7
Replace Safety Signs	05-1	Extended Diesel Engine Oil Service Intervals — Non-Emissions Certified and Certified Tier 1 and Stage I	10-8
Follow Safety Instructions	05-2	Mixing of Lubricants	10-8
California Proposition 65 Warning	05-2	Alternative and Synthetic Lubricants	10-8
Avoid Hot Exhaust	05-2	Lubricant Storage	10-9
Work In Ventilated Area	05-2	Oil Filters	10-9
Decommissioning — Proper Recycling and Disposal of Fluids and Components	05-3	Diesel Engine Coolant (engine with wet sleeve cylinder liners)	10-10
Prevent Machine Runaway	05-3	Water Quality for Mixing with Coolant Concentrate	10-11
Practice Safe Maintenance	05-4	Operating in Warm Temperature Climates	10-11
Work in Clean Area	05-4	Testing Coolant Freeze Point	10-12
Wear Protective Clothing	05-5	Disposing of Coolant	10-12
Service Machines Safely	05-5		
Use Proper Tools	05-5	Engine Operating Guidelines	
Support Machine Properly	05-6	PV101 Instrument Panels	15-1
Use Proper Lifting Equipment	05-6	PV101 Diagnostic Gauge — Using	15-3
Protect Against Noise	05-6	PV101 Diagnostic Gauge — Main Menu	15-4
Illuminate Work Area Safely	05-7	PV101 Diagnostic Gauge — Essential Menus	15-5
Install All Guards	05-7	DG14 Diagnostic Gauge — Using	15-5
Stay Clear of Rotating Drivelines	05-7	DG14 Diagnostic Gauge — Main Menu	15-6
Protect Against High Pressure Spray	05-8	DG14 Diagnostic Gauge — Essential Menus	15-7
Service Cooling System Safely	05-8	PV480 Instrument Panel	15-8
Remove Paint Before Welding or Heating	05-8	PV480 Diagnostic Gauge — Using	15-9
Do Not Open High-Pressure Fuel System	05-9	PV480 Diagnostic Gauge — Main Menu	15-10
Avoid High-Pressure Fluids	05-9	PV480 Diagnostic Gauge — Essential Menus	15-11
Avoid Heating Near Pressurized Fluid Lines	05-9	Normal Engine Operation	15-11
Avoid Static Electricity Risk When Refueling	05-10	Break-In Service	15-12
Handle Fuel Safely—Avoid Fires	05-10	Auxiliary Gear Drive Limitations	15-13
Prepare for Emergencies	05-11	Starting The Engine	15-14
Handle Starting Fluid Safely	05-11	Cold Weather Starting	15-15
Handling Batteries Safely	05-12		
Prevent Acid Burns	05-13		
Prevent Battery Explosions	05-13		
Live With Safety	05-14		
Fuels, Lubricants, and Coolant			
Diesel Fuel	10-1		
Supplemental Diesel Fuel Additives	10-2		
Lubricity of Diesel Fuel	10-2		

Continued on next page

Original Instructions. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT © 2021
DEERE & COMPANY
Moline, Illinois
All rights reserved.
A John Deere ILLUSTRATION™ Manual
Previous Editions

Copyright © 2003, 2004, 2007, 2011, 2012, 2014, 2015, 2016, 2017, 2018, 2019, 2020

Page	Page
Warming Engine 15-15	Checking Fuses 40-7
Avoid Excessive Engine Idling 15-16	Checking Air Compressors 40-8
Locking Throttle at Preset Speed 15-16	Adjusting Speed Gain (Generator Sets) 40-8
Stopping the Engine 15-16	Priming the Fuel Filter 40-9
Using a Booster Battery or Charger 15-18	
Lubrication and Maintenance	Troubleshooting
Required Emission-Related Information 20-1	General Troubleshooting Information 45-1
Observe Service Intervals 20-1	Precautions for Welding 45-1
Use Correct Fuels, Lubricants, and Coolant 20-1	Electrical System Schematic 45-2
Lubrication and Maintenance Service	Engine Troubleshooting 45-3
Interval Chart—Standard Industrial Engines .. 20-2	
Lubrication and Maintenance Service	Storage
Interval Chart—Generator (Standby)	Engine Storage Guidelines 50-1
Applications 20-3	Preparing Engine for Long-Term Storage 50-1
	Removing Engine from Long Term Storage 50-2
Lubrication/Maintenance-Daily	Specifications
Daily Prestarting Checks 25-1	General OEM Engine Specifications 55-1
	Engine Power Rating and Speed
Lubrication/Maintenance-500 Hour/12 Month	Specifications 55-2
Changing Engine Oil and Replacing Filter 30-1	Engine Crankcase Oil Capacities 55-3
Replacing Fuel Filter Element 30-3	Unified Inch Bolt and Screw Torque Values 55-4
Cleaning Crankcase Vent Tube 30-4	Metric Bolt and Screw Torque Values 55-5
Checking Air Intake System 30-4	
Check Engine Speeds 30-4	Lubrication and Maintenance Records
Checking Belt Tensioner Spring	Using Lubrication and Maintenance Records 60-1
Tension and Belt Wear 30-5	Daily (Prestarting) Service 60-1
Checking Engine Electrical Ground	500 Hour/12 Month Service 60-1
Connections 30-6	2000 Hour/24 Month Service 60-2
Servicing Fire Extinguisher 30-7	Service as Required 60-2
Checking Engine Mounts 30-7	
Servicing Battery 30-7	Warranty
Checking Cooling System 30-9	John Deere Warranty in OEM Applications 65-1
Replenishing Supplemental Coolant	Emissions Control System Certification Label 65-4
Additives (SCAs) Between Coolant	EPA Non-road Emissions Control
Changes 30-10	Warranty Statement—Compression Ignition .. 65-5
Testing Diesel Engine Coolant 30-11	CARB Non-road Emissions Control
Pressure Testing Cooling System 30-12	Warranty Statement—Compression Ignition .. 65-7
Lubrication/Maintenance-2000 Hour/24 Month	John Deere Service Literature Available
Checking Crankshaft Vibration Damper	Technical Information 70-1
(If Equipped) 35-1	
Flushing and Refilling Cooling System 35-2	
Testing Thermostats Opening	
Temperature- Earlier Engines 35-4	
Testing Thermostats Opening Temperature 35-6	
Service As Required	
Additional Service Information 40-1	
Do Not Modify Fuel System 40-1	
Adding Coolant 40-2	
Pre-Start Cleaning Guide 40-3	
Replacing Single Stage Air Cleaner Element 40-4	
Replacing Axial Seal Air Cleaner Filter	
Element 40-5	
Replacing Radial Seal Air Cleaner	
Filter Element 40-6	
Replacing Fan and Alternator Belt 40-7	

Record Keeping

POWERTECH™ Medallion

A medallion is located on the rocker arm cover which identifies each engine as a John Deere **POWERTECH™** engine.



RG12685 —UN—12DEC02

RG12684 —UN—12DEC02

POWERTECH is a trademark of Deere & Company.


RG41183,0000022 -19-10DEC02-1/1

Engine Serial Number Plate

Each engine has a 13-digit John Deere engine serial number. The first two digits identify the factory that produced the engine.

- “PE” indicates the engine was built in Torreon, Mexico

Your engine's serial number plate (A) is located on the left-hand side of cylinder block behind the starter motor.

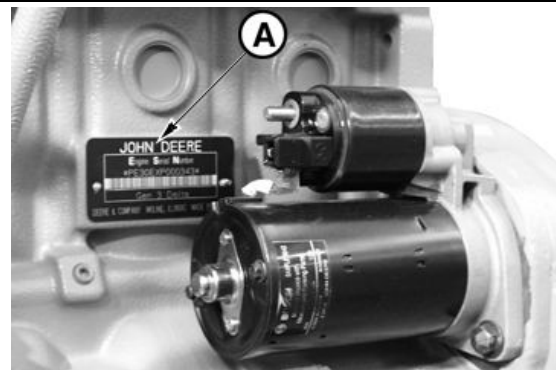

13-Digit Engine Serial Number Plate

RG12687 —UN—12DEC02

RG41183,0000025 -19-11DEC02-1/1

Record Engine Serial Number

Record all of the numbers and letters found on your engine serial number plate in the spaces provided below.

This information is very important for repair parts or warranty information.

Engine Serial Number (B)

Engine Model Number (C)

For identification of publications specific to engine model refer to the [PowerAssist App](#) or [John Deere Technical Information Store](#).



Engine Serial Number Plate

RG33180 —UN—18NOV20




<https://techpubs.deere.com/https://techpubs.deere.com/>

RG16317 —UN—26JUL07

OUOD006,00000AF -19-28JUN21-1/1

Engine Option Codes

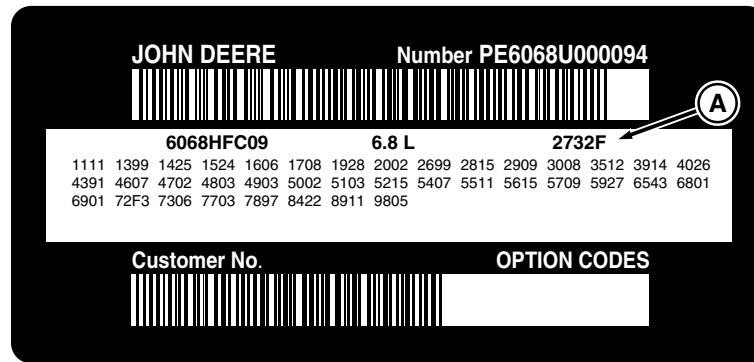

Option Code Label Example

A—Engine Base Code (example)

OEM engines have an engine option code label affixed to the rocker arm cover. These codes indicate which of the engine options were installed on your engine at the factory. When in need of parts or service, furnish your authorized servicing dealer or engine distributor with these numbers.

The engine option code label includes an engine base code (A). This base code must also be recorded along with the option codes. At times it will be necessary to furnish this base code to differentiate two identical option codes for the same engine model.

The first two digits of each code identify a specific group, such as alternators. The last two digits of each code identify one specific option provided on your engine, such as a 24 volt, 120 amp alternator.

If an engine is ordered without a particular component, the last two digits of that functional group option code will be 99, 00, or XX. The following list shows only the first two digits of the code numbers. For future reference such as ordering repair parts, it is important to have these code numbers available. To ensure this availability, enter the third and fourth digits shown on your engine option code label in the spaces provided on the following page.

An additional option code label may also be delivered (in a plastic bag attached to the engine or inserted in the machine documentation). It is recommended to place this label either on this page of the operators manual or in the Engine Owner's Warranty booklet under Option Codes.

The machine manufacturer may have placed the label in a specific accessible area (inside the enclosure or close to a maintenance area).

Your engine option code label may not contain all option codes if an option has been added after the engine left the producing factory.

If option code label is lost or destroyed, consult your servicing dealer or engine distributor selling the engine for a replacement.

Record your engine Base Code (A) in the spaces provided below for easy reference.

Engine Base Code (A):

Option Codes	Description
10_____	Paint Protection
11_____	Rocker Arm Cover
12_____	Oil Filler
13_____	Crankshaft Pulley
14_____	Flywheel Housing
15_____	Flywheel
16_____	Fuel Injection System
17_____	Air Inlet
18_____	Air Cleaner
19_____	Oil Pan
20_____	Water Pump
21_____	Thermostat Cover
22_____	Thermostat

Option Codes	Description
56_____	Paint
57_____	Water Pump Inlet
58_____	Power Take Off
59_____	Oil Cooler/Oil Filter
60_____	Add-On Fan Drive Pulley
61_____	After Treatment Device/Muffler
62_____	Alternator Mounting
63_____	Low-Pressure Fuel Lines
64_____	Exhaust Elbow
65_____	Turbocharger
66_____	Temperature Switch
67_____	Engine Sensors
68_____	Damper

Continued on next page

RG, RG34710, 5004 -19-12, JUN17-1/2

RG24026 —UN—05AUG13

Record Keeping

Option Codes	Description	Option Codes	Description
23_____	Fan Drive	69_____	Engine Serial Number Plate
24_____	Fan Belt	70_____	Decomposition Tube (OEM)
25_____	Fan	71_____	SCR (OEM)
26_____	Block Heater	72_____	Performance Software and Labels
27_____	Radiator/Heat Exchanger	7A_____	Performance Software and Labels
28_____	Exhaust Manifold	73_____	After Treatment Dosing System
29_____	Ventilator System	74_____	Air Conditioning
30_____	Starting Motor	75_____	Restriction Indicator
31_____	Alternator	76_____	Oil Pressure Switch
32_____	DEF Lines, Pressure (OEM)	77_____	Timing Gear Cover (S450/S650)
33_____	DEF Lines, Supply/Return to Tank (OEM)	78_____	Air Compressor
34_____	DEF Tank and Header (OEM)	79_____	Certification
35_____	Final Fuel Filter	80_____	Sea Water Pump (Marine)
36_____	Front Plate and Idler Shafts	81_____	Primary Fuel Filter/Water Separator
37_____	Fuel Transfer Pump	82_____	Ignition System (Natural Gas)
38_____	Operator Manual	83_____	Vehicle Performance Software
39_____	Thermostat Housing	84_____	Wiring Harness
40_____	Dipstick and Tube	85_____	Fuel System (Natural Gas)
41_____	Belt Driven Auxiliary Drive (Add-On Crank Pulley)	86_____	Fan Pulley
42_____	DEF Line, Supply Module to Injector (OEM)	87_____	Belt Tensioner
43_____	Starting Aid	88_____	Oil Filter
44_____	Timing Gear Cover (S350)	89_____	EGR System
44_____	Tachometer Drive Sensors (S450/S650)	90_____	Trim Software (OEM)
45_____	Secondary Balancers	91_____	Engine Installation Kit (S350)
46_____	Cylinder Block with Camshaft	92_____	Engine Test Certificate/Engine Accessories (S350)
47_____	Crankshaft/Main Bearings	92_____	Engine Installation Kit (S450)
48_____	Connecting Rods/Pistons/Liners	93_____	Emission Label
49_____	Valve Actuating Mechanism	94_____	Custom Software
50_____	Oil Pump	95_____	Parts Installed at Factory
51_____	Cylinder Head with Valves	96_____	Engine Installation Kit/Ship With (S450/S650)
52_____	Gear Driven Auxiliary Drive	96_____	ECU Wiring Harness (6125/6135)
53_____	Fuel Heater	97_____	Field Installed Items
54_____	Turbo Air Intake	98_____	Engine Lift Strap
55_____	Shipping Stand	99_____	Service Only Parts

NOTE: This is a complete option code list based on the latest information available at the time of publication. The right is reserved to make changes

at any time without notice. Your engine will not contain all option codes listed.

RG, RG34710, 5004 -19-12JUN17-2/2

Safety

Understand Signal Words

DANGER; The signal word DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

WARNING; The signal word WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION; The signal word CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury. CAUTION may also be used to alert against unsafe practices associated with events which could lead to personal injury.

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards. DANGER or WARNING safety signs are located near specific hazards. General

precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.

 **DANGER**

 **WARNING**

 **CAUTION**

TS187 —19—30SEP88

DX,SIGNAL -19-05OCT16-1/1

Recognize Safety Information

This is a safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.




T81389 —UN—28JUN13

DX,ALERT -19-29SEP98-1/1

Replace Safety Signs

Replace missing or damaged safety signs. Use this operator's manual for correct safety sign placement.

There can be additional safety information contained on parts and components sourced from suppliers that is not reproduced in this operator's manual.

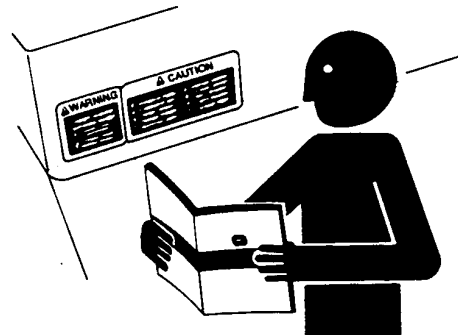

TS201 —UN—15APR13

DX,SIGNS -19-18AUG09-1/1


Follow Safety Instructions

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

There can be additional safety information contained on parts and components sourced from suppliers that is not reproduced in this operator's manual.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

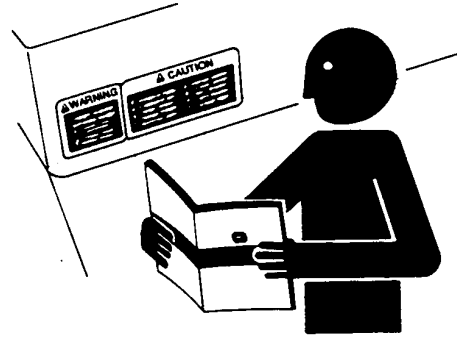

TS201 —UN—15APR13

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

DX,READ -19-16JUN09-1/1

California Proposition 65 Warning

Diesel engine exhaust, some of its constituents, along with certain machine components contain or emit chemicals known to the State of California to cause cancer and birth


defects or other reproductive harm. In addition, certain fluids contained in the machine and certain products of component wear contain or emit chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

RG41061,000001F -19-12JAN10-1/1

Avoid Hot Exhaust

Servicing machine or attachments with engine running can result in serious personal injury. Avoid exposure and skin contact with hot exhaust gases and components.

Exhaust parts and streams become very hot during operation. Exhaust gases and components reach temperatures hot enough to burn people, ignite, or melt common materials.

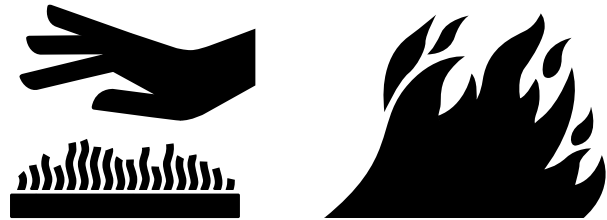


RG17488 —UN—21AUG09

DX,EXHAUST -19-20AUG09-1/1

Work In Ventilated Area

Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.

If you do not have an exhaust pipe extension, open the doors and get outside air into the area.

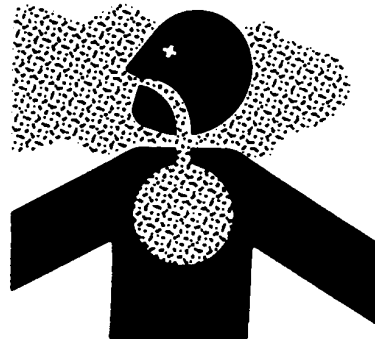


TS220 —UN—15APR13

DX,AIR -19-17FEB99-1/1

Decommissioning — Proper Recycling and Disposal of Fluids and Components

Safety and environmental stewardship measures must be taken into account when decommissioning a machine and/or component. These measures include the following:

- Use appropriate tools and personal protective equipment such as clothing, gloves, face shields or glasses, during the removal or handling of objects and materials.
- Follow instructions for specialized components.
- Release stored energy by lowering suspended machine elements, relaxing springs, disconnecting the battery or other electrical power, and releasing pressure in hydraulic components, accumulators, and other similar systems.
- Minimize exposure to components which may have residue from agricultural chemicals, such as fertilizers and pesticides. Handle and dispose of these components appropriately.
- Carefully drain engines, fuel tanks, radiators, hydraulic cylinders, reservoirs, and lines before recycling components. Use leak-proof containers when draining fluids. Do not use food or beverage containers.
- Do not pour waste fluids onto the ground, down a drain, or into any water source.
- Observe all national, state, and local laws, regulations, or ordinances governing the handling or disposal of waste fluids (example: oil, fuel, coolant, brake fluid);

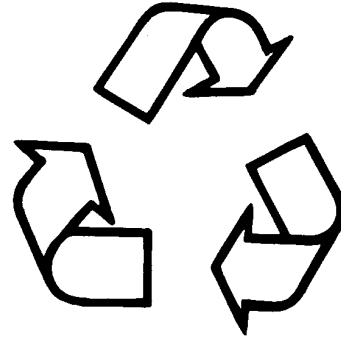

TS1133 —UN—15APR13

filters; batteries; and, other substances or parts. Burning of flammable fluids or components in other than specially designed incinerators may be prohibited by law and could result in exposure to harmful fumes or ashes.

- Service and dispose of air conditioning systems appropriately. Government regulations may require a certified service center to recover and recycle air conditioning refrigerants which could damage the atmosphere if allowed to escape.
- Evaluate recycling options for tires, metal, plastic, glass, rubber, and electronic components which may be recyclable, in part or completely.
- Contact your local environmental or recycling center, or your John Deere dealer for information on the proper way to recycle or dispose of waste.


DX,DRAIN -19-01JUN15-1/1

Prevent Machine Runaway

Avoid possible injury or death from machinery runaway.

Do not start engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.

NEVER start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral or park.

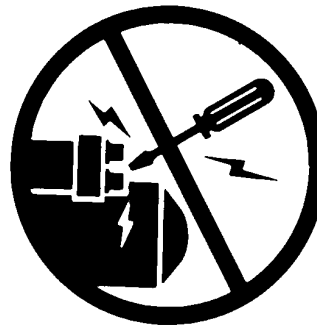

TS177 —UN—11JAN89

DX,BYPAS1 -19-29SEP98-1/1

Practice Safe Maintenance

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing away from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

On self-propelled equipment, disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.

On towed implements, disconnect wiring harnesses from tractor before servicing electrical system components or welding on machine.

Falling while cleaning or working at height can cause serious injury. Use a ladder or platform to easily reach each location. Use sturdy and secure footholds and handholds.




TS218 —UN—23AUG88

DX,SERV -19-28FEB17-1/1

Work in Clean Area

Before starting a job:

- Clean work area and machine.
- Make sure you have all necessary tools to do your job.
- Have the right parts on hand.
- Read all instructions thoroughly; do not attempt shortcuts.

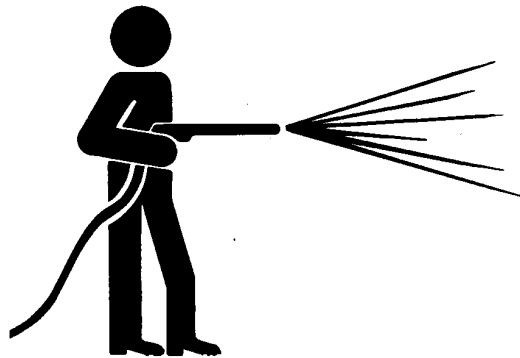


T6642EJ —UN—18OCT88

DX,CLEAN -19-04JUN90-1/1

Wear Protective Clothing

Wear close fitting clothing and safety equipment appropriate to the job.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

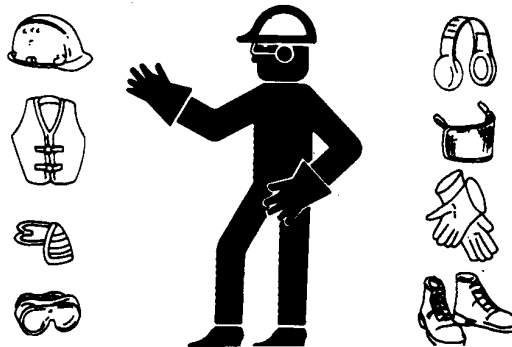


TS206 —UN—15APR13

DX,WEAR2 -19-03MAR93-1/1

Service Machines Safely

Tie long hair behind your head. Do not wear a necktie, scarf, loose clothing, or necklace when you work near machine tools or moving parts. If these items were to get caught, severe injury could result.

Remove rings and other jewelry to prevent electrical shorts and entanglement in moving parts.

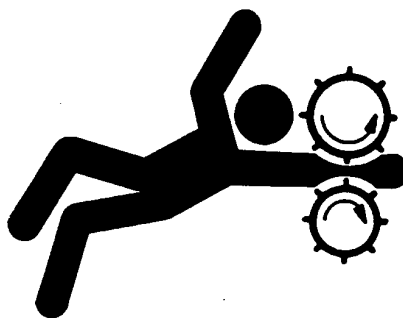

TS228 —UN—23AUG88

DX,LOOSE -19-04JUN90-1/1

Use Proper Tools

Use tools appropriate to the work. Makeshift tools and procedures can create safety hazards.

Use power tools only to loosen threaded parts and fasteners.

For loosening and tightening hardware, use the correct size tools. DO NOT use U.S. measurement tools on metric fasteners. Avoid bodily injury caused by slipping wrenches.

Use only service parts meeting John Deere specifications.



TS779 —UN—08NOV89


DX,REPAIR -19-17FEB99-1/1

Support Machine Properly

Always lower the attachment or implement to the ground before you work on the machine. If the work requires that the machine or attachment be lifted, provide secure support for them. If left in a raised position, hydraulically supported devices can settle or leak down.

Do not support the machine on cinder blocks, hollow tiles, or props that may crumble under continuous load. Do not work under a machine that is supported solely by a jack. Follow recommended procedures in this manual.

When implements or attachments are used with a machine, always follow safety precautions listed in the implement or attachment operator's manual.

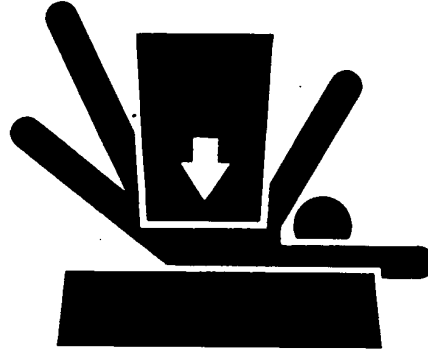


TS229 —UN—23AUG88

DX,LOWER -19-24FEB00-1/1

Use Proper Lifting Equipment

Lifting heavy components incorrectly can cause severe injury or machine damage.

Follow recommended procedure for removal and installation of components in the manual.

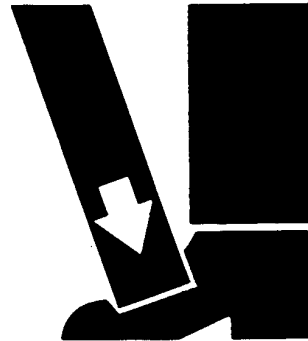

TS226 —UN—23AUG88

DX,LIFT -19-04JUN90-1/1

Protect Against Noise

There are many variables that affect the sound level range, including machine configuration, condition and maintenance level of the machine, ground surface, operating environmental, duty cycles, ambient noise, and attachments.

Exposure to loud noise can cause impairment or loss of hearing.

Always wear hearing protection. Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.




TS207 —UN—23AUG88

DX,NOISE -19-03OCT17-1/1

Illuminate Work Area Safely

Illuminate your work area adequately but safely. Use a portable safety light for working inside or under the machine. Make sure the bulb is enclosed by a wire cage. The hot filament of an accidentally broken bulb can ignite spilled fuel or oil.

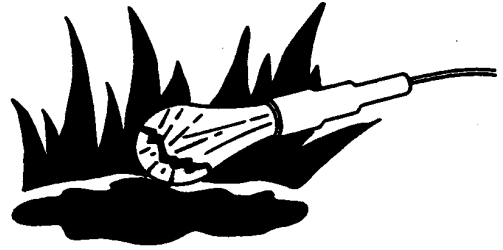

TS223 —UN—23AUG88


DX,LIGHT -19-04JUN90-1/1

Install All Guards

Rotating cooling system fans, belts, pulleys, and drives can cause serious injury.

Keep all guards in place at all times during engine operation.

Wear close-fitting clothes. Stop the engine and be sure fans, belts, pulleys, and drives are stopped before making adjustments, connections, or cleaning near fans and their drive components.

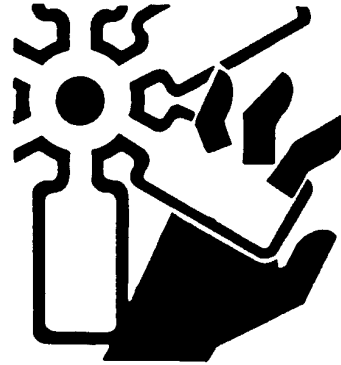

TS677 —UN—21SEP89

DX,GUARDS -19-18AUG09-1/1

Stay Clear of Rotating Drivelines

Entanglement in rotating driveline can cause serious injury or death.

Keep all shields in place at all times. Make sure rotating shields turn freely.

Wear close-fitting clothing. Stop the engine and be sure that all rotating parts and drivelines are stopped before making adjustments, connections, or performing any type of service on engine or machine driven equipment.



TS1644 —UN—22AUG95

DX,ROTATING -19-18AUG09-1/1

Protect Against High Pressure Spray

Spray from high pressure nozzles can penetrate the skin and cause serious injury. Keep spray from contacting hands or body.

If an accident occurs, see a doctor immediately. Any high pressure spray injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.



TS1343 —UN—18MAR92

DX,SPRAY -19-16APR92-1/1

Service Cooling System Safely

Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut off engine. Only remove filler cap when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.



TS281 —UN—15APR13

DX,RCAP -19-04JUN90-1/1

Remove Paint Before Welding or Heating


Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Remove paint before heating:

- Remove paint a minimum of 100 mm (4 in.) from area to be affected by heating. If paint cannot be removed, wear an approved respirator before heating or welding.
- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

Do not use a chlorinated solvent in areas where welding will take place.

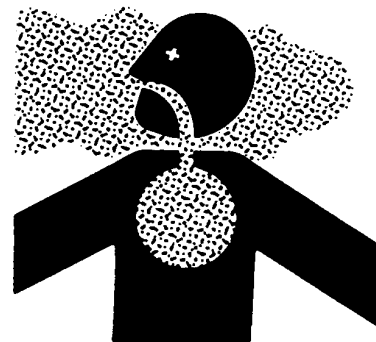

Do all work in an area that is well ventilated to carry toxic fumes and dust away.

Dispose of paint and solvent properly.


TS220 —UN—15APR13

DX,PAINT -19-24JUL02-1/1

Do Not Open High-Pressure Fuel System

High-pressure fluid remaining in fuel lines can cause serious injury. Do not disconnect or attempt repair of fuel lines, sensors, or any other components between the high-pressure fuel pump and nozzles on engines with High Pressure Common Rail (HPCR) fuel system.

Only technicians familiar with this type of system can perform repairs. (See your John Deere dealer.)

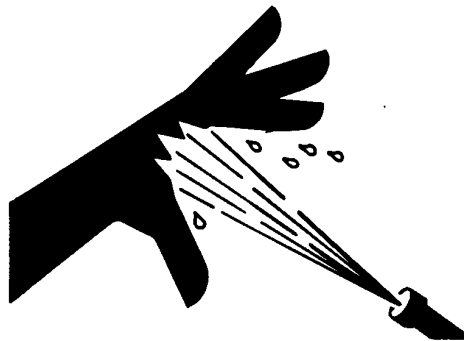

TS1343 — UN — 18MAR92

DX,WW,HPCR1 -19-07,JAN03-1/1

Avoid High-Pressure Fluids

Inspect hydraulic hoses periodically – at least once per year – for leakage, kinking, cuts, cracks, abrasion, blisters, corrosion, exposed wire braid or any other signs of wear or damage.


Replace worn or damaged hose assemblies immediately with John Deere approved replacement parts.

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high-pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar

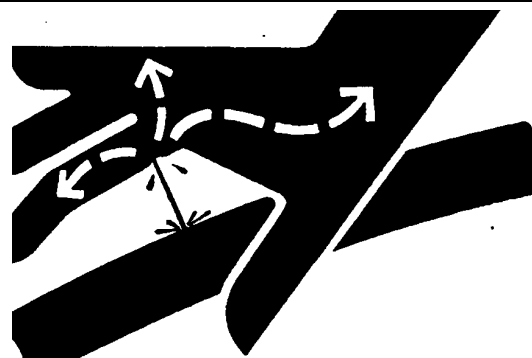

X9811 — UN — 23AUG88

with this type of injury should reference a knowledgeable medical source. Such information is available in English from Deere & Company Medical Department in Moline, Illinois, U.S.A., by calling 1-800-822-8262 or +1 309-748-5636.

DX,FLUID -19-12OCT11-1/1

Avoid Heating Near Pressurized Fluid Lines

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can accidentally burst when heat goes beyond the immediate flame area.



TS953 — UN — 15MAY90

DX,TORCH -19-10DEC04-1/1


Avoid Static Electricity Risk When Refueling

The removal of sulfur and other compounds in Ultra-Low Sulfur Diesel (ULSD) fuel decreases its conductivity and increases its ability to store a static charge.

Refineries may have treated the fuel with a static dissipating additive. However, there are many factors that can reduce the effectiveness of the additive over time.

Static charges can build up in ULSD fuel while it is flowing through fuel delivery systems. Static electricity discharge when combustible vapors are present could result in a fire or explosion.

Therefore, it is important to ensure that the entire system used to refuel your machine (fuel supply tank, transfer pump, transfer hose, nozzle, and others) is properly grounded and bonded. Consult with your fuel or fuel system supplier to ensure that the delivery system is in compliance with fueling standards for proper grounding and bonding practices.

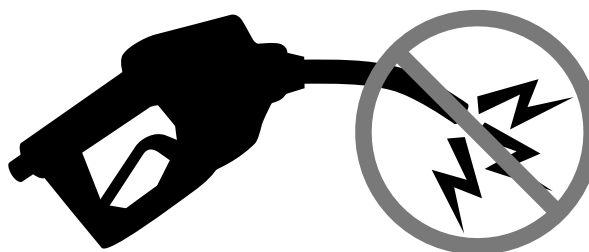

RG22142 —UN—17MAR14

RG21992 —UN—21AUG13

DX,FUEL,STATIC,ELEC -19-12JUL13-1/1

Handle Fuel Safely—Avoid Fires

Handle fuel with care: it is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks.

Always stop engine before refueling machine. Fill fuel tank outdoors.

Prevent fires by keeping machine clean of accumulated trash, grease, and debris. Always clean up spilled fuel.

Use only an approved fuel container for transporting flammable liquids.

Never fill fuel container in pickup truck with plastic bed liner. Always place fuel container on ground before refueling. Touch fuel container with fuel dispenser nozzle before removing can lid. Keep fuel dispenser nozzle in contact with fuel container inlet when filling.



Do not store fuel container where there is an open flame, spark, or pilot light such as within a water heater or other appliance.

TS202 —UN—23AUG88


DX,FIRE1 -19-12OCT11-1/1

Prepare for Emergencies

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

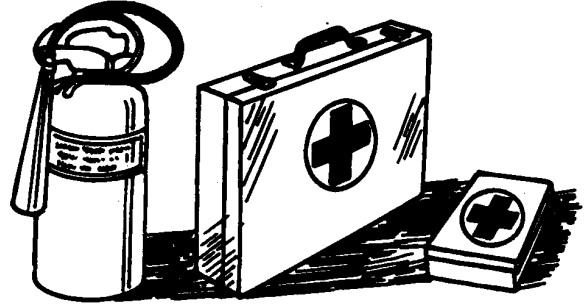

TS291—UN—15APR13

DX,FIRE2 -19-03MAR93-1/1

Handle Starting Fluid Safely

Starting fluid is highly flammable.

Keep all sparks and flame away when using it. Keep starting fluid away from batteries and cables.

To prevent accidental discharge when storing the pressurized can, keep the cap on the container, and store in a cool, protected location.

Do not incinerate or puncture a starting fluid container.

Do not use starting fluid on an engine equipped with glow plugs or an air intake heater.



TS1356—UN—18MAR92

DX,FIRE3 -19-14MAR14-1/1

Handling Batteries Safely

Battery gas can explode. Keep sparks and flames away from batteries. Use a flashlight to check battery electrolyte level.

Never check battery charge by placing a metal object across the posts. Use a voltmeter or hydrometer.

Always remove grounded (-) battery clamp first and replace grounded clamp last.

Sulfuric acid in battery electrolyte is poisonous and strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid hazards by:

- Filling batteries in a well-ventilated area
- Wearing eye protection and rubber gloves
- Avoiding use of air pressure to clean batteries
- Avoiding breathing fumes when electrolyte is added
- Avoiding spilling or dripping electrolyte
- Using correct battery booster or charger procedure.


If acid is spilled on skin or in eyes:

1. Flush skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush eyes with water for 15—30 minutes. Get medical attention immediately.

If acid is swallowed:

1. Do not induce vomiting.
2. Drink large amounts of water or milk, but do not exceed 2 L (2 qt.).
3. Get medical attention immediately.

WARNING: Battery posts, terminals, and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. **Wash hands after handling.**

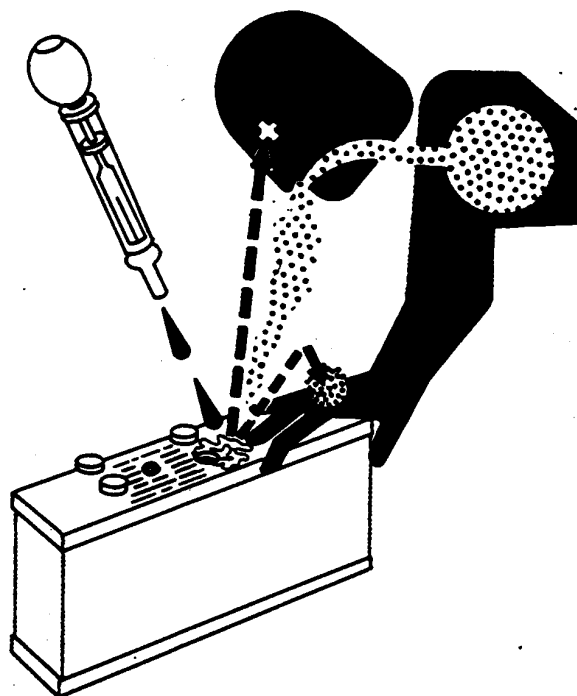

TS204 —UN—15APR13

TS203 —UN—23AUG88

DX,WW,BATTERIES -19-02DEC10-1/1

Prevent Acid Burns

Sulfuric acid in battery electrolyte is poisonous. It is strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid the hazard by:


1. Filling batteries in a well-ventilated area.
2. Wearing eye protection and rubber gloves.
3. Avoiding breathing fumes when electrolyte is added.
4. Avoiding spilling or dripping electrolyte.
5. Use proper jump start procedure.

If you spill acid on yourself:

1. Flush your skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush your eyes with water for 15—30 minutes. Get medical attention immediately.

If acid is swallowed:

1. Do not induce vomiting.
2. Drink large amounts of water or milk, but do not exceed 2 L (2 quarts).
3. Get medical attention immediately.

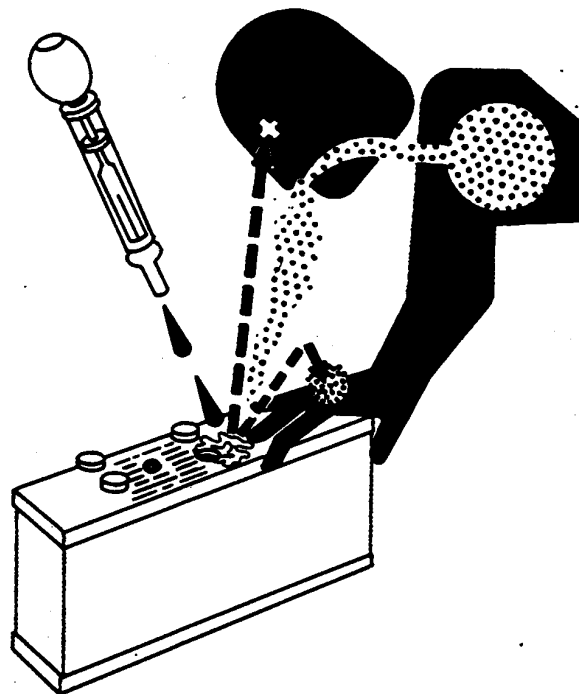

TS203 —UN—23AUG88

DX,POISON -19-21APR93-1/1

Prevent Battery Explosions

Keep sparks, lighted matches, and open flame away from the top of battery. Battery gas can explode.

Never check battery charge by placing a metal object across the posts. Use a volt-meter or hydrometer.

Do not charge a frozen battery; it may explode. Warm battery to 16°C (60°F).



TS204 —UN—15APR13

DX,SPARKS -19-03MAR93-1/1

Live With Safety

Before returning machine to customer, make sure machine is functioning properly, especially the safety systems. Install all guards and shields.



TS231 —19—07OCT88

DX,LIVE -19-25SEP92-1/1

Fuels, Lubricants, and Coolant

Diesel Fuel

Consult your local fuel distributor for properties of the diesel fuel available in your area.

In general, diesel fuels are blended to satisfy the low temperature requirements of the geographical area in which they are marketed.

Diesel fuels specified to EN 590 or ASTM D975 are recommended. Renewable diesel fuel produced by hydrotreating animal fats and vegetable oils is basically identical to petroleum diesel fuel. Renewable diesel that meets EN 590, ASTM D975, or EN 15940 is acceptable for use at all percentage mixture levels.

Required Fuel Properties

In all cases, the fuel shall meet the following properties:

Cetane number of 40 minimum. Cetane number greater than 47 is preferred, especially for temperatures below -20°C (-4°F) or elevations above 1675 m (5500 ft.).

Cloud Point should be below the expected lowest ambient temperature or **Cold Filter Plugging Point (CFPP)** should be a maximum 10°C (18°F) below the fuel cloud point.

Fuel lubricity should pass a maximum scar diameter of 0.52 mm as measured by ASTM D6079 or ISO 12156-1. A maximum scar diameter of 0.45 mm is preferred.

Diesel fuel quality and sulfur content must comply with all existing emissions regulations for the area in which the engine operates. DO NOT use diesel fuel with sulfur content greater than 10 000 mg/kg (10 000 ppm).

Materials such as copper, lead, zinc, tin, brass and bronze should be avoided in fuel handling, distribution and storage equipment as these metals can catalyze fuel oxidation reactions which can lead to fuel system deposits and plugged fuel filters.

E-Diesel fuel

DO NOT use E-Diesel (Diesel fuel and ethanol blend). Use of E-Diesel fuel in any John Deere machine may void the machine warranty.

 **CAUTION: Avoid severe injury or death due to the fire and explosion risk from using E-Diesel fuel.**

¹See DX,ENOIL12,OEM, DX,ENOIL12,T2,STD, or DX,ENOIL12,T2,EXT for more information on Engine Oil and Filter Service Intervals.

Sulfur Content for Interim Tier 4, Final Tier 4, Stage III A and B, Stage IV, and Stage V Engines Above 560 kW

- Use ONLY diesel fuel with a maximum of 500 mg/kg (500 ppm) sulfur content.

Sulfur Content for Interim Tier 4, Final Tier 4, Stage III B, Stage IV Engines, and Stage V Engines

- Use ONLY ultra low sulfur diesel (ULSD) fuel with a maximum of 15 mg/kg (15 ppm) sulfur content.

Sulfur Content for Tier 3 and Stage III A Engines

- Use of diesel fuel with sulfur content less than 1000 mg/kg (1000 ppm) is RECOMMENDED.
- Use of diesel fuel with sulfur content 1000—2000 mg/kg (1000—2000 ppm) REDUCES the oil and filter change interval.
- BEFORE using diesel fuel with sulfur content greater than 2000 mg/kg (2000 ppm), contact your John Deere dealer.

Sulfur Content for Tier 2 and Stage II Engines

- Use of diesel fuel with sulfur content less than 2000 mg/kg (2000 ppm) is RECOMMENDED.
- Use of diesel fuel with sulfur content 2000—5000 mg/kg (2000—5000 ppm) REDUCES the oil and filter change interval.¹
- BEFORE using diesel fuel with sulfur content greater than 5000 mg/kg (5000 ppm), contact your John Deere dealer.

Sulfur Content for Other Engines

- Use of diesel fuel with sulfur content less than 5000 mg/kg (5000 ppm) is RECOMMENDED.
- Use of diesel fuel with sulfur content greater than 5000 mg/kg (5000 ppm) REDUCES the oil and filter change interval.

IMPORTANT: Do not mix used diesel engine oil or any other type of lubricating oil with diesel fuel.

Improper fuel additive usage may cause damage on fuel injection equipment of diesel engines.

DX,FUEL1 -19-13JUL20-1/1

Supplemental Diesel Fuel Additives

Diesel fuel can be the source of performance or other operational problems for many reasons. Some causes include poor lubricity, contaminants, low cetane number, and a variety of properties that cause fuel system deposits. These and others are referenced in other sections of this Operator's Manual.

To optimize engine performance and reliability, closely follow recommendations on fuel quality, storage, and handling, which are found elsewhere in this Operator's Manual.

To further aid in maintaining performance and reliability of the engine's fuel system, John Deere has developed a family of fuel additive products for most global markets. The primary products include Fuel-Protect Diesel Fuel Conditioner (full feature conditioner in winter and summer formulas) and Fuel-Protect Keep Clean (fuel injector deposit removal and prevention). Availability of these and other products varies by market. See your local John Deere dealer for availability and additional information about fuel additives that might be right for your needs.

DX,FUEL13 -19-07FEB14-1/1

Lubricity of Diesel Fuel

Most diesel fuels manufactured in the United States, Canada, and the European Union have adequate lubricity to ensure proper operation and durability of fuel injection system components. However, diesel fuels manufactured in some areas of the world may lack the necessary lubricity.

IMPORTANT: Make sure the diesel fuel used in your machine demonstrates good lubricity characteristics.

Fuel lubricity should pass a maximum scar diameter of 0.52 mm as measured by ASTM D6079 or ISO 12156-1. A maximum scar diameter of 0.45 mm is preferred.

If fuel of low or unknown lubricity is used, add John Deere Fuel-Protect Diesel Fuel Conditioner (or equivalent) at the specified concentration.

Lubricity of BioDiesel Fuel

Fuel lubricity can improve significantly with BioDiesel blends up to B20 (20% BioDiesel). Further increase in lubricity is limited for BioDiesel blends greater than B20.

DX,FUEL5 -19-07FEB14-1/1

Handling and Storing Diesel Fuel

⚠ CAUTION: Reduce the risk of fire. Handle fuel carefully. DO NOT fill the fuel tank when engine is running. DO NOT smoke while you fill the fuel tank or service the fuel system.

Fill the fuel tank at the end of each day's operation to prevent water condensation and freezing during cold weather.

Keep all storage tanks as full as practical to minimize condensation.

Ensure that all fuel tank caps and covers are installed properly to prevent moisture from entering. Monitor water content of the fuel regularly.

When using biodiesel fuel, the fuel filter may require more frequent replacement due to premature plugging.

Check engine oil level daily prior to starting engine. A rising oil level may indicate fuel dilution of the engine oil.

IMPORTANT: The fuel tank is vented through the filler cap. If a new filler cap is required, always replace it with an original vented cap.

When fuel is stored for an extended period or if there is a slow turnover of fuel, add a fuel conditioner to stabilize the fuel. Keeping the free water drained and treating the bulk fuel storage tank quarterly with a maintenance dose of a biocide will prevent microbial growth. Contact your fuel supplier or John Deere dealer for recommendations.

DX,FUEL4 -19-13JAN18-1/1

Biodiesel Fuel

Biodiesel fuel is comprised of monoalkyl esters of long chain fatty acids derived from vegetable oils or animal fats. Biodiesel blends are biodiesel mixed with petroleum diesel fuel on a volume basis.

Before using fuel containing biodiesel, review the Biodiesel Use Requirements and Recommendations in this Operator's Manual.

Environmental laws and regulations can encourage or prohibit the use of biofuels. Operators should consult with appropriate governmental authorities prior to using biofuels.

John Deere Stage V Engines Operating in the European Union

Where the engine is to be operated within the Union on diesel or non-road gas-oil, a fuel with a FAME content not greater than 8% volume/volume (B8) shall be used.

John Deere Engines with Exhaust Filter Except Stage V Engines Operating in the European Union

Biodiesel blends up to B20 can be used ONLY if the biodiesel (100% biodiesel or B100) meets ASTM D6751, EN 14214, or equivalent specification. Expect a 2% reduction in power and a 3% reduction in fuel economy when using B20.

Biodiesel concentrations above B20 can harm the engine's emission control systems and should not be used. Risks include, but are not limited to, more frequent stationary regeneration, soot accumulation, and increased intervals for ash removal.

John Deere Fuel conditioners or equivalent, which contain detergent and dispersant additives, are required when using biodiesel blends from B10 to B20, and are recommended when using lower biodiesel blends.

John Deere Engines Without Exhaust Filter

Biodiesel blends up to B20 can be used ONLY if the biodiesel (100% biodiesel or B100) meets ASTM D6751, EN 14214, or equivalent specification. Expect a 2% reduction in power and a 3% reduction in fuel economy when using B20.

These John Deere engines can operate on biodiesel blends above B20 (up to 100% biodiesel). Operate at levels above B20 ONLY if the biodiesel is permitted by law and meets the EN 14214 specification (primarily available in Europe). Engines operating on biodiesel blends above B20 might not fully comply with or be permitted by all applicable emissions regulations. Expect up to a 12% reduction in power and an 18% reduction in fuel economy when using 100% biodiesel.

John Deere fuel conditioners or equivalent, which contain detergent and dispersant additives, are required when using biodiesel blends from B10 to B100, and are recommended when using lower biodiesel blends.

Biodiesel Use Requirements and Recommendations

The petroleum diesel portion of all biodiesel blends must meet the requirements of ASTM D975 (US) or EN 590 (EU) commercial standard.

Biodiesel users in the U.S. are strongly encouraged to purchase biodiesel blends from a BQ-9000 Certified Marketer and sourced from a BQ-9000 Accredited Producer (as certified by the National biodiesel Board). Certified Marketers and Accredited Producers can be found at the following website: <http://www.bq9000.org>.

Biodiesel contains residual ash. Ash levels exceeding the maximums allowed in either ASTM D6751 or EN14214 can result in more rapid ash loading and require more frequent cleaning of the Exhaust Filter (if present).

The fuel filter can require more frequent replacement when using biodiesel fuel, particularly if switching from diesel. Check engine oil level daily prior to starting engine. A rising oil level can indicate fuel dilution of the engine oil. Biodiesel blends up to B20 must be used within 90 days of the date of biodiesel manufacture. Biodiesel blends above B20 must be used within 45 days from the date of biodiesel manufacture.

When using biodiesel blends up to B20, the following must be considered:

- Cold-weather flow degradation
- Stability and storage issues (moisture absorption, microbial growth)
- Possible filter restriction and plugging (usually a problem when first switching to biodiesel on used engines)
- Possible fuel leakage through seals and hoses (primarily an issue with older engines)
- Possible reduction of service life of engine components

Request a certificate of analysis from your fuel distributor to ensure that the fuel is compliant with the specifications provided in this Operator's Manual.

Consult your John Deere dealer for John Deere fuel products to improve storage and performance with biodiesel fuels.

The following must also be considered if using biodiesel blends above B20:

- Possible coking or blocked injector nozzles, resulting in power loss and engine misfire if John Deere fuel additives and conditioners or equivalent containing detergent/dispersants are not used
- Possible crankcase oil dilution (requiring more frequent oil changes)
- Possible lacquering or seizure of internal components
- Possible formation of sludge and sediments
- Possible thermal oxidation of fuel at elevated temperatures

Continued on next page

DX,FUEL7 -19-13JAN18-1/2

- Possible compatibility issues with other materials (including copper, lead, zinc, tin, brass, and bronze) used in fuel handling, distribution, and storage equipment
- Possible reduction in water separator efficiency
- Possible damage to paint if exposed to biodiesel
- Possible corrosion of fuel injection equipment
- Possible elastomeric seal and gasket material degradation (primarily an issue with older engines)
- Possible high acid levels within fuel system

- Because biodiesel blends above B20 contain more ash, using blends above B20 can result in more rapid ash loading and require more frequent cleaning of the Exhaust Filter (if present)

IMPORTANT: Raw pressed vegetable oils are NOT acceptable for use as fuel in any concentration in John Deere engines. Their use could cause engine failure.

DX,FUEL7 -19-13JAN18-2/2

Testing Diesel Fuel

A fuel analysis program can help to monitor the quality of diesel fuel. The fuel analysis can provide critical data such as calculated cetane index, fuel type, sulfur content, water content, appearance, suitability for cold weather

operations, bacteria, cloud point, acid number, particulate contamination, and whether the fuel meets ASTM D975 or equivalent specification.

Contact your John Deere dealer for more information on diesel fuel analysis.

DX,FUEL6 -19-13JAN18-1/1

Aviation (Jet) Fuels

IMPORTANT: Not all fuels should be considered for regular use. Some fuels that can be used in this engine are for emergency only and can cause premature engine and component wear if used long term. Unless your engine has been specifically designed for prolonged use of aviation fuel, the following fuels should be used for an emergency only fuel alternative.

Aviation (jet) fuels may be used with the following restrictions.

Type	Comments
Jet A	Not Recommended. Lower viscosity and density than base No. 2-D diesel fuel. Power loss up to 10% can be expected.
Jet A-1	Not Recommended. Lower viscosity and density than base No. 2-D diesel fuel. Power loss up to 10% can be expected. May be used as an emergency fuel only, with the addition of John Deere PREMIUM DIESEL FUEL CONDITIONER (or equivalent) at the specified concentration.
Jet B	Not Recommended. Lower density and extremely low viscosity compared to base No. 2-D diesel fuel. Power loss up to 14% can be expected. May be used as an emergency fuel only, with the addition of John Deere PREMIUM DIESEL FUEL CONDITIONER (or equivalent) at the specified concentration.
JP-4	Not Recommended. Lower density and extremely low viscosity compared to base No. 2-D diesel fuel. Power loss up to 14% can be expected. May be used as an emergency fuel only, with the addition of John Deere PREMIUM DIESEL FUEL CONDITIONER (or equivalent) at the specified concentration.
JP-5	Not Recommended. Lower viscosity and density than base No. 2-D diesel fuel. Power loss up to 10% can be expected.
JP-7	Not Recommended. Lower viscosity and density than base No. 2-D diesel fuel. Power loss up to 10% can be expected.
JP-8	Not Recommended. Lower viscosity and density than base No. 2-D diesel fuel. Power loss up to 10% can be expected.

OURGP12,000003F -19-16AUG11-1/1

Burner Fuels

Burner fuels, like kerosene, may be used with the following restrictions.

Type	Comments
No.2	Higher density and specific gravity than base No. 2-D diesel fuel. Power increase up to 3% can be expected.
No.1	Lower viscosity than base No. 2-D diesel fuel. Power loss up to 2% can be expected.

OURGP12,0000040 -19-07JUL04-1/1

Minimizing the Effect of Cold Weather on Diesel Engines

John Deere diesel engines are designed to operate effectively in cold weather.

However, for effective starting and cold-weather operation, a little extra care is necessary. The following information outlines steps that can minimize the effect that cold weather may have on starting and operation of your engine. See your John Deere dealer for additional information and local availability of cold-weather aids.

Use Winter Grade Fuel

When temperatures fall below 0°C (32°F), winter grade fuel (No. 1-D in North America) is best suited for cold-weather operation. Winter grade fuel has a lower cloud point and a lower pour point.

Cloud point is the temperature at which wax begins to form in the fuel. This wax causes fuel filters to plug. **Pour point** is the lowest temperature at which movement of the fuel is observed.

NOTE: On average, winter grade diesel fuel has a lower Btu (heat content) rating. Using winter grade fuel may reduce power and fuel efficiency, but should not cause any other engine performance effects. Check the grade of fuel being used before troubleshooting for low-power complaints in cold-weather operation.

Air Intake Heater

An air intake heater is an available option for some engines to aid cold weather starting.

Ether

An ether port on the intake is available to aid cold weather starting.

 **CAUTION: Ether is highly flammable. Do not use ether when starting an engine equipped with glow plugs or an air intake heater.**

Coolant Heater

An engine block heater (coolant heater) is an available option to aid cold weather starting.

Seasonal Viscosity Oil and Proper Coolant Concentration

Use seasonal grade viscosity engine oil based on the expected air temperature range between oil changes and a proper concentration of low silicate antifreeze as recommended. (See DIESEL ENGINE OIL and ENGINE COOLANT requirements in this section.)

Diesel Fuel Cold Flow Additive

Use John Deere Fuel-Protect Diesel Fuel Conditioner (winter formula), which contains anti-gel chemistry, or equivalent fuel conditioner to treat non-winter grade fuel (No. 2-D in North America) during the cold-weather season. This generally extends operability to about 10°C (18°F) below the fuel cloud point. For operability at even lower temperatures, use winter grade fuel.

IMPORTANT: Treat fuel when outside temperature drops below 0°C (32°F). For best results, use with untreated fuel. Follow all recommended instructions on label.

Biodiesel

When operating with biodiesel blends, wax formation can occur at warmer temperatures. Begin using John Deere Fuel-Protect Diesel Fuel Conditioner (winter formula) or equivalent at 5°C (41°F) to treat biodiesel fuels during the cold-weather season. Use B5 or lower blends at temperatures below 0°C (32°F). Use only winter grade petroleum diesel fuel at temperatures below -10°C (14°F).

Winterfronts

Use of fabric, cardboard, or solid winterfronts is not recommended with any John Deere engine. Their use can result in excessive engine coolant, oil, and charge air temperatures. This can lead to reduced engine life, loss of power and poor fuel economy. Winterfronts may also put abnormal stress on fan and fan drive components potentially causing premature failures.

If winterfronts are used, they should never totally close off the grill frontal area. Approximately 25% area in the center of the grill should remain open at all times. At no time should the air blockage device be applied directly to the radiator core.

Radiator Shutters

If equipped with a thermostatically controlled radiator shutter system, this system should be regulated in such a way that the shutters are completely open by the time the coolant reaches 93°C (200°F) to prevent excessive intake manifold temperatures. Manually controlled systems are not recommended.

If air-to-air aftercooling is used, the shutters must be completely open by the time the intake manifold air temperature reaches the maximum allowable temperature out of the charge air cooler.

For more information, see your John Deere dealer.

DX,FUEL10 -19-13JAN18-1/1

Diesel Engine Break-In Oil — Non-Emissions Certified and Certified Tier 1, Tier 2, Tier 3, Stage I, Stage II, and Stage III

New engines are filled at the factory with either John Deere Break-In™ or John Deere Break-In Plus™ Engine Oil. During the break-in period, add John Deere Break-In™ or Break-In Plus™ Engine Oil, respectively, as needed to maintain the specified oil level.

Operate the engine under various conditions, particularly heavy loads with minimal idling, to help seat engine components properly.

If John Deere Break-In™ Engine Oil is used during the initial operation of a new or rebuilt engine, change the oil and filter at a maximum of 100 hours.

If John Deere Break-In Plus™ Engine Oil is used, change the oil and filter at a minimum of 100 hours and a maximum equal to the interval specified for John Deere Plus-50™ II or Plus-50™ oil.

After engine overhaul, fill the engine with either John Deere Break-In™ or Break-In Plus™ Engine Oil.

If John Deere Break-In™ or Break-In Plus™ Engine Oil is not available, use an SAE 10W-30 viscosity grade diesel engine oil meeting one of the following and change the oil and filter at a maximum of 100 hours of operation:

- API Service Classification CE
- API Service Classification CD
- API Service Classification CC
- ACEA Oil Sequence E2

*Break-In is a trademark of Deere & Company.
Break-In Plus is a trademark of Deere & Company
Plus-50 is a trademark of Deere & Company.*

- ACEA Oil Sequence E1

IMPORTANT: Do not use Plus-50™ II, Plus-50™, or engine oils meeting any of the following for the initial break-in of a new or rebuilt engine:

API CK-4	ACEA E9
API CJ-4	ACEA E7
API CI-4 PLUS	ACEA E6
API CI-4	ACEA E5
API CH-4	ACEA E4
API CG-4	ACEA E3
API CF-4	
API CF-2	
API CF	

These oils do not allow the engine to break in properly.

John Deere Break-In Plus™ Engine Oil can be used for all John Deere diesel engines at all emission certification levels.

After the break-in period, use John Deere Plus-50™ II, John Deere Plus-50™, or other diesel engine oil as recommended in this manual.

DX,ENOil4 -19-02NOV16-1/1

Diesel Engine Oil — Non-Emissions Certified and Certified Tier 1 and Stage I

Failure to follow applicable oil standards and drain intervals can result in severe engine damage that might not be covered under warranty. Warranties, including the emissions warranty, are not conditioned on the use of John Deere oils, parts, or service.

Use oil viscosity based on the expected air temperature range during the period between oil changes.

John Deere Plus-50™ II oil is preferred.

John Deere Plus-50™ is also recommended.

John Deere Torq-Gard™ is also allowed.


Other oils may be used if they meet one or more of the following standards:

- API Service Category CK-4
- API Service Category CJ-4
- API Service Category CI-4 PLUS
- API Service Category CI-4
- API Service Category CH-4
- API Service Category CG-4
- API Service Category CF-4
- ACEA Oil Sequence E9
- ACEA Oil Sequence E7
- ACEA Oil Sequence E6
- ACEA Oil Sequence E5
- ACEA Oil Sequence E4
- ACEA Oil Sequence E3
- ACEA Oil Sequence E2

If oils meeting API CG-4, API CF-4, or ACEA E2 are used, reduce the service interval by 50%.

Multi-viscosity diesel engine oils are preferred.

Plus-50 is a trademark of Deere & Company
Torq-Gard is a trademark of Deere & Company

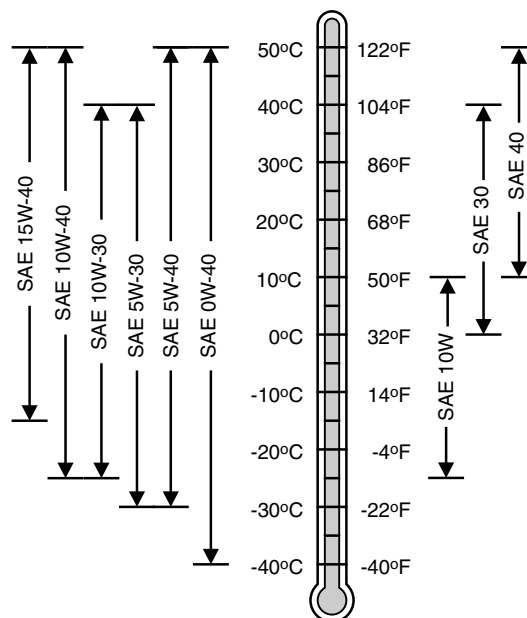

Oil Viscosities for Air Temperature Ranges

Diesel fuel quality and fuel sulfur content must comply with all existing emissions regulations for the area in which the engine operates.

If diesel fuel with sulfur content greater than 5000 mg/kg (5000 ppm) is used, reduce the service interval by 50%.

DO NOT use diesel fuel with sulfur content greater than 10 000 mg/kg (10 000 ppm).

TS1743 —UN—25APR19

DX,ENOIL -19-23APR19-1/1

Extended Diesel Engine Oil Service Intervals — Non-Emissions Certified and Certified Tier 1 and Stage I

When John Deere Plus-50™ II or John Deere Plus-50™ is used with the specified John Deere filter, the service interval for engine oil and filter changes may be increased by 50% but not to exceed a maximum of 500 hours.

Use oil analysis to evaluate the condition of the oil and to aid in selection of the proper oil and filter service interval. Contact your John Deere dealer or other qualified service provider for more information on engine oil analysis.

Change the oil and oil filter at least once every 12 months even if the hours of operation are fewer than the otherwise recommended service interval.

When ACEA E9, ACEA E7, ACEA E6, ACEA E5, or ACEA E4 oils are used with specified John Deere filter, use engine oil analysis to determine if the service interval for engine oil and filter changes may be increased by a maximum of 50%, but not to exceed 500 hours. Oil analysis means taking a series of oil samples at 50 hour increments beyond the normal service interval until either the data indicates the end of useful oil life or the maximum service interval is reached.

*Plus-50 is a trademark of Deere & Company
Torq-Gard is a trademark of Deere & Company*

If John Deere Plus-50™ II or John Deere Plus-50™, ACEA E9, ACEA E7, ACEA E6, ACEA E5, or ACEA E4 oils are used with other than the specified John Deere filter, change the engine oil and filter at the normal service interval.

If John Deere Torq-Gard™, API CK-4, API CJ-4, API CI-4 PLUS, API CI-4, API CH-4, or ACEA E3 oils are used, change the engine oil and filter at the normal service interval.

If API CG-4, API CF-4, or ACEA E2 oils are used, change the engine oil and filter at 50% of the normal service interval.

IMPORTANT: To avoid engine damage:

- Reduce oil and filter service intervals by 50% when using biodiesel blends greater than B20. Oil analysis may allow longer service intervals
- Use only approved oil types

DX,ENOIL6 -19-13JAN18-1/1

Mixing of Lubricants

In general, avoid mixing different brands or types of oil. Oil manufacturers blend additives in their oils to meet certain specifications and performance requirements.

Mixing different oils can interfere with the proper functioning of these additives and degrade lubricant performance.

Consult your John Deere dealer to obtain specific information and recommendations.

DX,LUBMIX -19-18MAR96-1/1

Alternative and Synthetic Lubricants

Conditions in certain geographical areas may require lubricant recommendations different from those printed in this manual.

Some John Deere brand coolants and lubricants may not be available in your location.

Consult your John Deere dealer to obtain information and recommendations.

Synthetic lubricants may be used if they meet the performance requirements as shown in this manual.

The temperature limits and service intervals shown in this manual apply to John Deere branded fluids or fluids that have been tested and/or approved for use in John Deere equipment.

Re-refined base stock products may be used if the finished lubricant meets the performance requirements.

DX,ALTER -19-13JAN18-1/1

Lubricant Storage

Your equipment can operate at top efficiency only when clean lubricants are used.

Use clean containers to handle all lubricants.

Store lubricants and containers in an area protected from dust, moisture, and other contamination. Store containers on their side to avoid water and dirt accumulation.

Make certain that all containers are properly marked to identify their contents.

Properly dispose of all old containers and any residual lubricant they may contain.

DX,LUBST -19-11APR11-1/1

Oil Filters

Filtration of oils is critical to proper operation and lubrication.

Always change filters regularly as specified in this manual.

Use filters meeting John Deere performance specifications.

DX,FILT -19-18MAR96-1/1

Diesel Engine Coolant (engine with wet sleeve cylinder liners)

Failure to follow applicable coolant standards and drain intervals can result in severe engine damage that may not be covered under warranty. Warranties, including the emissions warranty, are not conditioned on the use of John Deere coolants, parts, or service.

Preferred Coolants

The following pre-mix engine coolants are preferred:

- John Deere COOL-GARD™ II
- John Deere COOL-GARD II PG

COOL-GARD II pre-mix coolant is available in several concentrations with different freeze protection limits as shown in the following table.

COOL-GARD II Pre-Mix	Freeze Protection Limit
COOL-GARD II 20/80	-9°C (16°F)
COOL-GARD II 30/70	-16°C (3°F)
COOL-GARD II 50/50	-37°C (-34°F)
COOL-GARD II 55/45	-45°C (-49°F)
COOL-GARD II PG 60/40	-49°C (-56°F)
COOL-GARD II 60/40	-52°C (-62°F)

Not all COOL-GARD II pre-mix products are available in all countries.

Use COOL-GARD II PG when a non-toxic coolant formulation is required.

Additional Recommended Coolants

The following engine coolant is also recommended:

- John Deere COOL-GARD II Concentrate in a 40—60% mixture of concentrate with quality water.

IMPORTANT: When mixing coolant concentrate with water, do not use less than 40% or greater than 60% concentration of coolant. Less than 40% gives inadequate additives for corrosion protection. Greater than 60% can result in coolant gelation and cooling system problems.

Other Coolants

Other ethylene glycol or propylene glycol base coolants may be used if they meet the following specification:

COOL-GARD is a trademark of Deere & Company

¹Coolant analysis may extend the service interval of other "Coolants" to a maximum not to exceed the interval of Cool-Gard II coolants. Coolant analysis means taking a series of coolant samples at 1000 hour increments beyond the normal service interval until either the data indicate the end of useful coolant life or the maximum service interval of Cool-Gard II is reached.

- Pre-mix coolant meeting ASTM D6210 requirements
- Is formulated with a 2-ethylhexanoic acid (2-EHA) free additive package
- Coolant concentrate meeting ASTM D6210 requirements in a 40—60% mixture of concentrate with quality water

If coolant meeting one of these specifications is unavailable, use a coolant concentrate or pre-mix coolant that has a minimum of the following chemical and physical properties:

- Provides cylinder liner cavitation protection according to either the John Deere Cavitation Test Method or a fleet study run at or above 60% load capacity
- Is formulated with a nitrite-free additive package
- Is formulated with a 2-ethylhexanoic acid (2-EHA) free additive package
- Protects the cooling system metals (cast iron, aluminum alloys, and copper alloys such as brass) from corrosion

Water Quality

Water quality is important to the performance of the cooling system. Deionized or demineralized water is recommended for mixing with ethylene glycol and propylene glycol base engine coolant concentrate.

Coolant Drain Intervals

Drain and flush the cooling system and refill with fresh coolant at the indicated interval, which varies with the coolant used.

When COOL-GARD II or COOL-GARD II PG is used, the drain interval is 6 years or 6000 hours of operation.

If a coolant other than COOL-GARD II or COOL-GARD II PG is used, reduce the drain interval to 2 years or 2000 hours of operation.¹

IMPORTANT: Do not use cooling system sealing additives or antifreeze that contains sealing additives.

Do not mix ethylene glycol and propylene glycol base coolants.

Do not use coolants that contain nitrites.

DX,COOL3 -19-25AUG20-1/1

Water Quality for Mixing with Coolant Concentrate

Engine coolants are a combination of three chemical components: ethylene glycol (EG) or propylene glycol (PG) antifreeze, inhibiting coolant additives, and quality water.

Water quality is important to the performance of the cooling system. Deionized or demineralized water is recommended for mixing with ethylene glycol and propylene glycol base engine coolant concentrate.

All water used in the cooling system should meet the following minimum specifications for quality:

Chlorides	<40 mg/L
Sulfates	<100 mg/L
Total solids	<340 mg/L
Total dissolved hardness	<170 mg/L
pH	5.5—9.0

IMPORTANT: Do not use bottled drinking water because it often contains higher concentrations of total dissolved solids.

Freeze Protection

The relative concentrations of glycol and water in the engine coolant determine its freeze protection limit.

Ethylene Glycol	Freeze Protection Limit
40%	-24°C (-12°F)
50%	-37°C (-34°F)
60%	-52°C (-62°F)
Propylene Glycol	Freeze Protection Limit
40%	-21°C (-6°F)
50%	-33°C (-27°F)
60%	-49°C (-56°F)

DO NOT use a coolant-water mixture greater than 60% ethylene glycol or 60% propylene glycol.

DX,COOL19 -19-13JAN18-1/1

Operating in Warm Temperature Climates

John Deere engines are designed to operate using recommended engine coolants.

Always use a recommended engine coolant, even when operating in geographical areas where freeze protection is not required.

IMPORTANT: Water may be used as coolant in emergency situations only.

Foaming, hot surface aluminum and iron corrosion, scaling, and cavitation occur when water is used as the coolant, even when coolant conditioners are added.

Drain cooling system and refill with recommended engine coolant as soon as possible.

DX,COOL6 -19-17FEB20-1/1

Testing Coolant Freeze Point

The use of a handheld coolant refractometer is the quickest, easiest, and most accurate method to determine coolant freeze point. This method is more accurate than a test strip or a float-type hydrometer which can produce poor results.

A coolant refractometer is available through your John Deere dealer under the SERVICEGARD™ tool program. Part number 75240 provides an economical solution to accurate freeze point determination in the field.

To use this tool:

1. Allow cooling system to cool to ambient temperatures.
2. Open radiator cap to expose coolant.
3. With the included dropper, collect a small coolant sample.
4. Open the lid of the refractometer, place one drop of coolant on the window and close the lid.
5. Look through the eyepiece and focus as necessary.
6. Record the listed freeze point for the type of coolant (ethylene glycol coolant or propylene glycol) being tested.



SERVICEGARD™ Part Number 75240

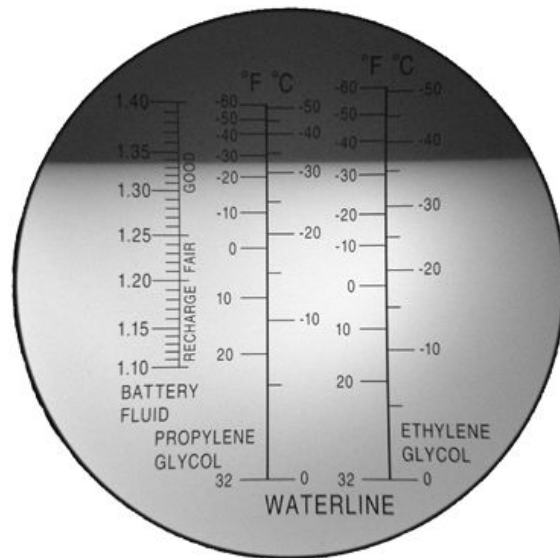


Image with a Drop of 50/50 Coolant Placed on the Refractometer Window

SERVICEGARD is a trademark of Deere & Company

DX,COOL,TEST -19-13JUN13-1/1


Disposing of Coolant

Improperly disposing of engine coolant can threaten the environment and ecology.

Use leakproof containers when draining fluids. Do not use food or beverage containers that may mislead someone into drinking from them.

Do not pour waste onto the ground, down a drain, or into any water source.

Inquire on the proper way to recycle or dispose of waste from your local environmental or recycling center, or from your John Deere engine distributor or servicing dealer.

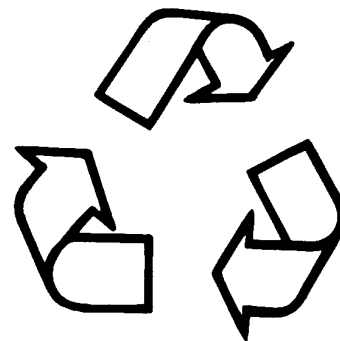


Recycle Waste

RG,RG34710,7543 -19-26APR18-1/1

Engine Operating Guidelines

PV101 Instrument Panels

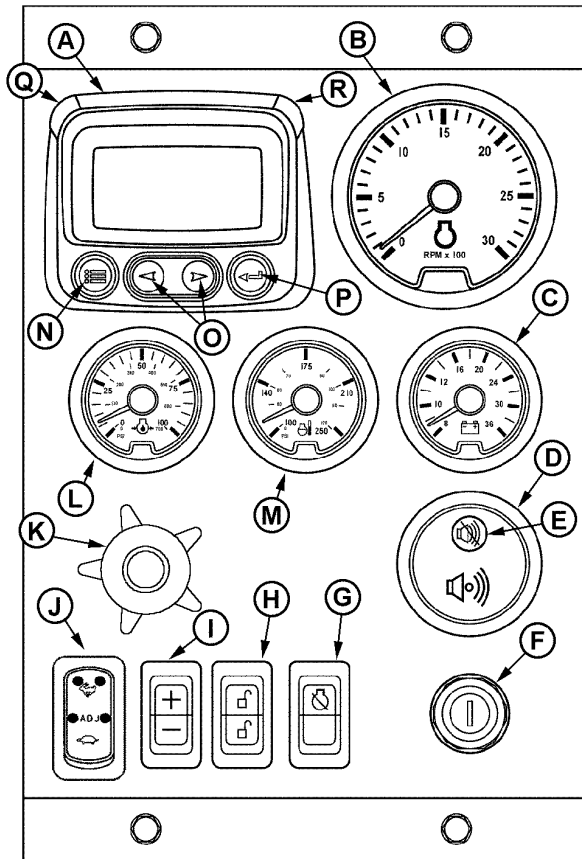

RG13276—UN—28OCT03

Full-Featured Instrument Panel

- | | | | |
|---------------------------------|---------------------------------------|--------------------------------------|-------------------------------------|
| A—Diagnostic Gauge/Hour Meter | F—Key Switch | K—Analog Throttle Control (Optional) | Q—Amber “WARNING” Indicator Light |
| B—Tachometer | G—Override Shutdown Rocker Switch | L—Oil Pressure Gauge | R—Red “STOP ENGINE” Indicator Light |
| C—Voltmeter (Optional) | H—Bump Enable Rocker Switch | M—Coolant Temperature Gauge | |
| D—Audible Alarm (Optional) | I—Speed Select Rocker Switch | N—Menu Key | |
| E—Audible Alarm Override Button | J—High-Low Speed Select Rocker Switch | O—Arrow Keys | |
| | | P—Enter Key | |

Interim tier 4 / Stage III B John Deere PowerTech™ OEM Engines have an electronic control system, which has the following controls and gauges as shown. The following information applies only to those controls and gauges supplied by John Deere. Refer to your engine application manual for specific guidelines if John Deere-sourced controls and instrumentation are not used.

NOTE: This manual only covers operation of engine with a John Deere control system.

Following is a brief description of the available optional electronic controls and gauges found on John Deere provided instrument panels. Refer to manufacturer’s literature for information on controls not provided by Deere.

Instrument Panels (Continued)

A—Diagnostic Gauge/Hour Meter

The diagnostic gauge (A) displays diagnostic trouble codes (DTCs) as they are accessed. Other information on the engine can be accessed using the touch keys (N, O and P). The hour meter feature shows the operating hours of the engine and should be used as a guide for scheduling periodic maintenance. If the diagnostic gauge receives a trouble code from an engine control unit, the current display will switch to a warning or shutdown (depending on the severity of the code) screen that will display the trouble code number, the description of the code and the corrective action needed.

B—Tachometer

The tachometer (B) indicates engine speed in hundreds of revolutions per minute (rpm).

C—Voltmeter (Optional)

Continued on next page

JR74534,00002C7 -19-05APR16-1/3

The voltmeter (C) indicates system battery voltage. The amber "Warning" light (Q) will illuminate when battery voltage is too low for proper operation of the fuel injection system.

D—Audible Alarm (Optional)

The audible alarm (D) will sound whenever low oil pressure, high coolant temperature, or water-in-fuel conditions exist. This includes all signals that light up the amber "warning" indicator (intermittent alarm) or the red "stop engine" indicator (steady alarm).

E—Audible Alarm Override Button

The optional audible alarm has an override button (E) that silences the audible alarm for approximately two minutes when pressed.

F—Key Start Switch

The three-position key start switch (F) controls the engine electrical system. When the key switch is turned clockwise to "START", the engine will crank. When the engine starts, the key is released and returns to the "ON" (RUN) position.

G—Override Shutdown Rocker Switch

Switch will be present, but may not be active, depending on engine control unit (ECU) options originally selected. If switch is active, pressing the upper half of the override shutdown switch (G) will override an engine shutdown signal. The switch must be pressed within 30 seconds to prevent undesired shutdown of engine. Pressing this switch will override the engine shutdown for 30 seconds at a time to move vehicle to a safe location.

H—Bump Speed Enable Rocker Switch

This is a three-position switch (H) with the center position as "OFF" (locked). With this switch in the "OFF" position, the speed select switch (I) is also locked, to prevent accidental changes in operating speed. Pressing upper or lower half of switch (H) will unlock or enable the bump speed switch to take effect using speed select switch (I).

I—Speed Select Rocker Switch

The speed select switch (I) is used to bump engine speed up (+) or down (-) in small increments during operation. This switch must be used with the bump speed enable switch (H) in the unlocked position (top or bottom half of button depressed).

J—High-Low Speed Select Rocker Switch

The high-low speed select switch (J) is used to set the engine operating speeds at slow (turtle) or fast (rabbit). Factory preset idle speeds can also be adjusted using bump speed enable switch (H) with speed select switch (I).

The basic instrument panel will have the high-low speed select switch only. Press and hold up (+) or down (-) to adjust engine speed as desired. The engine speed selected will not be held in the memory. To adjust engine speeds, See Changing Engine Speeds in Section 20.

How To Select Preset Operating Speeds (Bump Speeds)

First select Turtle (Slow) or Adj by pressing speed select switch (J) to "Turtle" (slow) or "Adj" (center). Then you can press either the upper or lower portion of the bump speed enable switch (H) to unlock the setting. The bump speed enable must be held down as the speed select switch (J) is used to change the setting by pressing (+) to increase speed or (-) to decrease speed.

Once the slow idle speed has been set, the bump speed enable **switch must be pressed and released three times within two seconds to commit the new operating speed to memory.** If not done, the engine's new speed will only be effective until the key switch is shut off. Then the speed will revert back to the previous setting.

The fast idle speed is not adjustable. It will always go back to the factory preset fast idle speed.

K—Analog Throttle Control (Optional)

The throttle control (K) is used to control engine speed. This control is available only on engines with analog throttle.

L—Engine Oil Pressure Gauge

The oil pressure gauge (L) indicates engine oil pressure. An audible alarm (D) warns the operator if engine oil pressure falls below a safe operating pressure.

M—Engine Coolant Temperature Gauge

The engine coolant temperature gauge (M) indicates engine coolant temperature. An audible alarm (D) warns the operator if coolant temperature rises above the preset safe operating temperature.

N—Menu Key

The menu key is pressed to either enter or exit the menu screens on the diagnostic gauge.

O—Arrow Keys

Use the arrow keys (O) to change the display on the window of the diagnostic gauge and to access engine performance data.

Pressing the left arrow to scroll to the left or upward or the right arrow to scroll to the right or downward. This will allow you to view various engine parameters and any diagnostic trouble codes that occur.

Refer to the following story for accessing engine information on the diagnostic gauge using the touch keys.

P—Enter Key

The enter key is pressed to select the parameter that is highlighted on the screen.

Q—Amber "WARNING" Indicator Light

When light comes on, an abnormal condition exists. It is not necessary to shut down the engine immediately, but the problem should be corrected as soon as possible.

When light comes on, stop engine immediately or as soon as safely possible to prevent engine damage. Correct problem before restarting.

R—Red “STOP ENGINE” Indicator Light

PowerTech is a trademark of Deere & Company

JR74534,00002C7 -19-05APR16-3/3

PV101 Diagnostic Gauge — Using

The diagnostic gauge (A) allows the operator to monitor engine functions, view diagnostic trouble codes (DTC's), and perform preliminary diagnostics. The gauge is linked to the electronic control system and sensors.


The menu key (B) allows the operator to access the main menu of the diagnostic gauge. For more information see [PV101 Diagnostic Gauge — Main Menu](#). This key also allows the operator to cancel an option and go back to the previous menu or home menu.

The arrow keys (C) allows the operator to scroll between menu items. The arrow keys automatically change from up and down, to left and right depending on the menu item to be selected.

The select key (D) allows the operator to access menu items selected by the arrow keys (C) and confirm changes made by the operator.

The red “STOP ENGINE” indicator light (E) allows the operator to visually see when a condition exists which requires immediate operator action and service.

The amber “WARNING” indicator light (F) allows the operator to visually see when a condition exists which requires operator action.

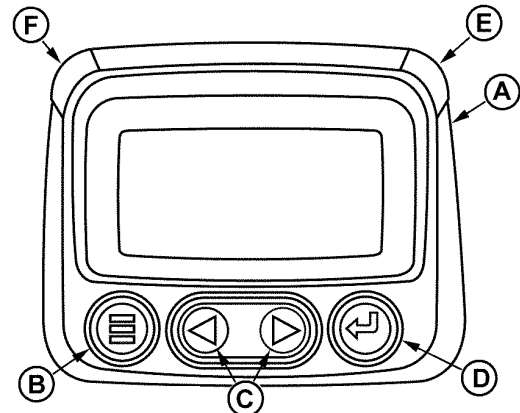

A—Diagnostic Gauge
B—Menu Key
C—Arrow Keys

D—Select Key
E—Red “STOP ENGINE”
Indicator Light
F—Amber “WARNING”
Indicator Light

RG13132—JUN—09SEP03

BL90236,000002A -19-23MAR16-1/1

PV101 Diagnostic Gauge — Main Menu

NOTE: The engine does not need to be running to navigate the diagnostic gauge screens.

The main menu is the starting point in accessing engine information and configuring the diagnostic gauge. Press the menu key (B) to access the main menu.

Use the arrow keys (C) and select key (D) to view menu items displayed:


- Go to 4-up display
- Exhaust filter
- Engine speed control
- Languages
- Stored codes
- Engine configuration
- Setup 1-up display
- Setup 4-up display
- Select units
- Adjust backlight
- Adjust contrast
- Utilities

Listed are examples of features available in main menu items.

In Utilities:

- Gauge data
- Remove all gauges
- Software version
- Modbus setup
- Fault conversion

- Select engine ECU
- Clear machine hours
- Performance data
- Interactive tests
- Reset trip
- Set function instance
- ECU software update

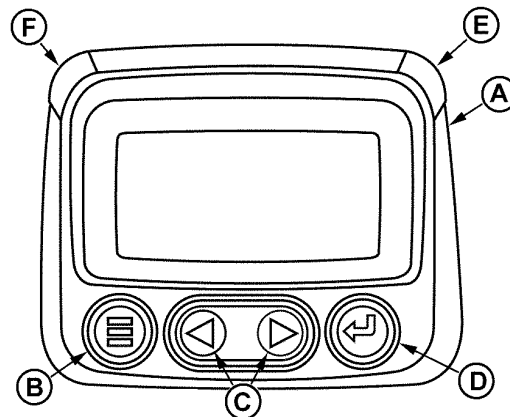

A—Diagnostic Gauge
B—Menu Key
C—Arrow Keys

D—Select Key
E—Red “STOP ENGINE”
Indicator Light
F—Amber “WARNING”
Indicator Light

RG13132 —UN—09SEP03

JR74534,00002C8 -19-02JUN16-1/1

PV101 Diagnostic Gauge — Essential Menus

Automatic Exhaust Filter Cleaning

To enable auto exhaust filter cleaning mode:

1. Press menu key on diagnostic gauge
2. Press arrow keys to scroll up or down to EXHAUST FILTER
3. Press select key
4. Press arrow keys to scroll up or down to AUTO EXH FLT CLEAN
5. Press select key to enable auto exhaust filter cleaning

Manual/Parked Exhaust Filter Cleaning

To request a manual/parked exhaust filter cleaning:

1. Reduce engine speed to slow idle
2. Press menu key
3. Press arrow keys to scroll up or down to EXHAUST FILTER
4. Press select key
5. Press arrow keys to scroll up or down to REQUEST EXH FLT CLEAN
6. Press select key to request a manual/parked exhaust filter cleaning
7. Follow directions on display and ensure all conditions are met
8. Press select key to CONFIRM all conditions are met

Disable Exhaust Filter Cleaning

To disable the auto exhaust filter cleaning mode:

1. Press menu key on diagnostic gauge
2. Press arrow keys to scroll up or down to EXHAUST FILTER
3. Press select key
4. Press arrow keys to scroll up or down to DISABLE EXH FLT CLEAN
5. Press select key to disable exhaust filter cleaning

Fault Codes — Active

To view active fault code information:

1. Press menu key on diagnostic gauge
2. Press arrow keys to scroll up or down to FAULTS
3. Press select key
4. Press arrow keys to scroll up or down to ACTIVE FAULTS
5. Press select key
6. Press arrow keys to scroll through available faults

Fault Codes — Stored

To view stored fault code information:

1. Press menu key on diagnostic gauge
2. Press arrow keys to scroll up or down to FAULTS
3. Press select key
4. Press arrow keys to scroll up or down to STORED FAULTS
5. Press select key
6. Press arrow keys to scroll up or down to VIEW
7. Press select key
8. Press arrow keys to scroll through available faults

BL90236,0000025 -19-02JUN16-1/1

DG14 Diagnostic Gauge — Using


The diagnostic gauge (A) allows the operator to monitor engine functions, view diagnostic trouble codes (DTC's), and perform preliminary diagnostics. The gauge is linked to the electronic control system and sensors.

The (home) menu key (B) allows the operator to access the main menu of the diagnostic gauge. For more information see [DG14 Diagnostic Gauge — Main Menu](#). This key also allows the operator to cancel an option and go back to the previous menu or home menu.

The arrow keys (C) allows the operator to scroll between menu items. The arrow keys automatically change from up and down, to left and right depending on the menu item to be selected.

The (check mark) select key (D) allows the operator to access menu items selected by the arrow keys (C) and confirm changes made by the operator.

The indicator lights (E) allows the operator to visually see the presence of an active trouble code.

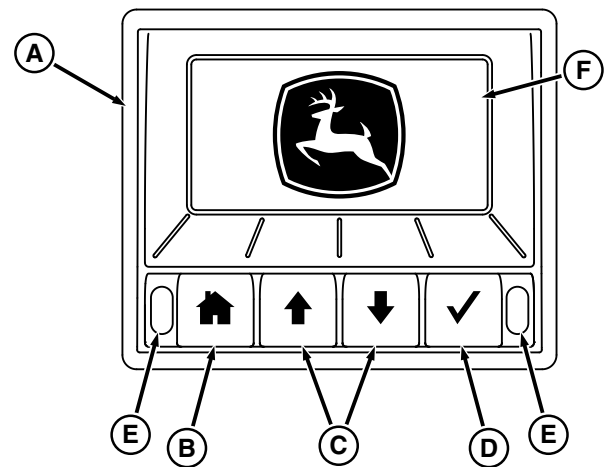

Diagnostic Gauge

A—Diagnostic Gauge
B—(Home) Menu Key
C—Arrow Keys

D—(Check Mark) Select Key
E—Indicator Light
F—Display

RG27904—UN—25FEB16

BL90236,0000028 -19-02JUN16-1/1

DG14 Diagnostic Gauge — Main Menu

NOTE: The engine does not need to be running to navigate the diagnostic gauge screens.

The main menu is the starting point in accessing engine information and configuring the diagnostic gauge. Press the menu key (B) to access the main menu.

Use the arrow keys (C) and select key (D) to view menu items displayed:

- Function
- Display
- Utility
- Setup

Listed are examples of features available in main menu items.

In Function:

- View fault code
- Reset trip (FT4 Only)
- Exhaust regeneration (IT4 & FT4 Only)
- ECU software updates

In Display:


- Adjust backlight
- Adjust indicator brightness
- Display option setup

In Utility:

- Full parameter list
- Software data
- Select units
- Select language

In Setup:

- Select analog input
- Select digital input
- Select digital output

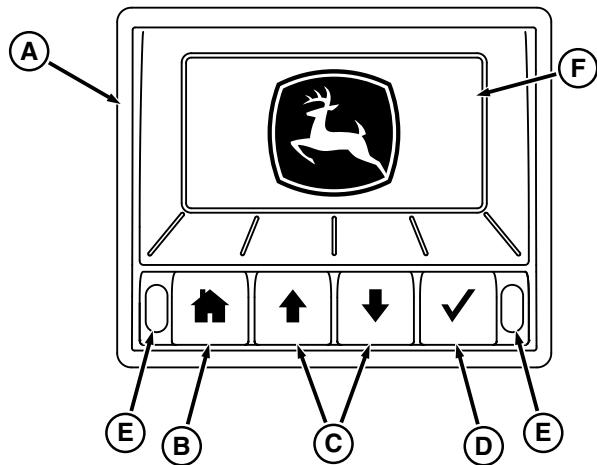

Diagnostic Gauge

A—Diagnostic Gauge
B—(Home) Menu Key
C—Arrow Keys

D—(Check Mark) Select Key
E—Indicator Light
F—Display

- Alarm functionality
- Add J1939 gage
- Set RS485 messaging
- Set engine source address
- Set function instance
- Harness diagnostics
- TSC control (password protected)

Key Code for Password Protected Screens

Numeric values are assigned to keys on diagnostic gauge as identified below:

- 1 — (Home) Menu Key
- 2 — (Up) Arrow Key
- 3 — (Down) Arrow Key
- 4 — (Check Mark) Select Key

RG27904 —UN—25FEB16

BL90236,0000029 -19-07SEP18-1/1

DG14 Diagnostic Gauge — Essential Menus

Automatic Exhaust Filter Cleaning

To enable auto exhaust filter cleaning mode:

1. Press (home) menu key on diagnostic gauge
2. Press arrow keys to scroll up or down to FUNCTION
3. Press (check mark) select key
4. Press arrow keys to scroll up or down to EXHAUST REGENERATION
5. Press (check mark) select key
6. Press arrow keys to scroll up or down to AUTOMATIC
7. Press (check Mark) select key to enable auto exhaust filter cleaning

Manual/Parked Exhaust Filter Cleaning

To request a manual/parked exhaust filter cleaning:

1. Reduce engine speed to slow idle
2. Press (home) menu key on diagnostic gauge
3. Press arrow keys to scroll up or down to FUNCTION
4. Press (check mark) select key
5. Press arrow keys to scroll up or down to EXHAUST REGENERATION
6. Press (check mark) select key
7. Press arrow keys to scroll up or down to FORCED
8. Press (check mark) select key to request a manual/parked exhaust filter cleaning
9. Follow directions on display and ensure all conditions are met
10. Press (check mark) select key to CONFIRM all conditions are met

Disable Exhaust Filter Cleaning

To disable the auto exhaust filter cleaning mode:

1. Press (home) menu key on diagnostic gauge

2. Press arrow keys to scroll up or down to FUNCTION
3. Press (check mark) select key
4. Press arrow keys to scroll up or down to EXHAUST REGENERATION
5. Press (check mark) select key
6. Press arrow keys to scroll up or down to INHIBIT
7. Press (check mark) select key to disable exhaust filter cleaning
8. Press (check mark) select key to continue after the warning has been acknowledged

Fault Codes — Active

To view active fault code information:

1. Press (home) menu key on diagnostic gauge
2. Press arrow keys to scroll up or down to FUNCTION
3. Press (check mark) select key
4. Press Arrow keys to scroll up or down to VIEW FAULT CODES
5. Press (check mark) select key
6. Press arrow keys to scroll up or down to ACTIVATE
7. Press (check mark) select key
8. Press Arrow keys to scroll through available faults

Fault Codes — Stored

To view stored fault code information:

1. Press (home) menu key on diagnostic gauge
2. Press arrow keys to scroll up or down to FUNCTION
3. Press (check mark) select key
4. Press Arrow keys to scroll up or down to VIEW FAULT CODES
5. Press (check mark) select key
6. Press arrow keys to scroll up or down to STORED
7. Press (check mark) select key
8. Press Arrow keys to scroll through available faults

BL90236,0000026 -19-07SEP18-1/1

PV480 Instrument Panel

John Deere PowerTech™ OEM engines have an electronic control system, which has controls and gauges as shown. The following information applies only to those controls and gauges supplied by John Deere. Refer to your engine application manual for specific guidelines if John Deere-sourced controls and instrumentation are not used.

The following is a brief description of the available optional electronic controls and gauges found on John Deere provided instrument panels. Refer to manufacturer's literature for information on controls not provided by John Deere.

Instrument Panel

A — Diagnostic Gauge

The diagnostic gauge (A) allows the operator to view fuel level, DEF level, engine parameters, diagnostic trouble codes (DTCs), and other engine functions. The gauge is linked to the electronic control system and its sensors. This allows the operator to monitor engine functions and to troubleshoot the engine systems when needed.

B — Arrow Keys

The arrow keys (B) allows the operator to select menu items

C — Menu Key

The menu key (C) allow the operator to access the main menu of the diagnostic gauge.

D — Select Key


The select key (D) allows the operator to access menu items selected by the arrow keys (B) and confirm changes made by the operator.

E — Exit Key

The exit key (E) allows the operator to cancel an option and to go back to the previous menu.

F — Key Start Switch

PowerTech is a trademark of Deere & Company

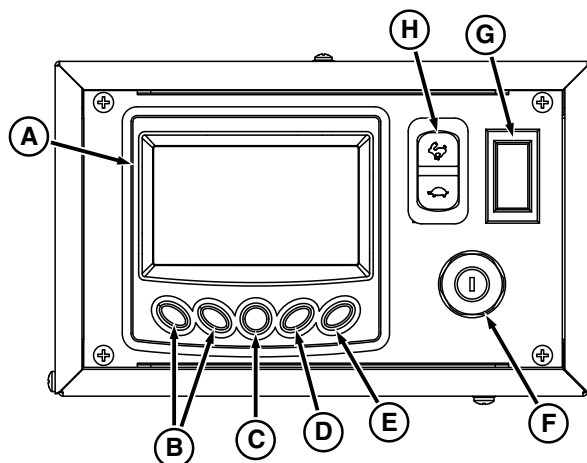

Instrument Panel

A—Diagnostic Gauge
B—Arrow Keys
C—Menu Key
D—Select Key

E—Exit Key
F—Key Switch
G—Cover
H—Speed Select Rocker Switch

The three-position key start switch (F) controls the engine electrical system. When the key switch is turned clockwise to “START”, the engine will crank. When the engine starts, the key is released and returns to the “ON” (RUN) position.

G — Cover

The cover (G) hides an expansion slot for an additional switch.

H — Speed Select Rocker Switch

The speed select switch (H) is used to bump engine speed up (+) or down (-) in small increments during operation.

RG23644 —UN—27AUG13

BL90236,0000003 -19-25APR16-1/1

PV480 Diagnostic Gauge — Using


The diagnostic gauge (A) allows the operator to monitor engine functions, view diagnostic trouble codes (DTC's), and perform preliminary diagnostics. The gauge is linked to the electronic control system and sensors.

The arrow keys (B) allows the operator to scroll between menu items. The arrow keys automatically change from up and down, to left and right depending on the menu item to be selected.

The menu key (C) allows the operator to access the main menu of the diagnostic gauge. For more information see [PV480 Diagnostic Gauge — Main Menu](#).

The select key (D) allows the operator to access menu items selected by the arrow keys (B) and confirm changes made by the operator.

The exit key (E) allows the operator to cancel an option and to go back to the previous menu.

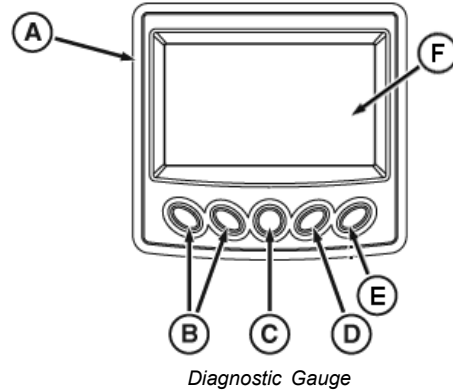

A—Diagnostic Gauge
B—Arrow Keys
C—Menu Key

D—Select Key
E—Exit Key
F—Display

RG23474 —UN—06JUN13

BL90236,0000006 -19-27MAY16-1/1

PV480 Diagnostic Gauge — Main Menu

NOTE: The engine does not need to be running to navigate the diagnostic gauge screens.

The main menu is the starting point in accessing engine information and configuring the diagnostic gauge. Press the menu key (C) to access the main menu.

Use the arrow keys (B) and select key (D) to view menu items displayed:

- User Settings
- Faults
- Exhaust Filter
- Start Options
- Service
- Utilities

Listed are examples of features available in main menu items.

In User Settings:

- Date
- Time
- Language
- Units
- Brightness
- Ambient Light

In Check Faults:

- Active fault codes
- Stored fault codes

In Exhaust Filter:

- Status
- Auto exhaust filter clean
- Disable exhaust filter clean
- Request exhaust filter clean

In Start Options:


- Auto features
- Manual features
- Clock start
- Temperature start

In Service:

- Data list screens
- Engine hours
- Data logger
- Service reminders
- Harness diagnostics
- Component identification

In Utilities:

- System settings
- Pressure governing
- ECU software update
- Advanced settings (password protected)

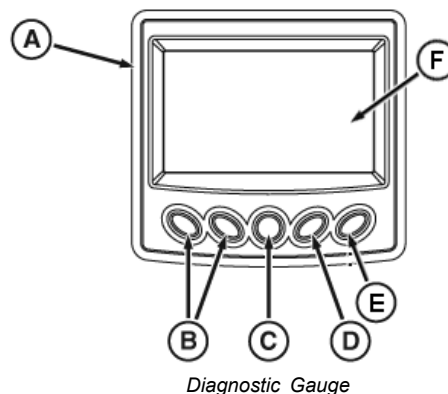

A—Diagnostic Gauge
B—Arrow Keys
C—Menu Key

D—Select Key
E—Exit Key
F—Display

RG23474 —UN—06JUN13

BL90236,0000001 -19-07SEP18-1/1

PV480 Diagnostic Gauge — Essential Menus

Automatic Exhaust Filter Cleaning

To enable auto exhaust filter cleaning mode:

1. Press Menu key on diagnostic gauge
2. Press Arrow keys to scroll up or down to EXHAUST FILTER
3. Press Select key
4. Press Arrow keys to scroll up or down to AUTO EXH FLT CLEAN
5. Press Select key to enable auto exhaust filter cleaning

Manual/Parked Exhaust Filter Cleaning

To request a manual/parked exhaust filter cleaning:

1. Reduce engine speed to slow idle
2. Press Menu key
3. Press Arrow keys to scroll up or down to EXHAUST FILTER
4. Press Select key
5. Press Arrow keys to scroll up or down to REQUEST EXH FLT CLEAN
6. Press Select key to request a manual/parked exhaust filter cleaning
7. Follow directions on display and ensure all conditions are met
8. Press Select key to CONFIRM all conditions are met

Disable Exhaust Filter Cleaning

To disable the auto exhaust filter cleaning mode:

1. Press Menu key on diagnostic gauge
2. Press Arrow keys to scroll up or down to EXHAUST FILTER
3. Press Select key
4. Press Arrow keys to scroll up or down to DISABLE EXH FLT CLEAN
5. Press Select key to disable exhaust filter cleaning

Fault Codes — Active

To view active fault code information:

1. Press Menu key on diagnostic gauge
2. Press Arrow keys to scroll up or down to FAULTS
3. Press Select key
4. Press Arrow keys to scroll up or down to ACTIVE FAULTS
5. Press Select key
6. Press Arrow keys to scroll through available faults

Fault Codes — Stored

To view stored fault code information:

1. Press Menu key on diagnostic gauge
2. Press Arrow keys to scroll up or down to FAULTS
3. Press Select key
4. Press Arrow keys to scroll up or down to STORED FAULTS
5. Press Select key
6. Press Arrow keys to scroll up or down to VIEW
7. Press Select key
8. Press Arrow keys to scroll through available faults

BL90236,0000024 -19-07SEP18-1/1

Normal Engine Operation

Before starting, fill engine with oil and coolant meeting specifications. (See DIESEL ENGINE OIL and DIESEL ENGINE COOLANT SPECIFICATIONS in Fuels, Lubricants, and Coolant section.)

- Observe engine coolant temperature and engine oil pressure. Temperatures and pressures will vary between engines and with changing operating conditions, temperatures, and loads. Refer to GENERAL OEM ENGINE SPECIFICATIONS in the Specifications section.
- If coolant temperature rises above Maximum Coolant Temperature (see Specifications section), reduce load on engine. Unless temperature drops quickly, stop engine and determine cause before resuming operation.

- Operate the engine under a lighter load and at slower than normal speed for first 15 minutes after start-up. DO NOT run engine at slow idle.
- Stop engine immediately if there are any signs of part failure. Symptoms that may be early signs of engine problems are:
 - Sudden drop in oil pressure
 - Abnormal coolant temperatures
 - Unusual noise or vibration
 - Sudden loss of power
 - Excessive black exhaust
 - Excessive fuel consumption
 - Excessive oil consumption
 - Fluid leaks

OUOD006,00000C5 -19-04OCT07-1/1

Break-In Service

IMPORTANT: This engine is normally factory-filled with John Deere PLUS-50™ 10W-30 oil, but can be shipped without oil to comply with certain legislations. In this case, fill engine with John Deere PLUS-50™ 10W-30 oil.

NOTE: The use of BREAK-IN oils is not required for this engine. Perform the following steps to break-in your engine properly during the first 100 hours. Factory-fill oil and filter are suitable for extended 500-hour drain interval, provided diesel fuel sulfur content is less than 0.10% (1000 ppm).

Before starting, fill engine with seasonal viscosity grade oil and with coolant meeting specifications. (See DIESEL ENGINE OIL and DIESEL ENGINE COOLANT SPECIFICATIONS in Fuels, Lubricants, and Coolant Section.)

1. During the first 20 hours, avoid prolonged periods of engine idling or sustained maximum load operation. Warm-up engine carefully and operate at normal loads. If engine will idle longer than 5 minutes, stop engine.
2. Check oil level daily or every 10 hours during engine break-in period. If oil must be added during this period, use John Deere PLUS-50™ 10W-30 oil. (See DIESEL ENGINE OIL in Fuels, Lubricants, and Coolant section.)
3. Watch oil pressure (A) and coolant temperature (B) closely during break-in period. Also check coolant level daily or every 10 hours and check for leaks.


A—Oil Pressure

B—Coolant Temperature

PLUS-50 is a trademark of Deere & Company.



Check Engine Oil Level Daily

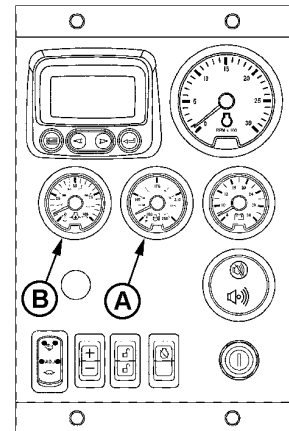

Oil Pressure and Coolant Temperature Gauges

RG12692 —UN—07FEB03

RG13720 —UN—11NOV04

Continued on next page


OUOD006,00000C6 -19-10AUG07-1/2

4. Check poly-vee belt (C) for proper alignment and seating in pulley grooves.
5. Change oil and oil filter (D) after first 500 hours/12 months. (See CHANGE ENGINE OIL AND FILTER in Lubrication and Maintenance/500 Hour Section.) Fill crankcase with seasonal viscosity grade oil. (See DIESEL ENGINE OIL, in Fuels, Lubricants, and Coolant Section.)


IMPORTANT: DO NOT operate engine when oil level is below ADD mark on dipstick. Check oil level before starting engine for the first time.

C—Poly-Vee Belt

D—Oil Filter

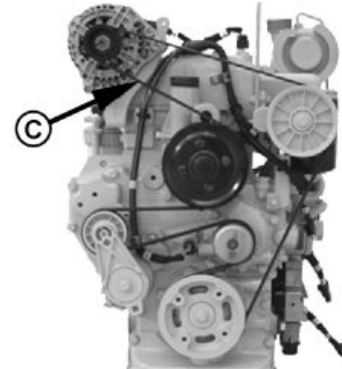

Poly-Vee Belt

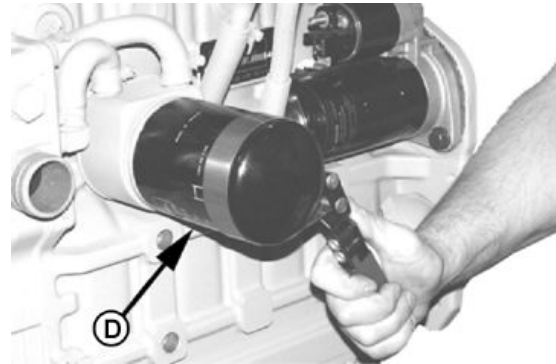

Engine Oil Filter

OUOD006,00000C6 -19-10AUG07-2/2

RG15340 —UN—04OCT07

RG15341 —UN—04OCT07

Auxiliary Gear Drive Limitations

IMPORTANT: When attaching an air compressor, hydraulic pump, or other accessory to be driven by the auxiliary gear drive (A) (engine timing gear train at front of engine), power

requirements of the accessory must be limited to values listed below:

- 21kW (28 hp) Continuous Operation at 2800 rpm
- 26kW (35 hp) Intermittent Operation at 2800 rpm

OUOD006,00000F6 -19-04OCT07-1/1

Starting The Engine

The following instructions apply to the optional controls and instruments available on John Deere Industrial and Generator Power Units only. The controls and instruments for your engine may be different from those shown here. Always follow manufacturer's instructions and familiarize yourself with the correct starting procedure.

CAUTION: Before starting engine in a confined building, install proper outlet exhaust ventilation equipment. Always use safety approved fuel storage and piping.

NOTE: If temperature is below 0° C (32° F), it may be necessary to use cold weather starting aids. (See COLD WEATHER OPERATION, later in this section).


1. Perform all prestarting checks outlined in Lubrication & Maintenance/Daily Section later in this manual.
2. Disengage engine rear driveline (if equipped) or gen set drive.
3. Open the fuel supply shut-off valve, if equipped.
4. Place the speed control lever in the "START" position, if equipped.

IMPORTANT: Do not operate the starter for more than 30 seconds at a time. To do so may overheat the starter. If the engine does not start the first time, wait at least 2 minutes before trying again. If engine does not start after four attempts, see Troubleshooting Section.

5. Press reset button (A) while turning key switch (B) to "START" position and hold until engine starts. Release key and button once engine starts; key automatically returns to "ON" position and instrument panel gauges start operating.
6. Warm-up engine for at least 5 minutes before applying a load. (See WARMING-UP ENGINE, later in this section.)



Use Proper Ventilation

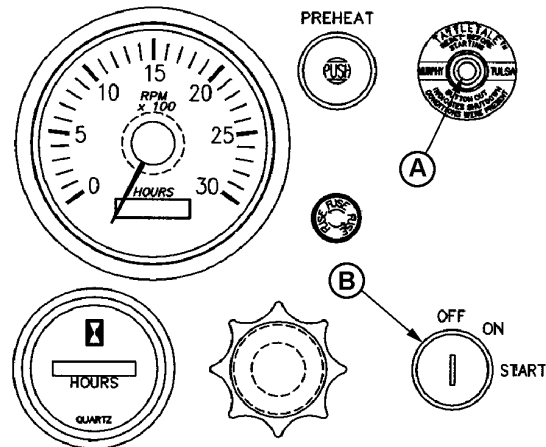

Starting Engine Using Reset Button and Key Switch

A—Reset Button

B—Key Switch

7. Check all gauges for normal operation. If operation is not normal, stop engine immediately and determine cause.

TS220 —UN—15APR13

RG13366 —UN—12FEB04

OURGP12.0000101 -19-04JAN07-1/1

Cold Weather Starting

When outside temperatures fall below 0°C (32° F) it may be necessary to consider using cold weather starting aids. Engines are equipped with standard glow plugs, and may also be fitted with a block heater. An increased capacity battery and/or lower viscosity oil may also need to be used.

IMPORTANT: In weather applications:

- Above 0° C and for continued high load applications 15W-40 oil is recommended
- Below 0° C 10W-30 oil is **STRONGLY** recommended
- Below -10° C 10W-30 oil is **REQUIRED**

For further information, see DIESEL ENGINE OIL in Fuels, Lubricants, and Coolant section.

CAUTION: NEVER USE ANY STARTING FLUID as a starting aid with these glow plug-equipped engines as it could cause an explosion and possible personal injury.

1. Follow steps 1—4 as listed under STARTING THE ENGINE earlier in this section, then proceed as

follows according to the instrument (gauge) panel on your engine.

IMPORTANT: Do not operate the starter for more than 30 seconds at a time. To do so may overheat the starter. If the engine does not start the first time, wait at least 2 minutes before trying again. If engine does not start after four attempts, see Troubleshooting Section.

NOTE: Glow plugs operate automatically through the ECU. The light, located above the diagnostic gauge, should illuminate when the glow plugs are activated. In warm weather, the light illuminates briefly as a light check. In cold weather, the light remains on during the automatic operation of the glow plugs. Operating time depends on temperature. Do not crank the engine until light turns off.

2. Follow remaining 5—6 as listed earlier in this section.

Additional information on cold weather operation is available from your authorized servicing dealer.

OUOD006,00000C7 -19-05MAR08-1/1

Warming Engine


IMPORTANT: To assure proper lubrication, operate engine at or below 1200 rpm with no load for 1–2 minutes. Extend this period 2–4 minutes when operating at temperatures below freezing.

1. Refer to GENERAL OEM ENGINE SPECIFICATIONS in the Specifications section for oil pressure and coolant temperature specifications.
2. Check oil pressure gauge (A) as soon as engine starts. If gauge needle does not rise above the minimum oil pressure specification within 5 seconds, stop the engine and determine the cause. Normal engine oil pressure (see Specifications section) can vary within pressure ranges provided.

NOTE: On certain engines, the oil pressure and coolant temperature gauges are replaced by indicator warning lights. The lights must be "OFF" when engine is running.

3. Watch coolant temperature gauge (B). Do not place engine under full load until it is properly warmed up. See Specifications section for normal engine coolant temperature range.

NOTE: It is a good practice to operate the engine under a lighter load and at lower speeds than normal for the first few minutes after start-up.

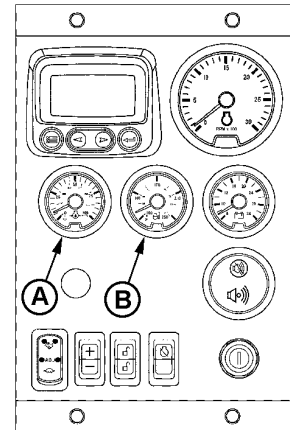

Oil Pressure and Coolant Temperature Gauges

A—Oil Pressure

B—Coolant Temperature

RG13724 —UN—11NOV04

OUOD006,00000C8 -19-09OCT07-1/1

Avoid Excessive Engine Idling

Avoid excessive engine idling. Prolonged idling may cause the engine coolant temperature to fall below its normal range. This, in turn, causes crankcase oil dilution, due to incomplete fuel combustion, and permits formation of gummy deposits on valves, pistons, and piston rings. It also promotes rapid accumulation of engine sludge and unburned fuel in the exhaust system.


Once an engine is warmed to normal operating temperatures, engine should be idled at slow idle speed. (See ENGINE POWER RATING AND SPEED SPECIFICATIONS in the Specifications Section for slow idle speed information.) If an engine will be idling for more than 5 minutes, stop and restart later.

OURGP12,00000FC -19-04OCT07-1/1

Locking Throttle at Preset Speed

1. Push in/pull out throttle to desired setting.
2. Rotate locking knob (A), at base of throttle, clockwise to lock the throttle in place.

A—Locking Knob

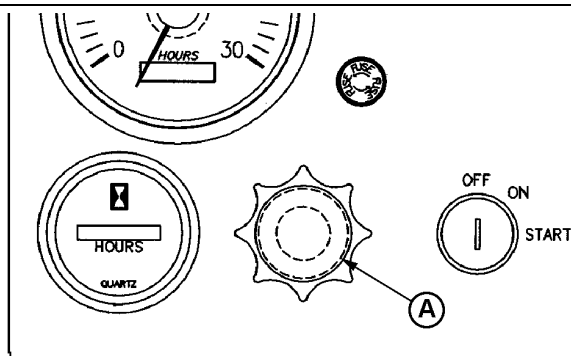

Locking Throttle

OURGP12,00002B2 -19-04MAY04-1/1

RG13533 —UN—07MAY04


Stopping the Engine

IMPORTANT: Stopping the engine immediately when it has been working under load, can result in overheating and accelerated wear of the engine components. **ALWAYS** run the engine at slow idle and no load to allow hot engine parts to cool before shutdown (if possible).

On engines with variable speed governors, remove load from engine and run engine for at least 2 minutes. Run turbocharged engines for 3 to 5 minutes.

On generator set engines with governors locked at a specific speed, remove electrical load from engine (if possible) and run at fast idle and no load for at least 2 minutes.

1. Drop engine speed to slow idle (variable speed governors only).
2. Turn key switch (A) to "OFF" position to stop the engine. After engine stops, close valve on fuel supply to prevent accidental starting.

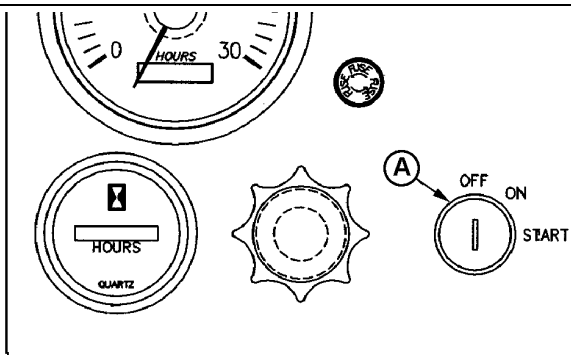

Key Switch on Instrument Panel

A—Key Switch

Continued on next page

OURGP12,00002B3 -19-04MAY04-1/2

RG13362 —UN—06FEB04

IMPORTANT: Make sure that exhaust stack cap (rain cap) is in place when engine is not running. This will prevent water and dirt from entering engine.

3. Fill fuel tank to minimize possible water condensation problems. Filling tanks at end of day drives out moisture-laden air.



Exhaust Stack Rain Cap

RG10616 —UN—16JUN00

OURGP12.00002B3 -19-04MAY04-2/2

Using a Booster Battery or Charger

A 12-volt booster battery can be connected in parallel with battery (ies) on the unit to aid in cold weather starting. ALWAYS use heavy duty jumper cables.

CAUTION: Gas given off by battery is explosive. Keep sparks and flames away from battery. Before connecting or disconnecting a battery charger, turn charger off. Make last connection and first disconnection at a point away from battery. Always connect **NEGATIVE (-)** cable last and disconnect this cable first.

WARNING: Battery posts, terminals, and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. **Wash hands after handling.**

IMPORTANT: Be sure polarity is correct before making connections. Reversed polarity will damage electrical system. Always connect positive to positive and negative to ground. Always use 12-volt booster battery for 12-volt electrical systems and 24-volt booster battery (ies) for 24-volt electrical systems.


1. Connect booster battery or batteries to produce the required system voltage for your engine application.

NOTE: To avoid sparks, **DO NOT** allow the free ends of jumper cables to touch the engine.


2. Connect one end of jumper cable to the **POSITIVE (+)** post of the booster battery.
3. Connect the other end of the jumper cable to the **POSITIVE (+)** post of battery connected to starter.
4. Connect one end of the other jumper cable to the **NEGATIVE (-)** post of the booster battery.
5. ALWAYS complete the hookup by making the last connection of the **NEGATIVE (-)** cable to a good ground on the engine frame and away from the battery (ies).
6. Start the engine. Disconnect jumper cables immediately after engine starts. Disconnect **NEGATIVE (-)** cable first.



Exploding Battery

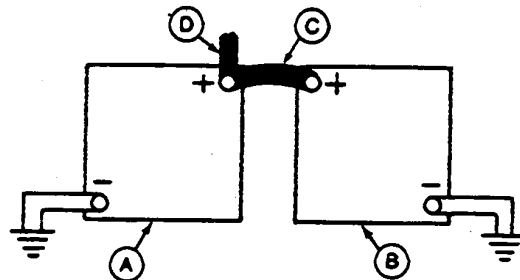

12-Volt System

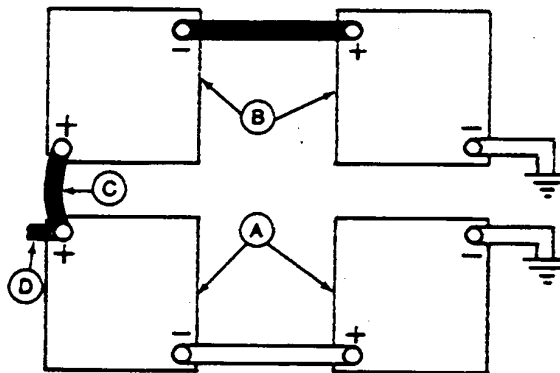

24-Volt System

A—12-Volt Machine Battery (ies)
B—12-Volt Booster Battery (ies)

C—Booster Cable
D—Cable to Starting Motor

RG, RG34710, 5564 -19-27JUL06-1/1

TS204 —UN—15APR13

RG4678 —UN—14DEC88

RG4698 —UN—14DEC88

Lubrication and Maintenance

Required Emission-Related Information

Service Provider


A qualified repair shop or person of the owner's choosing may maintain, replace, or repair emission control devices and systems with original or equivalent replacement parts. However, warranty, recall, and all other services paid for by John Deere must be performed at an authorized John Deere service center.

DX,EMISSIONS,REQINFO -19-12JUN15-1/1

Observe Service Intervals

Using hour meter (A) (if equipped) as guide, perform all services at the hourly intervals indicated on following pages. At each scheduled maintenance interval, perform all previous maintenance operations in addition to the ones specified. Keep a record of hourly intervals and services performed using charts provided in Lubrication and Maintenance Records Section.

IMPORTANT: Recommended service intervals are for normal operating conditions. Service MORE OFTEN if engine is operated under adverse conditions. Neglecting maintenance can result in failures or permanent damage to the engine.

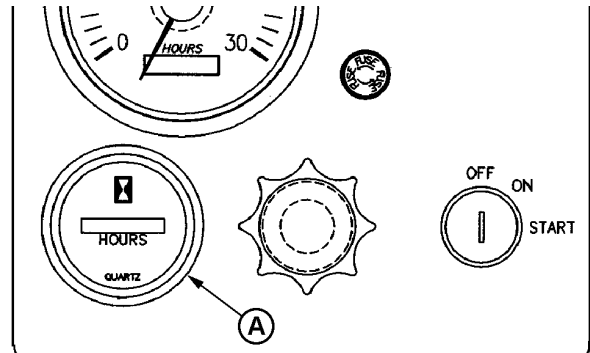

Instrument Panel with Optional Hour Meter

A—Hour Meter

OURGP12,00002B4 -19-05MAY04-1/1

Use Correct Fuels, Lubricants, and Coolant

IMPORTANT: Use only fuels, lubricants, and coolants meeting specifications outlined in Fuels, Lubricants, and Coolant Section when servicing your John Deere Engine.

Consult your John Deere engine distributor, servicing dealer or your nearest John Deere Parts Network for recommended fuels, lubricants, and coolant. Also available are necessary additives for use when operating engines in tropical, arctic, or any other adverse conditions.



DPSG,OUOE003,20 -19-09OCT07-1/1

Lubrication and Maintenance Service Interval Chart—Standard Industrial Engines

NOTE: The service intervals below are for standard industrial engines. Match service items

below to titles in Lubrication and Maintenance Sections for procedures.

Item	Lubrication and Maintenance Service Intervals			
	Daily	500 Hour/ 12 Month	2000 Hour/ 24 Month	As Required
Check Engine Oil and Coolant Level	•			
Check Fuel Filter	•			
Check Air Cleaner Dust Unloader Valve & Indicator ^a	•			
Perform Visual Walkaround Inspection	•			
Changing Engine Oil And Replacing Oil Filter ^b		•		
Replacing Fuel Filter Element		•		
Cleaning Crankcase Vent Tube		•		
Checking Air Intake System		•		
Checking Engine Speeds		•		
Checking Belt Tensioner Spring Tension and Belt Wear		•		
Checking Engine Electrical Ground Connection		•		
Servicing Fire Extinguisher		•		
Checking Engine Mounts		•		
Servicing Battery		•		
Checking Cooling System		•		
Replenishing SCAs as Required		•		
Testing Diesel Engine Coolant		•		
Pressure Testing Cooling System		•		
Checking Crankshaft Vibration Damper (If Equipped) ^c			•	
Flushing Cooling System ^d			•	
Testing Thermostats			•	
Adding Coolant				•
Replacing Air Cleaner Elements				•
Replacing Poly-Vee Belt				•
Checking Fuses				•
Checking Air Compressor (If Equipped)				•
Bleeding Fuel System				•

^a Replace primary air cleaner element when restriction indicator shows a vacuum of 625 mm (25 in) H₂O.

^b If PLUS-50 or ACEA - E4/E5/E6/E7 oil is NOT used along with a John Deere oil filter, the oil change interval is reduced to every 250 hours.

^c Replace crankshaft damper every 4500 hours or 60 months, whichever comes first.

^d If John Deere COOL-GARD is used, the flushing interval may be extended to 3000 hours or 36 months. If John Deere COOL-GARD is used and the coolant is tested annually AND additives are replenished as needed by adding a supplemental coolant additive, the flushing interval may be extended to 5000 hours or 60 months, whichever occurs first.

OURGP12,00000FD -19-02NOV15-1/1

Lubrication and Maintenance Service Interval Chart—Generator (Standby) Applications

NOTE: Use service intervals listed below for generator (standby) applications. Match service items

below to titles in Lubrication and Maintenance Sections for procedures.

Item	Lubrication and Maintenance Service Intervals			
	Every 2 Weeks	500 Hours or 12 Months	2000 Hours or 24 Months	As Required
Operate Engine at Rated Speed and 50%–70% Load a Minimum of 30 Minutes	•			
Check Engine Oil and Coolant Level	•			
Check Fuel Filter	•			
Check Air Cleaner Dust Unloader Valve & Indicator ^a	•			
Perform Visual Walkaround Inspection	•			
Changing Engine Oil And Replacing Oil Filter ^b		•		
Replacing Fuel Filter Element		•		
Cleaning Crankcase Vent Tube		•		
Checking Air Intake System		•		
Checking Engine Speeds		•		
Checking Belt Tensioner Spring Tension and Belt Wear		•		
Checking Engine Electrical Ground Connection		•		
Servicing Fire Extinguisher		•		
Checking Engine Mounts		•		
Servicing Battery		•		
Checking Cooling System		•		
Replenishing SCAs as Required		•		
Testing Diesel Engine Coolant		•		
Pressure Testing Cooling System		•		
Checking Crankshaft Vibration Damper ^c			•	
Flushing Cooling System ^d			•	
Testing Thermostats			•	
Adding Coolant				•
Replacing Air Cleaner Elements				•
Replacing Poly-Vee Belt				•
Checking Fuses				•
Checking Air Compressor (If Equipped)				•
Adjusting Speed Gain				•
Bleeding Fuel System				•

^aReplace primary air cleaner element when restriction indicator shows a vacuum of 625 mm (25 in.) H₂O.

^bIf PLUS-50 or ACEA - E4/E5/E6/E7 oil is NOT used along with a John Deere oil filter, the oil change interval is reduced to every 250 hours.

^cReplace crankshaft damper every 4500 hours or 60 months, whichever occurs first.

^dIf John Deere COOL-GARD is used, the flushing interval may be extended to 3000 hours or 36 months. If John Deere COOL-GARD is used and the coolant is tested annually AND additives are replenished as needed by adding a supplemental coolant additive, the flushing interval may be extended to 5000 hours or 60 months, whichever occurs first.

OURGP12.00002B5 -19-02JAN07-1/1

Lubrication/Maintenance-Daily

Daily Prestarting Checks


Do the following BEFORE STARTING THE ENGINE for the first time each day:

IMPORTANT: DO NOT add makeup oil until the oil level is **BELOW** the “ADD” mark on dipstick.
Do not use break-in oil in this engine.


- A—Left Side Oil Filler Cap C—Crosshatch on Dipstick
B—Rocker Arm Cover Oil Filler Cap



Engine Oil Dipstick

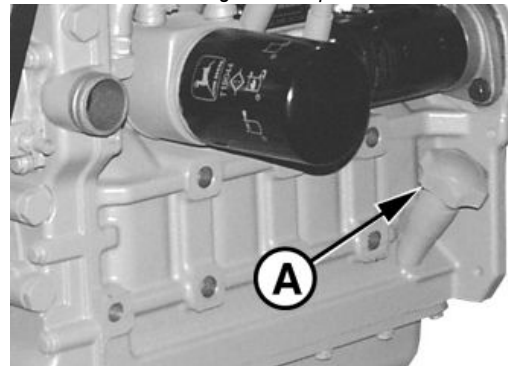


Left Side Oil Filler Cap and Dipstick

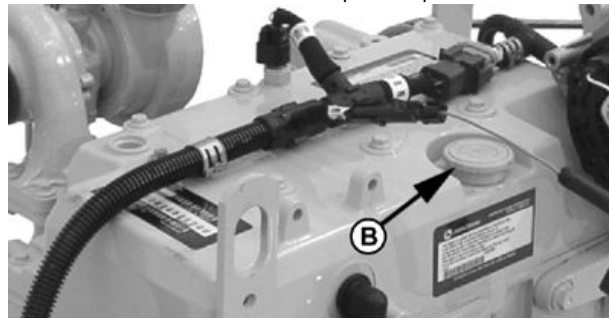

Rocker Arm Cover Filler Cap

RG14931 —UN—13JUL06

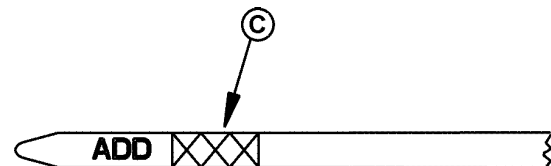

Crosshatch on Dipstick

Continued on next page

OUOD006,00000C2 -19-03AUG07-1/4

RG12692 —UN—07FEB03

RG12779 —UN—07JAN03

RG15337 —UN—04OCT07

1. Check engine oil level on dipstick. Add as required, using seasonal viscosity grade oil. (See DIESEL ENGINE OIL in Fuels, Lubricants, and Coolant Section for oil specifications.)

Depending on application, oil may be added at left side (A) or rocker arm cover filler cap (B) locations.

After checking oil, hand tighten dipstick used on left-hand oil fillers.

IMPORTANT: DO NOT fill above the top mark on the dipstick. Oil levels anywhere within the crosshatch (C) are considered in the acceptable operating range.

CAUTION: Explosive release of fluids from pressurized cooling system can cause serious burns.

Only remove filler cap when engine is cold or when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.

2. Check the coolant level when engine is cold. Coolant level should be at bottom of filler neck. Fill radiator (A) with proper coolant solution if level is low. (See ADDING COOLANT in Service As Required Section.) Check overall cooling system for leaks.

NOTE: Refer to your vehicle's operator's manual for recommendations for non-John Deere supplied accessories.

IMPORTANT: Drain water from filter bowl daily to avoid premature failure of unit injection pump.


When using BIODIESEL blends, monitor water quantity in fuel filter element more closely. Water in the separator may need to be drained more frequently.



High-Pressure Fluids



Check Coolant Level in Radiator

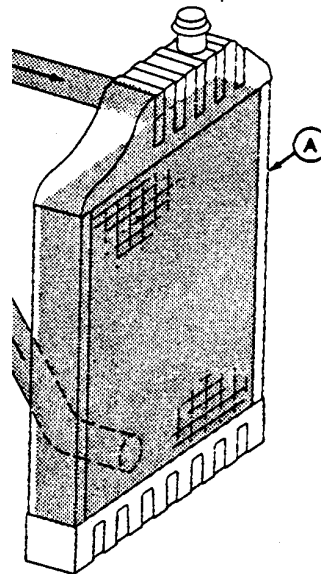

Fill Radiator

A—Fill Radiator

Continued on next page

OUOD006,00000C2 -19-03AUG07-2/4

TS281 —UN—15APR13

RG6576 —UN—20JAN93

RG4675 —UN—14DEC88

3. Check the fuel filter (A) for water or debris. If filter is fitted with a see-through bowl, drain as needed based on a daily visual inspection.

IMPORTANT: Drain water into a suitable container and dispose of properly.


- a. Loosen drain plug (B) at bottom of fuel filter or bowl, if equipped, two or three turns.
- b. Loosen air bleed plug (C) two full turns on fuel filter mounting and drain water from bottom until fuel starts to drain out.
- c. When fuel starts to drain out, tighten drain plug securely.

After draining water from the fuel filter, the filter must be primed. Once the filter has been primed, fuel system will prime itself when starter is cranked.

- a. Operate hand primer (D) on the fuel filter header until fuel flow is free from air bubbles.
- b. Tighten bleed plug securely.

A—Fuel Filter
B—Drain Plug

C—Air Bleed Plug
D—Hand Primer

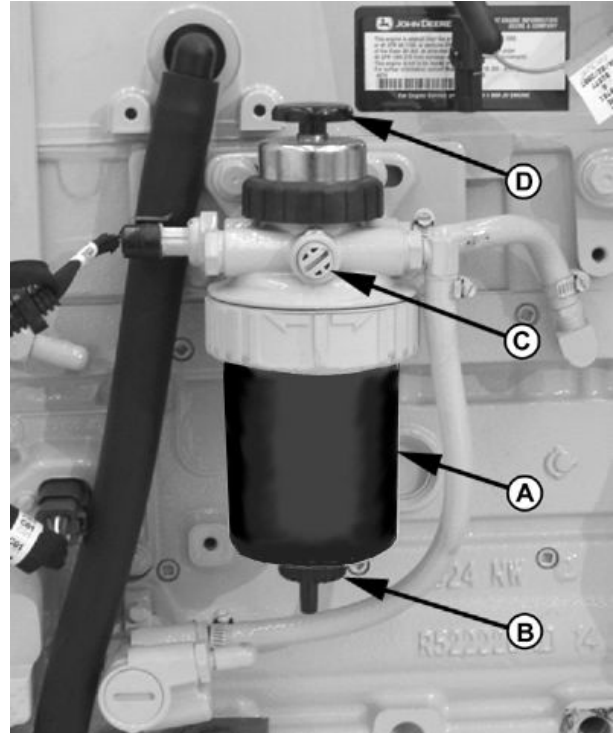

Fuel Transfer Pump and Filter

RG15334A —UN—110CT07

OUOD006,00000C2 -19-03AUG07-3/4

4. If the air cleaner has an automatic dust unloader valve (A), squeeze the unloader valve on air cleaner assembly to clear away any dust buildup.

If equipped with air intake restriction indicator gauge (B), check gauge to determine if air cleaner needs to be serviced.


IMPORTANT: Maximum air intake restriction is 6.25 kPa (0.06 bar) (1.0 psi) (25 in. H₂O). A clogged air cleaner element will cause excessive intake restriction and a reduced air supply to the engine.

5. Make a thorough inspection of the engine compartment. Look for oil or coolant leaks, worn fan and accessory drive belts, loose connections and trash build-up. Remove trash buildup and have repairs made as needed if leaks are found.

NOTE: Wipe all fittings, caps, and plugs before performing any maintenance to reduce the chance of system contamination.

Inspect:

- Radiator for leaks and trash build-up.
- Air intake system hoses and connections for cracks and loose clamps.
- Fan, alternator, and accessory drive belts for cracks, breaks or other damage.

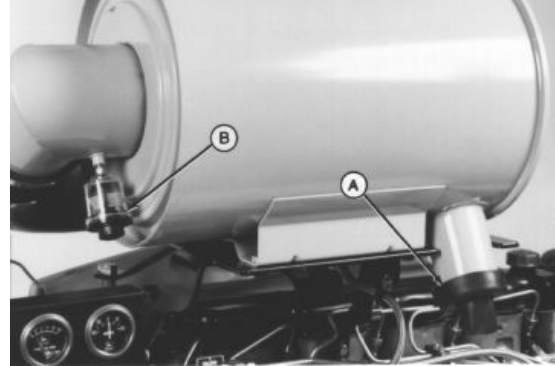

Dust Unloader Valve and Indicator Gauge

A—Dust Unloader Valve

B—Air Restriction Indicator

- Coolant pump for coolant leaks.

NOTE: It is normal for a small amount of leakage to occur as the engine cools down and parts contract. Excessive coolant leakage may indicate the need to replace the coolant pump. Contact your engine distributor or servicing dealer for repairs.

RG7332A —UN—22JAN99

OUOD006,00000C2 -19-03AUG07-4/4

Lubrication/Maintenance-500 Hour/12 Month

Changing Engine Oil and Replacing Filter

IMPORTANT: Changing engine oil and filter every 500 hours or 12 months depends on the following requirements:

- Engine equipped with oil pan that allows capacity for this extended drain interval.
- Use of premium oil: John Deere PLUS-50™, ACEA E7 or ACEA E6.
- Perform engine oil analysis to determine actual extended service life of ACEA E7 and ACEA E6 oils.
- Use of approved John Deere oil filter.
- Use of diesel fuel with sulfur content less than 0.50% (5000 ppm).

The oil and filter change interval is reduced if **ANY** of the above listed requirements are not followed.

IMPORTANT: If using BIODIESEL blends greater than B20, reduce oil change interval to half the recommended service interval, or monitor engine oil using OILSCAN to ensure fuel dilution does not exceed 5%.

NOTE: During break-in, change engine oil and filter for the first time before 100 hours of operation maximum .

NOTE: Service intervals depend on sulfur content of the diesel fuel, oil pan capacity, and the oil and filter used. (See DIESEL ENGINE OIL and DIESEL ENGINE OIL AND FILTER SERVICE INTERVALS in the "Fuels, Lubricants, and Coolant" section.


OILSCAN™ or OILSCAN PLUS™ is a John Deere sampling program to help you monitor machine performance and identify potential problems before they cause serious damage. OILSCAN™ and OILSCAN PLUS™ kits are available from your John Deere engine distributor or servicing dealer. Oil samples should be taken prior to the oil change. Refer to instructions provided with kit.

CAUTION: Metal surfaces of oil pan and drain plug maybe hot to the touch. Use care to prevent burns.


To change engine oil and oil filter:

1. Run engine approximately 5 minutes to warm up oil. Shut engine off.
2. Remove oil pan drain plug (arrow).
3. Drain crankcase oil from engine while warm.
4. Turn filter element (A) counterclockwise using a suitable filter wrench to remove. Discard oil filter element.


NOTE: Depending on engine application, oil filter may have either a vertical or horizontal mounting.

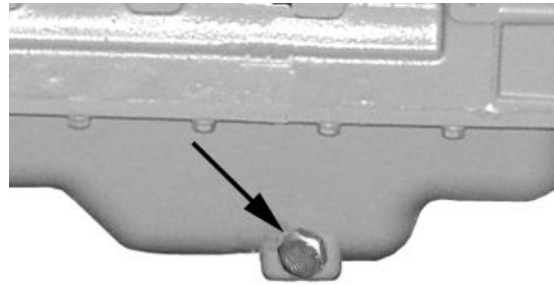

Oil Pan Drain Plug

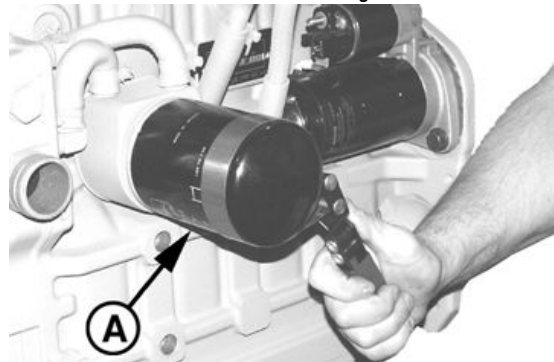

Removing Horizontal Oil Filter Element

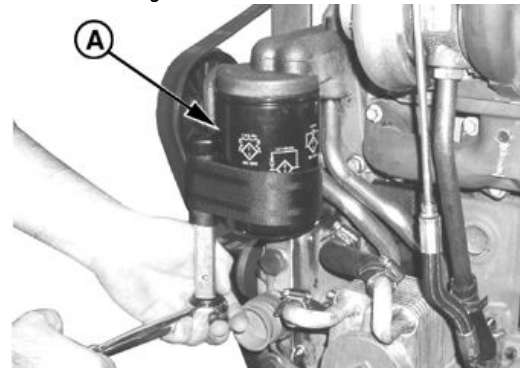

Removing Optional Vertical Oil Filter Element

A—Oil Filter Element

5. Remove oil filter packing and clean filter mounting pad.

IMPORTANT: Filtration of oils is critical to proper lubrication. Always change filter regularly. Use filter meeting John Deere performance specifications.

NOTE: Apply a thin coat of engine oil to the entire filter packing. DO NOT use grease.

Continued on next page

OUOD006,00000C9 -19-10AUG07-1/3

RG12783 —UN—18FEB03

RG12893 —UN—07FEB03

RG12822 —UN—09FEB03

6. Oil new packing and install new filter element. Hand tighten element according to values printed on filter element. If values are not provided, tighten element by hand approximately 3/4 — 1-1/4 turn after packing contacts filter housing. DO NOT overtighten filter element. If a filter wrench is used, be sure it is padded to avoid damaging element.

7. Install oil pan drain plug with O-ring. If O-ring is damaged, replace it.

PLUS-50 is a trademark of Deere & Company.
OILSCAN is a trademark of Deere & Company.
OILSCAN PLUS is a trademark of Deere & Company.

8. Tighten drain plug to specifications.

Specification

Oil Pan Drain Plug With	
O-Ring—Torque.....	35 N·m (26 lb ft)

OUOD006,00000C9 -19-10AUG07-2/3

9. Fill engine crankcase with correct John Deere engine oil through side oil filler (B) or rocker arm cover opening (C) depending on engine application. (See DIESEL ENGINE OIL in Fuels, Lubricants, and Coolant Section for determining correct engine oil.)

To determine the correct oil fill quantity for your engine, see ENGINE CRANKCASE OIL CAPACITIES in the Specifications Section of this manual.

IMPORTANT: Immediately after completing any oil change, crank engine for 30 seconds without permitting engine to start. This will help insure adequate lubrication to engine components before engine starts.


NOTE: Crankcase oil capacity may vary slightly. ALWAYS fill crankcase to within crosshatch marks (D) on dipstick. DO NOT overfill.

10. Start engine and run to check for possible leaks.


11. Stop engine and check oil level after 10 minutes. Oil level reading should be within crosshatch marks (D) on dipstick.

B—Optional Side Oil Fill
C—Rocker Arm Cover Oil Fill

D—Crosshatch Marks on Dipstick

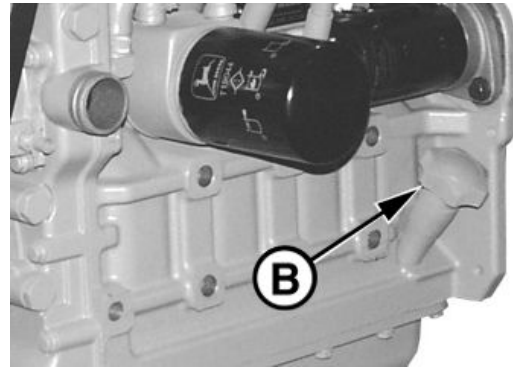


Optional Side Oil Fill

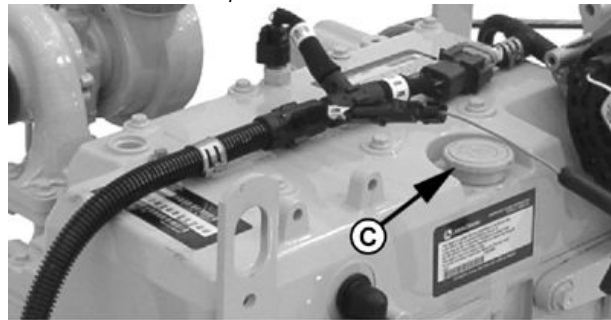

Rocker Arm Cover Oil Fill

RG12781 —UN—17FEB03

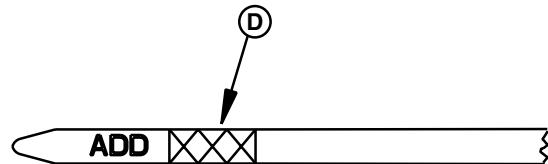

Crosshatch Marks on Dipstick

OUOD006,00000C9 -19-10AUG07-3/3

RG12779A —UN—07JAN03

RG15338 —UN—04OCT07

Replacing Fuel Filter Element

CAUTION: Escaping fluid under pressure can penetrate the skin causing serious injury. Relieve pressure before disconnecting fuel or other lines. Tighten all connections before applying pressure. Keep hands and body away from pinholes and nozzles which eject fluids under high pressure. Use a piece of cardboard or paper to search for leaks. Do not use your hand.

If any fluid is injected into the skin, it must be surgically removed within a few hours by a doctor familiar with this type injury or gangrene may result. Doctors unfamiliar with this type of injury may call the Deere & Company Medical Department in Moline, Illinois, or other knowledgeable medical source.

1. Close fuel shut-off valve, if equipped.
2. Thoroughly clean fuel filter assembly and surrounding area.
3. Disconnect water sensor wiring (if equipped).
4. Loosen drain plug (A) and drain fuel into a suitable container.

NOTE: Lifting up on retaining ring while rotating the ring helps in clearing raised locators.


5. Firmly grasp retaining ring (B) and rotate it counterclockwise 1/4 turn (as viewed from top). Remove ring with filter element (C).
6. Inspect filter mounting base for cleanliness. Clean as required.

NOTE: Raised locators on fuel filter canisters must be indexed properly with slots in mounting base for correct installation.


7. Install new filter element onto mounting base. Be sure element is properly indexed and firmly seated on base. It may be necessary to rotate filter for correct alignment.

If equipped with water separator bowl, remove filter element from separator bowl. Drain and clean separator bowl. Dry with compressed air. Install bowl onto new element. Tighten securely.

8. Align keys on filter element with slots in filter base.
9. Install retaining ring onto mounting base making certain dust seal is in place on filter base. Hand tighten

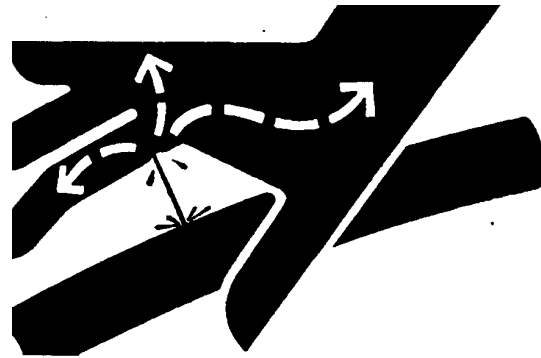

High-Pressure Fluids

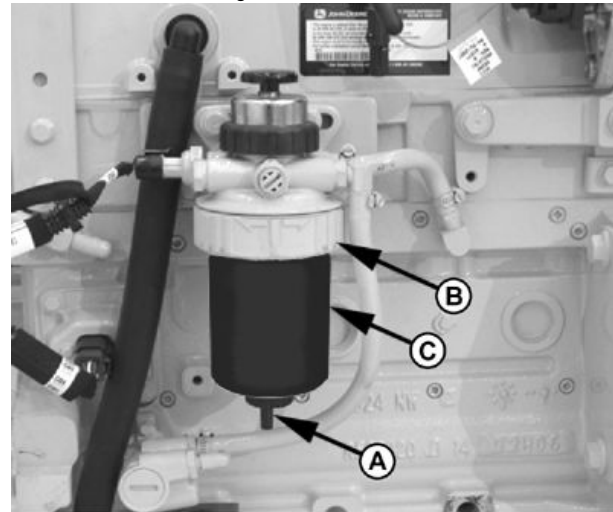

Fuel Filter

A—Drain Plug
B—Retaining Ring

C—Filter Element

ring counterclockwise (about 1/3 turn) until it “snaps” into the detent. DO NOT overtighten retaining ring.

NOTE: The proper installation is indicated when a “click” is heard and a release of the retaining ring is felt.

A plug is provided with the new element for plugging the used element.

10. Reconnect water sensor wiring (if equipped).
11. Open fuel shut-off valve and prime the fuel filter. (See PRIMING THE FUEL FILTER in Service As Required Section.)

OUOD006,00000C3 -19-17OCT07-1/1


X9811 —UN—23AUG88

RG15479 —UN—19OCT07

Cleaning Crankcase Vent Tube

If you operate the engine in dusty conditions, clean the tube at shorter intervals.

1. Remove and clean crankcase vent tube (A).
2. Install the vent tube.

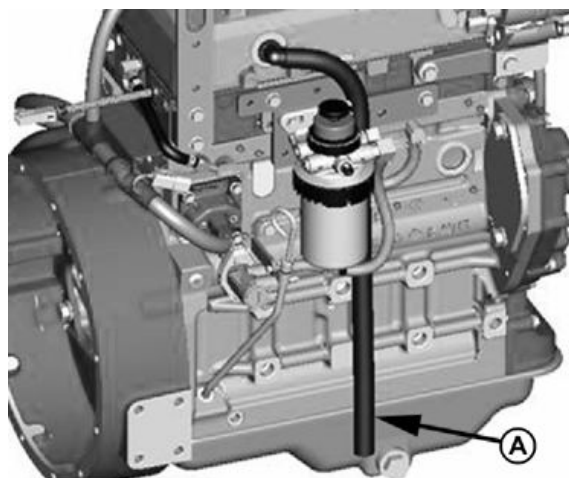

Crankcase Vent Tube

OUOD006,00000CA -19-10AUG07-1/1

RG15634 —UN—19OCT07

Checking Air Intake System


IMPORTANT: The air intake system must not leak. Any leak, no matter how small, may result in internal engine damage due to abrasive dirt and dust entering the intake system.

1. Inspect all intake hoses (piping) for cracks. Replace as necessary.
2. Check clamps (A) on piping which connect the air cleaner, engine and, if present, turbocharger. Tighten clamps as necessary. This will help prevent dirt from entering the air intake system through loose connections causing internal engine damage.
3. If engine has a rubber dust unloader valve (B), inspect the valve on bottom of air cleaner for cracks or plugging. Replace as necessary.


IMPORTANT: ALWAYS REPLACE primary air cleaner element when air restriction indicator shows a vacuum of 625 mm (25 in. H₂O), is torn, or visibly dirty. See REPLACING AIR CLEANER ELEMENT later in Service As Required section.

4. Test air restriction indicator (C) for proper operation. Replace indicator as necessary.

IMPORTANT: If not equipped with air restriction indicator, replace air cleaner elements at 500 Hours or 12 Months, whichever occurs first.

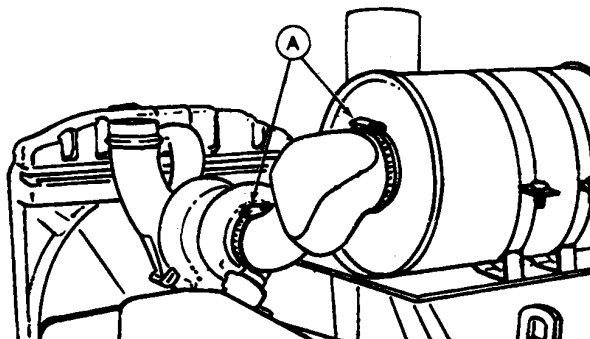

Check Clamps

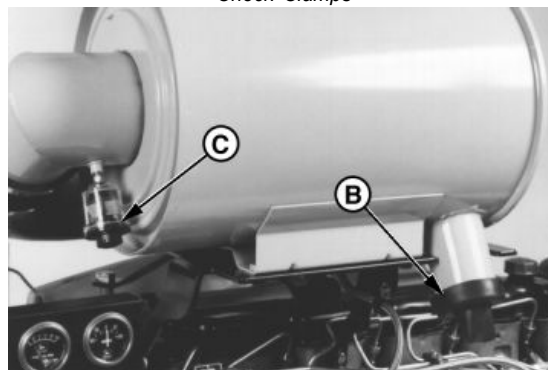

Unloader Valve and Air Restriction Indicator

A—Clamps
B—Dust Unloader Valve

C—Air Restriction Indicator

RG41183,000003D -19-31JAN07-1/1

RG4689 —UN—20DEC88

RG7332B —UN—22JAN99

Check Engine Speeds

Observe tachometer reading (if equipped) and check speeds per specification (See correct speeds listed

in ENGINE POWER RATINGS). If speeds require adjustment, contact your John Deere dealer or distributor.

RG41183,000003E -19-31JAN07-1/1

Checking Belt Tensioner Spring Tension and Belt Wear

Belt drive systems equipped with an automatic (spring) belt tensioner cannot be adjusted or repaired. The automatic belt tensioner is designed to maintain proper belt tension over the life of the belt. If tensioner spring tension is not within specification, replace tensioner assembly.


Checking Belt Wear

The belt tensioner (A) is designed to operate within the limit of arm movement when correct belt length and geometry is used.

Visually inspect poly-vee belt (B) for excessive wear and cracks. See Replacing Fan and Alternator Belt in Section 45.

A—Belt Tensioner

B—Poly-Vee Belt

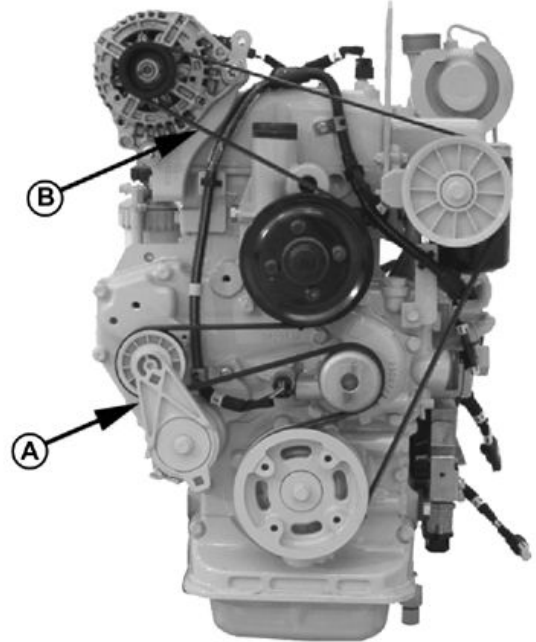

Belt Wear Inspection

Continued on next page

OUOD006.000010E -19-10OCT07-1/2

RG15339 —UN—04OCT07

Checking Tensioner Spring Tension

A belt tension gauge will not give an accurate measure of the belt tension when automatic spring tensioner is used. Measure tensioner spring tension using a torque wrench and procedure outlined below:

1. Release tension on belt using a breaker bar and socket on tension arm. Remove belt from pulleys.
2. Release tension on tension arm and remove breaker bar.
3. Put a mark (A) on swing arm of tensioner as shown.
4. Measure 21 mm (0.83 in.) from (A) and put a mark (B) on tensioner mounting base.
5. Install torque wrench (C) so that it is aligned with center of pulley and tensioner. Rotate the swing arm with the torque wrench until marks (A and B) are aligned.
6. Record torque wrench measurement and compare with specification below. Replace tensioner assembly as required.


Specification

Spring Tension—Torque..... 18-22 N·m (13-16 lb-ft)


NOTE: Threads on belt tensioner roller cap screw are **LEFT-HAND** threads

A—Mark On Swing Arm
B—Mark On Tensioner
Mounting Base


C—Torque Wrench

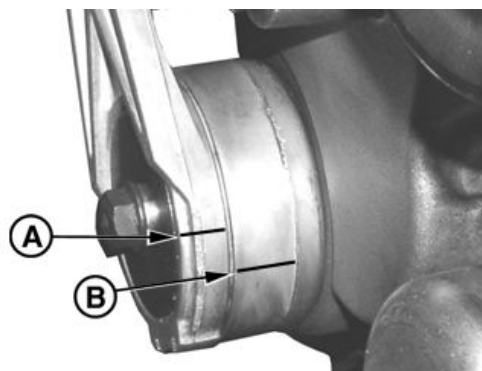

Marks on Tensioner

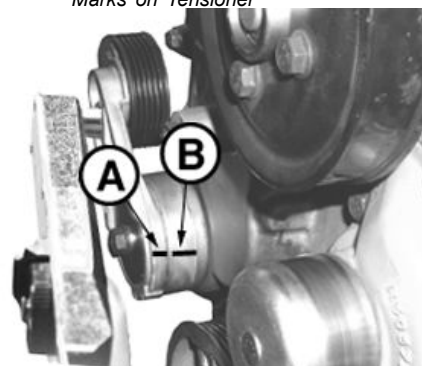

Align Marks

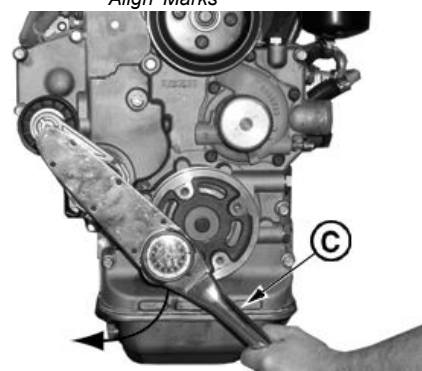

Align Torque Wrench With Pulley And Tensioner

OUOD006,000010E -19-10OCT07-2/2

RG12825 —UN—19FEB03

RG12824 —UN—19FEB03

RG12971 —UN—04JUN03

Checking Engine Electrical Ground Connections

Keep all engine ground connections clean and tight to prevent electrical arcing which can damage electrical components.

RG41183,0000049 -19-08JAN03-1/1

Servicing Fire Extinguisher

A fire extinguisher (A) is available from your authorized servicing dealer or engine distributor.

Read and follow the instructions which are packaged with it. The extinguisher should be inspected at least every 500 hours of engine operation or once a month. Once extinguisher is operated, no matter how long, it must be recharged. Keep record of inspections on the tag which comes with the extinguisher instruction booklet.

A—Fire Extinguisher



Fire Extinguisher

RG, RG34710, 5567 -19-02, JAN07-1/1

RW4918 —UN—15DEC88

Checking Engine Mounts

Engine mounting is the responsibility of the vehicle or generator manufacturer. Follow manufacturer's guidelines for mounting specifications.

IMPORTANT: Use only Grade SAE 8 or higher grade of hardware for engine mounting.

1. Check the engine mounting bracket, vibration isolators, and mounting bolts on support frame and engine block for tightness. Tighten as necessary.
2. Inspect overall condition of vibration isolators, if equipped. Replace isolators if rubber has deteriorated or mounts have collapsed, as necessary.

DPSG, RG34710, 111 -19-07, JAN02-1/1

Servicing Battery

CAUTION: Battery gas can explode. Keep sparks and flames away from batteries. Use a flashlight to check battery electrolyte level.

Never check battery charge by placing a metal object across the posts. Use a voltmeter or hydrometer.

Always remove grounded **NEGATIVE (-)** battery clamp first and replace it last.

WARNING: Battery posts, terminals, and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. **Wash hands after handling.**

1. On regular batteries, check electrolyte level. Fill each cell to bottom of filler neck with distilled water.

NOTE: Low-maintenance or maintenance-free batteries should require little additional service. However, electrolyte level can be checked by cutting the center section of decal on dash-line, and removing cell plugs. If necessary, add clean, soft water to bring level to bottom of filler neck.

2. Keep batteries clean by wiping them with a damp cloth. Keep all connections clean and tight. Remove



Exploding Battery

any corrosion, and wash terminals with a solution of 1 part baking soda and 4 parts water. Tighten all connections securely.

NOTE: Coat battery terminals and connectors with a mixture of petroleum jelly and baking soda to retard corrosion.

3. Keep battery fully charged, especially during cold weather. If a battery charger is used, turn charger off before connecting charger to battery(ies). Attach **POSITIVE (+)** battery charger lead to **POSITIVE (+)** battery post. Then attach **NEGATIVE (-)** battery charger lead to a good ground.

Continued on next page

RG, RG34710, 5568 -19-20, MAY96-1/2

TS204 —UN—15APR13

CAUTION: Sulfuric acid in battery electrolyte is poisonous. It is strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid the hazard by:

1. Filling batteries in a well-ventilated area.
2. Wearing eye protection and rubber gloves.
3. Avoiding breathing fumes when electrolyte is added.
4. Avoiding spilling or dripping electrolyte.
5. Use proper jump start procedure.

If you spill acid on yourself:

1. Flush your skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush your eyes with water for 10–15 minutes. Get medical attention immediately.

If acid is swallowed:


1. Drink large amounts of water or milk.
2. Then drink milk of magnesia, beaten eggs, or vegetable oil.
3. Get medical attention immediately.

In freezing weather, run engine at least 30 minutes to assure thorough mixing after adding water to battery.

If necessary to replace battery(ies), replacements must meet or exceed the following recommended capacities at -18°C (0°F):

Specification

12 Volt Standard Duty Starter—Cold Cranking	
Amps.....	640
12 Volt Heavy Duty Starter—Cold Cranking	
Amps.....	800

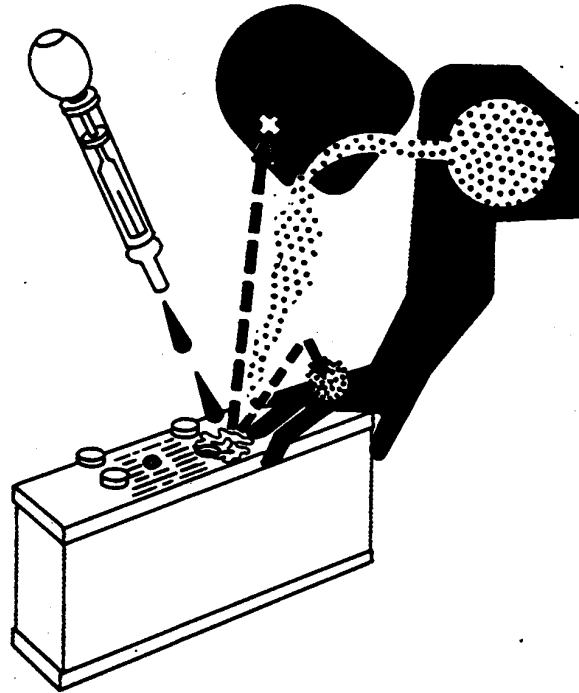

Sulfuric Acid

24 Volt Standard Duty Starter—Cold Cranking	
Amps.....	570

TS203 —UN—23AUG88

RG, RG34710, 5568 -19-20MAY96-2/2

Checking Cooling System

⚠ CAUTION: Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut off engine. Only remove filler cap when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.

IMPORTANT: Air must be expelled from cooling system when system is refilled. Loosen temperature sending unit fitting at rear of cylinder head or plug in thermostat housing to allow air to escape when filling system. Retighten fitting or plug when all the air has been expelled.

1. Visually check entire cooling system for leaks. Tighten all clamps securely.



High-Pressure Fluids

2. Thoroughly inspect all cooling system hoses for hard, flimsy, or cracked condition. Replace hoses if any of the above conditions are found.

RG, RG34710, 5580 -19-20MAY96-1/1

TS281—JUN—15APR13

Replenishing Supplemental Coolant Additives (SCAs) Between Coolant Changes

IMPORTANT: Do not add supplemental coolant additives when the cooling system is drained and refilled with John Deere COOL-GARD™

NOTE: If system is to be filled with coolant that does not contain SCAs, the coolant must be precharged. Determine the total system capacity and premix with 3% John Deere Coolant Conditioner.

Through time and use, the concentration of coolant additives is gradually depleted during engine operation. Periodic replenishment of inhibitors is required, even when John Deere COOL-GARD™ is used. The cooling system must be recharged with additional supplemental coolant additives available in the form of liquid coolant conditioner.

Maintaining the correct coolant conditioner concentration (SCAs) and freeze point is essential in your cooling system to protect against rust, liner pitting and corrosion, and freeze-ups due to incorrect coolant dilution.

John Deere LIQUID COOLANT CONDITIONER is recommended as a supplemental coolant additive in John Deere engines.

DO NOT mix one brand of SCA with a different brand.

Test the coolant solution at 500 hours or 12 months of operation using either John Deere coolant test strips or a COOLSCAN™ or COOLSCAN PLUS™ analysis. If a COOLSCAN™ or COOLSCAN PLUS™ analysis is not available, recharge the system per instructions printed on label of John Deere Liquid Coolant Conditioner.


IMPORTANT: ALWAYS maintain coolant at correct level and concentration. DO NOT operate engine without coolant even for a few minutes.

If frequent coolant makeup is required, the glycol concentration should be checked with JT07298 Coolant/Battery Tester to ensure that the desired freeze point is maintained. Follow manufacturer's instructions provided with Coolant/Battery Tester.


Add the manufacturer's recommended concentration of supplemental coolant additive. DO NOT add more than the recommended amount.

The use of non-recommended supplemental coolant additives may result in additive drop-out and gelation of the coolant.

COOL-GARD is a trademark of Deere & Company
COOLSCAN is a trademark of Deere & Company
COOLSCAN PLUS is a trademark of Deere & Company
COOLSCAN PLUS is a trademark of Deere & Company

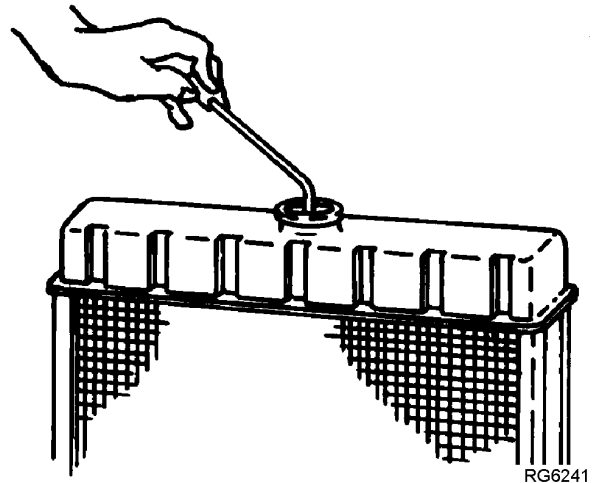

Radiator Coolant Check

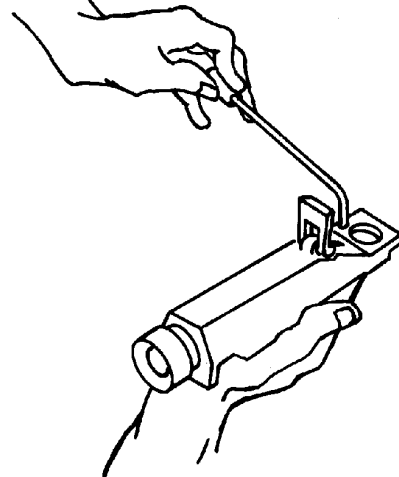

JT07298 Coolant/Battery Tester

If other coolants are used, consult the coolant supplier and follow the manufacturer's recommendation for use of supplemental coolant additives.

See DIESEL ENGINE COOLANTS AND SUPPLEMENTAL ADDITIVE INFORMATION for proper mixing of coolant ingredients before adding to the cooling system.

Testing Diesel Engine Coolant

Maintaining adequate concentrations of glycol and inhibiting additives in the coolant is critical to protect the engine and cooling system against freezing, corrosion, and cylinder liner erosion and pitting.

Test the coolant solution at intervals of 12 months or less and whenever excessive coolant is lost through leaks or overheating.

Coolant Test Strips

Coolant test strips are available from your John Deere dealer. These test strips provide a simple, effective method to check the freeze point and additive levels of your engine coolant.

When Using John Deere COOL-GARD II

John Deere COOL-GARD II Premix™, COOL-GARD II PG Premix and COOL-GARD II Concentrate are maintenance free coolants for up to six years or 6000 hours of operation, provided that the cooling system is topped off using only John Deere COOL-GARD II Premix or COOL-GARD II PG premix. Test the coolant condition annually with coolant test strips designed for use with John Deere COOL-GARD II coolants. If the test strip chart indicates that additive is required, add John Deere COOL-GARD II Coolant Extender as directed.

COOL-GARD is a trademark of Deere & Company

Add only the recommended concentration of John Deere COOL-GARD II Coolant Extender. DO NOT add more than the recommended amount.

When Using Nitrite-Containing Coolants

Compare the test strip results to the supplemental coolant additive (SCA) chart to determine the amount of inhibiting additives in your coolant and whether more John Deere Liquid Coolant Conditioner should be added.

Add only the recommended concentration of John Deere Liquid Coolant Conditioner. DO NOT add more than the recommended amount.


Coolant Analysis

For a more thorough evaluation of your coolant, perform a coolant analysis. The coolant analysis can provide critical data such as freezing point, antifreeze level, pH, alkalinity, nitrite content (cavitation control additive), molybdate content (rust inhibitor additive), silicate content, corrosion metals, and visual assessment.

Contact your John Deere dealer for more information on coolant analysis.


DX,COOL9 -19-11APR11-1/1

Pressure Testing Cooling System

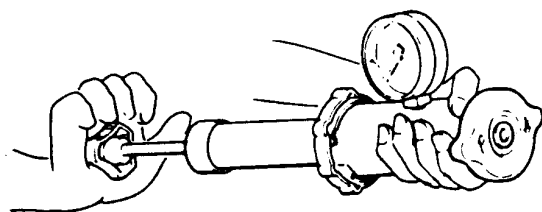

Test Radiator Cap

RG6557—UN—20JAN93

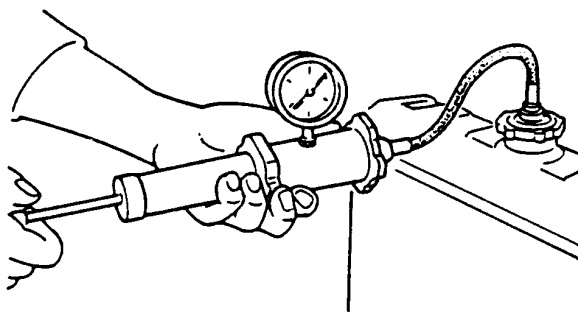

Test Cooling System

RG6558—UN—20JAN93

CAUTION: Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut off engine. Only remove filler cap when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.

Test Radiator Cap

1. Remove radiator cap and attach to D05104ST Tester as shown.
2. Pressurize cap to specification listed. Gauge should hold pressure for 10 seconds within the normal range if cap is acceptable.

If gauge does not hold pressure, replace radiator cap.

Specification

Radiator Cap Holding
Pressure (Not
Opening For 10
Seconds)—Pressure..... 70 kPa (0.7 bar) (10 psi) minimum

3. Remove the cap from gauge, turn it 180°, and retest cap. This will verify that the first measurement was accurate.

Test Cooling System

NOTE: Engine should be warmed up to test overall cooling system.

1. Allow engine to cool, then carefully remove radiator cap.
2. Fill radiator with coolant to the normal operating level.

IMPORTANT: DO NOT apply excessive pressure to cooling system, doing so may damage radiator and hoses.

3. Connect gauge and adapter to radiator filler neck. Pressurize cooling system to specification listed for radiator cap.
4. With pressure applied, check all cooling system hose connections, radiator, and overall engine for leaks.

If leakage is detected, correct as necessary and pressure test system again.

If no leakage is detected, but the gauge indicated a drop in pressure, coolant may be leaking internally within the system or at the block-to-head gasket. Have your engine distributor or servicing dealer correct this problem immediately.

RG, RG34710, 5586 -19-07JAN02-1/1

Lubrication/Maintenance-2000 Hour/24 Month

Checking Crankshaft Vibration Damper (If Equipped)

1. Grasp crankshaft vibration damper with both hands and attempt to turn it in both directions. If rotation is felt, crankshaft vibration damper is defective and should be replaced.

IMPORTANT: Crankshaft vibration damper is not repairable and should be replaced every 4500 hours or 60 months, whichever occurs first.

2. Check crankshaft vibration damper radial runout by positioning a dial indicator so probe contacts crankshaft vibration damper outer diameter.
3. Remove starter motor.
4. Rotate crankshaft using JDG1704 or JDG10221 flywheel turning tool as shown.
5. Note dial indicator reading. If runout exceeds specification, replace crankshaft vibration damper.


Specification

Crankshaft Vibration
Damper—Maximum
Radial Runout..... 1.00 mm (0.040 in)


6. Remove tool and reinstall starter motor. Connect wiring and tighten mounting cap screws to specification.

Specification


Starter Motor Mounting
Cap Screw—Torque..... 80 N·m (59 lb·ft)

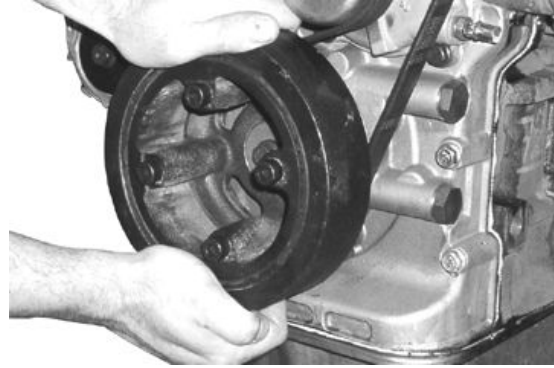

Crankshaft Vibration Damper

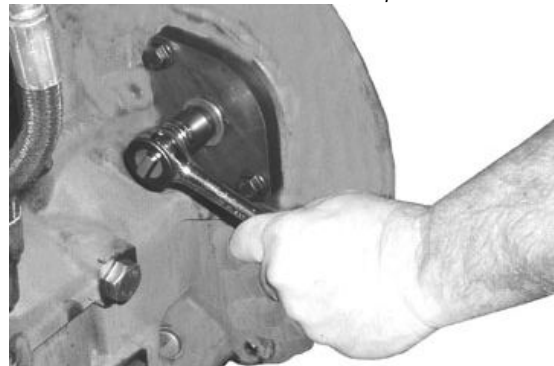

Rotating Crankshaft Using JDG1704

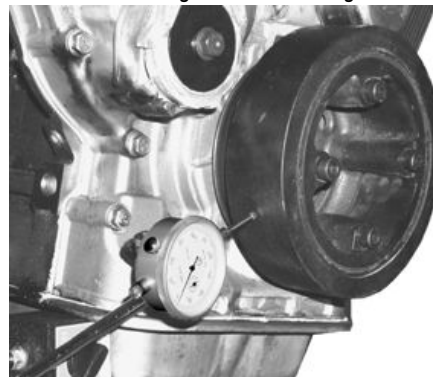

Crankshaft Vibration Damper Radial (Concentricity)

OUOD006,000006E -19-02NOV15-1/1

RG12917 —UN—16MAY03

RG12788 —UN—21JAN03

RG12918 —UN—16MAY03

Flushing and Refilling Cooling System

CAUTION: Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut off engine. Only remove filler cap when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.

NOTE: When John Deere COOL-GARD is used, the drain interval is 3000 hours or 36 months. The drain interval may be extended to 5000 hours or 60 months of operation, **provided that the coolant is tested annually AND additives are replenished, as needed, by adding a supplemental coolant additive (SCA).**

If COOL-GARD is not used, the flushing interval is 2000 hours or 24 months of operation.

Drain old coolant, flush the entire cooling system, test thermostats, and fill with recommended clean coolant as follows:


1. Pressure test entire cooling system and pressure cap if not previously done. (See PRESSURE TESTING COOLING SYSTEM, in the Lubrication and Maintenance/500 Hour/12 Month Section.)
2. Slowly open the engine cooling system filler cap or radiator cap to relieve pressure and allow coolant to drain faster.
3. Open engine block drain valve (A) on right side of coolant pump on engine front cover. Drain all coolant from engine block.
4. Open radiator drain valve. Drain all coolant from radiator.
5. Remove coolant hose and thermostat at this time, if not previously done. (See TESTING THERMOSTATS OPENING TEMPERATURE later in this section.)
6. Close all drain valves after coolant has drained.



High-Pressure Fluids



Cooling System Filler Cap

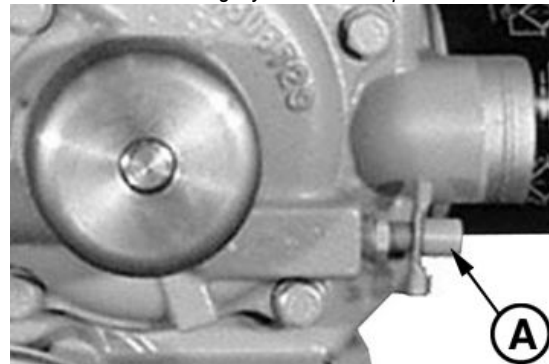

Engine Coolant Drain Valve

A—Engine Coolant Drain Valve

Continued on next page

OURGP12,00002B8 -19-03AUG07-1/2

TS281 —UN—15APR13

RG6576 —UN—20JAN93

RG12534 —UN—12DEC02

CAUTION: Do not run engine longer than 10 minutes. Doing so may cause engine to overheat which may cause burns when radiator water is draining.

7. Fill the cooling system with clean water. Run the engine about 10 minutes to stir up possible rust or sediment.
8. Stop engine, pull off lower radiator hose and remove radiator cap. Immediately drain the water from system before rust and sediment settle.
9. After draining water, close drain valves. Reinstall radiator cap and radiator hose and clamp. Fill the cooling system with clean water and a heavy duty cooling system cleaner such as Fleetguard® RESTORE™ and RESTORE PLUS™. These products may be available from your John Deere dealer. Follow manufacturer's directions on label.
10. After cleaning the cooling system, drain cleaner and fill with water to flush the system. Run the engine about 10 minutes, remove radiator cap and pull off lower radiator hose to drain out flushing water.
11. Close all drain valves on coolant pump and radiator. Install thermostat. Reinstall radiator hose and tighten clamps securely.

IMPORTANT: Air must be expelled from cooling system when system is refilled. Loosen temperature sending unit fitting at rear of cylinder head or plug in thermostat housing to allow air to escape when filling system. Retighten fitting or plug after filling cooling system.

12. Refill system with fresh coolant at radiator until coolant touches bottom of filler neck. See specification for

*Fleetguard is a trademark of Cummins Engine Company, Inc.
RESTORE is a trademark of Fleetguard.
RESTORE PLUS is a trademark of Fleetguard.*



Radiator Cap

capacity. (See ADDING COOLANT in Service As Required Section.) Install radiator cap.

Specification

2.4 L and 3.0 L Industrial Engine— Coolant	
Capacity.....	2.6 L (2.7 qt)
2.4 L and 3.0 L Gen Set Engine—Coolant	
Capacity.....	2.9 L (3.1 qt)


13. Run engine until it reaches operating temperature. This mixes the solution uniformly and circulates it through the entire system. See GENERAL ENGINE SPECIFICATIONS in Specification Section for normal coolant temperature specification for your engine.
14. After running engine, check coolant level and entire cooling system for leaks.

RG6576—UN—20JAN93


OURGP12,00002B8 -19-03AUG07-2/2

Testing Thermostats Opening Temperature- Earlier Engines

A—Thermostat Hose
Connection

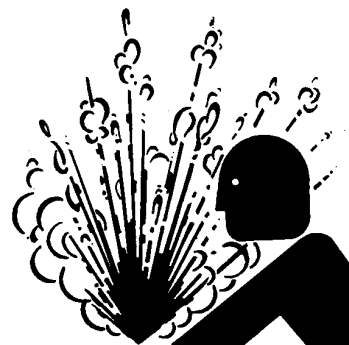

High Pressure Fluids

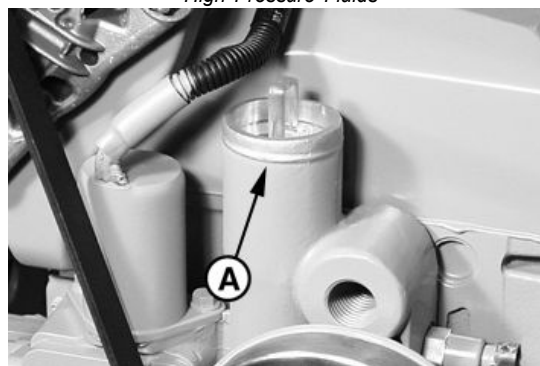

Coolant Hose to Thermostat Housing (Earlier Engine Shown)

RG41183,0000050 -19-02JAN07-1/4

TS281 —UN—15APR13

RG12789 —UN—21JAN03

To Remove Thermostat (Earlier Engines)

⚠ CAUTION: Explosive release of fluids from pressurized cooling system can cause serious burns. **DO NOT** drain coolant until it has cooled below operating temperature. Always loosen radiator pressure cap or drain valve slowly to relieve pressure.

1. Visually inspect area around thermostat housing on top of engine timing gear cover for leaks.
2. Remove radiator pressure cap and partially drain cooling system.
3. Remove coolant hose (shown removed) from thermostat housing.
4. Remove thermostat from thermostat housing by squeezing handle to release from grooves inside bore and pull out.



Removing Thermostat from Housing (Earlier Engine Shown)

5. Clean and check thermostat housing for cracks or damage.

Continued on next page

RG41183,0000050 -19-02JAN07-2/4

RG12790 —UN—21JAN03

Testing Thermostats Opening Temperature (Earlier Engines)

1. Remove thermostat(s).
2. Visually inspect thermostat(s) for corrosion or damage. If dual thermostats, replace as a matched set as necessary.


CAUTION: DO NOT allow thermostat or thermometer to rest against the side or bottom of container when heating water. Either may rupture if overheated.

3. Suspend thermostat and a thermometer in a container of water.
4. Stir the water as it heats. Observe opening action of thermostat and compare temperatures with the specification below.

NOTE: Due to varying tolerances of different suppliers, initial opening and full open temperatures may vary slightly from specified temperatures.

THERMOSTAT TEST SPECIFICATIONS

Rating	Initial Opening (Range)	Full Open (Nominal)
71°C (160°F)	69—72°C (156—162°F)	84°C (182°F)
77°C (170°F)	74—78°C (166—172°F)	89°C (192°F)
82°C (180°F)	80—84°C (175—182°F)	94°C (202°F)
89°C (192°F)	86—90°C (187—194°F)	101°C (214°F)
90°C (195°F)	89—93°C (192—199°F)	103°C (218°F)
92°C (197°F)	89—93°C (193—200°F)	105°C (221°F)
96°C (205°F)	94—97°C (201—207°F)	100°C (213°F)
99°C (210°F)	96—100°C (205—212°F)	111°C (232°F)

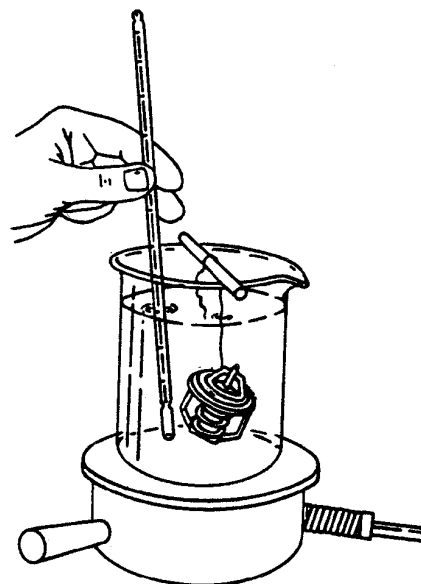

Testing Thermostat Opening Temperature


5. Remove thermostat and observe its closing action as it cools. In ambient air the thermostat should close completely. Closing action should be smooth and slow.
6. Replace any defective thermostat.

RG41183,0000050 -19-02JAN07-3/4

To Install Thermostats (Earlier Engines)

1. Insert thermostat in housing as shown until both tabs (A) are fully engaged in the groove in the housing bore.
2. Install coolant hose to thermostat cover. Tighten clamp.
3. If not already done, fill cooling system and check for leaks.

IMPORTANT: Air must be expelled from cooling system when filling. Loosen temperature sending unit fitting at rear of cylinder head or plug in thermostat housing to allow air to escape when filling system. Tighten fitting or plug when all air has been expelled.

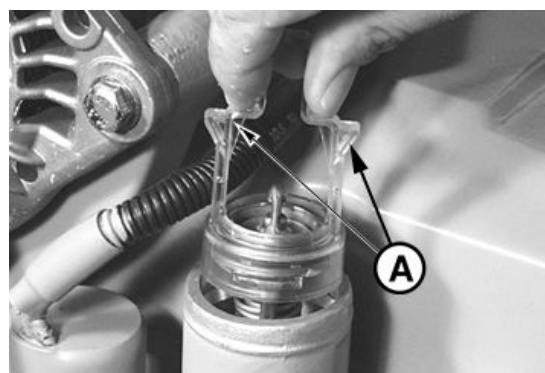

Installing Thermostat (Earlier Engine Shown)

RG41183,0000050 -19-02JAN07-4/4

Testing Thermostats Opening Temperature

To Remove Thermostat

⚠ CAUTION: Explosive release of fluids from pressurized cooling system can cause serious burns. **DO NOT** drain coolant until it has cooled below operating temperature. Always loosen radiator pressure cap or drain valve slowly to relieve pressure.


1. Visually inspect area around thermostat housing on top of engine timing gear cover for leaks.
2. Remove radiator pressure cap and partially drain cooling system.
3. Remove coolant hose (shown removed) from thermostat housing.
4. Remove snap ring (A) from thermostat housing.
5. Remove thermostat (B) from thermostat housing.
6. Clean and check thermostat housing for cracks or damage.

A—Snap Ring

B—Thermostat



High Pressure Fluids

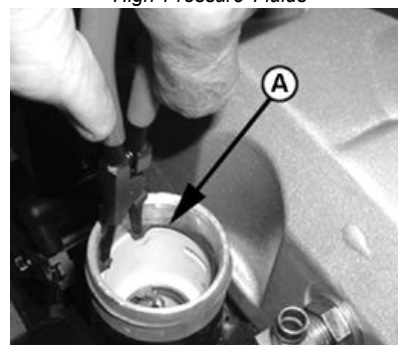

Remove Snap Ring



Remove Thermostat

Continued on next page

OUOD006,00000C1 -19-03AUG07-1/3

TS281 —UN—15APR13

RG14940 —UN—03JAN07

RG14941 —UN—03JAN07

Testing Thermostats Opening Temperature

1. Remove thermostat(s).
2. Visually inspect thermostat(s) for corrosion or damage. If dual thermostats, replace as a matched set as necessary.


CAUTION: DO NOT allow thermostat or thermometer to rest against the side or bottom of container when heating water. Either may rupture if overheated.

3. Suspend thermostat and a thermometer in a container of water.
4. Stir the water as it heats. Observe opening action of thermostat and compare temperatures with the specification below.

NOTE: Due to varying tolerances of different suppliers, initial opening and full open temperatures may vary slightly from specified temperatures.

THERMOSTAT TEST SPECIFICATIONS

Rating	Initial Opening (Range)	Full Open (Nominal)
71°C (160°F)	69—72°C (156—162°F)	84°C (182°F)
77°C (170°F)	74—78°C (166—172°F)	89°C (192°F)
82°C (180°F)	80—84°C (175—182°F)	94°C (202°F)
89°C (192°F)	86—90°C (187—194°F)	101°C (214°F)
90°C (195°F)	89—93°C (192—199°F)	103°C (218°F)
92°C (197°F)	89—93°C (193—200°F)	105°C (221°F)
96°C (205°F)	94—97°C (201—207°F)	100°C (213°F)
99°C (210°F)	96—100°C (205—212°F)	111°C (232°F)

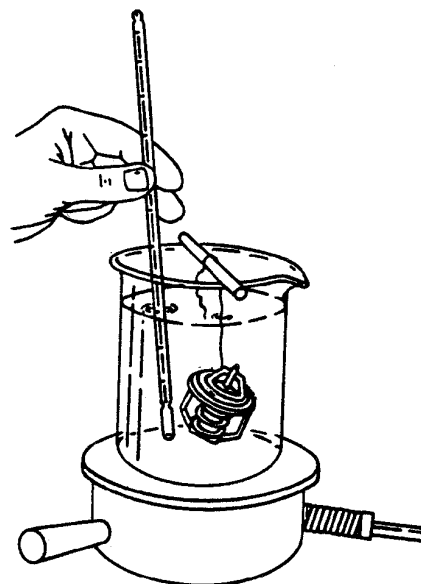

Testing Thermostat Opening Temperature

5. Remove thermostat and observe its closing action as it cools. In ambient air the thermostat should close completely. Closing action should be smooth and slow.
6. Replace any defective thermostat.

Continued on next page

OUOD006,00000C1 -19-03AUG07-2/3

RG5971 —UN—23NOV97


To Install Thermostats

1. Insert thermostat (A) in housing.
2. Install snap ring (B) in groove.
3. Install coolant hose to thermostat cover. Tighten clamp.
4. If not already done, fill cooling system and check for leaks.


IMPORTANT: Air must be expelled from cooling system when filling. Loosen temperature sending unit fitting at rear of cylinder head or plug in thermostat housing to allow air to escape when filling system. Tighten fitting or plug when all air has been expelled.

A—Thermostat

B—Snap Ring

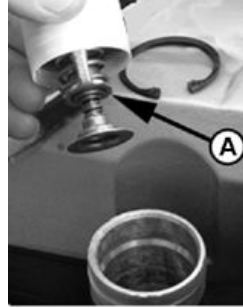

Install Thermostat

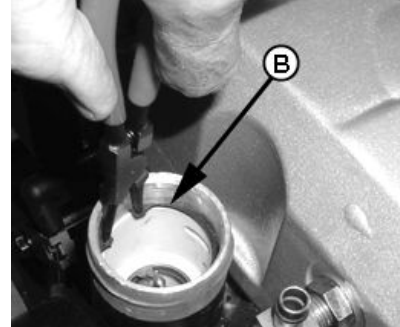

Install Snap Ring

RG14942 —UN—03JAN07


RG14943 —UN—03JAN07

OUOD006,00000C1 -19-03AUG07-3/3

Service As Required

Additional Service Information

This is not a detailed service manual. If you want more detailed service information, contact your John Deere dealer or engine distributor.

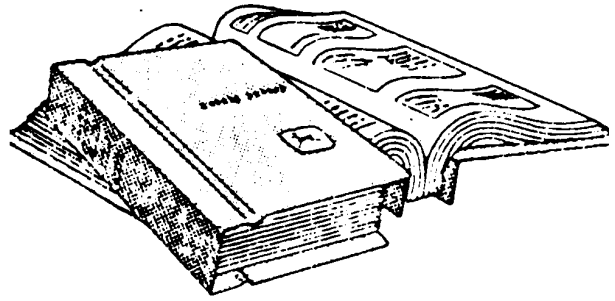

Component Technical Manuals

OURGP11,0000048 -19-23AUG10-1/1


RG4624 —UN—15DEC88

Do Not Modify Fuel System

IMPORTANT: Modification or alteration of the fuel injection system, the injection timing, or the fuel injectors in ways not recommended by the manufacturer will terminate the warranty obligation to the purchaser.

In addition, tampering with fuel system which alters emission-related equipment on engines may result in fines or other penalties, per EPA regulations or other local emission laws.

Do not attempt to service fuel injectors yourself. Special training and special tools are required. (See your authorized servicing dealer or engine distributor.)

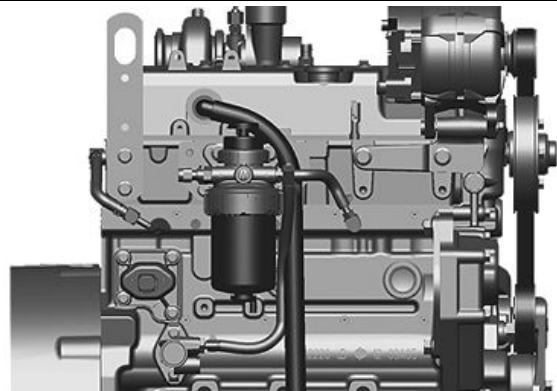

Fuel System

OUOD006,000011D -19-19OCT07-1/1

RG15478 —UN—19OCT07

Adding Coolant

CAUTION: Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut off engine. Only remove filler cap when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.

IMPORTANT: Never pour cold liquid into a hot engine, as it may crack cylinder head or block. **DO NOT** operate engine without coolant for even a few minutes.


John Deere Cooling System Sealer may be added to the radiator to stop leaks on a temporary or emergency basis only. **DO NOT** use any other stop-leak additives in the system. Leaks should be permanently repaired as soon as possible.

Air must be expelled from cooling system when coolant is added.

1. Loosen temperature sending unit fitting at rear of cylinder head or plug in side of thermostat housing to allow air to escape when filling system.

IMPORTANT: When adding coolant to the system, use the appropriate coolant solution. (See **ENGINE COOLANT SPECIFICATIONS** in Fuels, Lubricants, and Coolant Section for mixing of coolant ingredients before adding to cooling system.)

Do not overfill cooling system. A pressurized system needs space for heat expansion without overflowing at top of radiator.

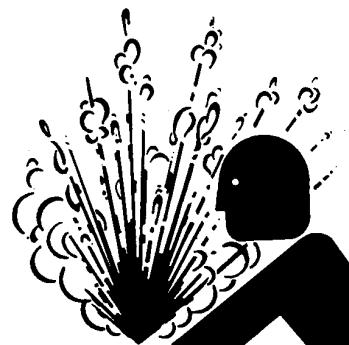

High-Pressure Fluids



Radiator Filler Neck

2. Remove radiator cap and fill until coolant level touches bottom of radiator filler neck (A).
3. Tighten plugs and fittings when air has been expelled from system.
4. Run engine until it reaches operating temperature.

OUOD006,0000070 -19-03JAN07-1/1

TS281 —UN—15APR13

RG6576A —UN—04JUN03

Pre-Start Cleaning Guide

⚠ CAUTION: Avoid injury. Before cleaning machine, allow ample time for hot surfaces to cool.

IMPORTANT: Avoid machine damage. Do not direct high-pressure spray from hose output directly at or close to electrical connections and sensors.

Cleaning as needed is recommended. Clean more frequently during heavy machine use, and when weather conditions are dry.

- Check enclosed areas daily. Clean the engine and other enclosed areas of equipment to remove debris and any buildup of oil and grease. Keep the engine and engine compartment free of combustible material.
- Check for debris buildup daily on and around intake systems, exhaust systems, and intercooler piping systems. Verify that there are no holes or leaks in intake or exhaust systems. Do not allow debris to build up near hot exhaust components. Verify that hot exhaust components are cleaned as often as environmental conditions require.
- Inspect cooling system daily to determine whether cooling system needs cleaning. Visible buildup of

residue that blocks airflow may degrade machine performance and requires more frequent cleaning depending on environmental conditions.

- Inspect difficult to observe areas daily as conditions may require additional cleaning care to remove debris.
- Check for oil and fuel leaks daily. Replace or repair sources of leaks, including gaskets, seals, breather tubes, fittings, and fluid lines.

Maintenance and Service Reminders

- Keep surfaces free of grease and oil.
- Clean up hydraulic and other fluid leaks.
- Fuel Lines — Check for leaks, cracks, and kinks.
- Fuel Pumps — Check fittings, especially compression ring couplings, for cracks and leaks.
- Fuel Injectors — Check pressure and return lines for signs of leaks.
- When servicing fuel filter or draining water separator, avoid fuel spills. Immediately clean up any fuel spill.
- Check for transmission case venting system seepage, transmission case leakage, power steering cylinder leakage, or power steering line leakage.
- Check for loose electrical connectors, damaged wiring, corrosion, or poor connections.

ZE59858,0000009 -19-07JUL20-1/1

Replacing Single Stage Air Cleaner Element

IMPORTANT: ALWAYS REPLACE air cleaner when air restriction indicator shows a vacuum greater than 625 mm (25 in.) H₂O, is torn, or visibly dirty.

NOTE: Refer to manufacturers' instructions for servicing air cleaners not supplied by John Deere. If engine is NOT equipped with an air restriction indicator, replace air filter element every 500 hours of operation or every 12 months, whichever occurs first.

1. If equipped, loosen body clamp.
2. Loosen clamp around outlet neck (A).
3. Remove air cleaner.
4. Install new filter so that overlap (B) of air cleaner outlet neck and engine intake pipe is to specification below.

Specification

Air Cleaner Neck to	
Engine Intake—Overlap.....	38 mm (1.5 in)

5. Tighten neck clamp (A) to specification below.


Specification

Air Cleaner Neck	
Clamp—Torque.....	6.8 N·m (60 lb-in.)


IMPORTANT: Do NOT overtighten body clamp.
Overtightening may cause crushing of air cleaner body. Tighten body clamp only until snug.

6. If equipped, tighten body clamp until snug.

IMPORTANT: Whenever the air cleaner has been serviced or removed, ALWAYS fully depress

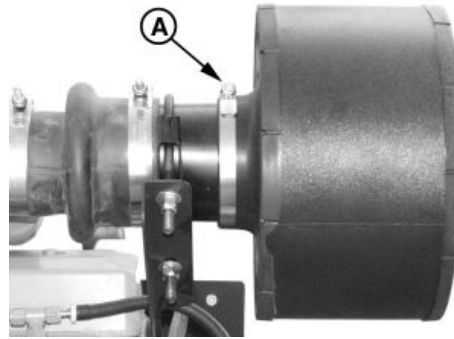

Single Stage Air Filter

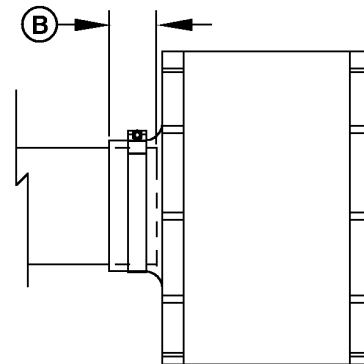

Installation of Single Stage Air Cleaner

A—Outlet Neck Clamp

B—Filter to Engine Overlap

the air restriction indicator reset button (if equipped) to assure accurate readings.

7. If equipped, fully depress air restriction indicator reset button and release to reset indicator.

RG41183,0000053 -19-03JAN07-1/1

RG11319A—UN—06SEP00

RG11320—UN—07SEP00

Replacing Axial Seal Air Cleaner Filter Element

IMPORTANT: ALWAYS REPLACE primary air cleaner element when air restriction indicator shows a vacuum greater than 625 mm (25 in.) H₂O, is torn, or visibly dirty.

NOTE: Refer to manufacturers' instructions for servicing air cleaners not supplied by John Deere. If engine is NOT equipped with an air restriction indicator, replace air filter element every 500 hours of operation or every 12 months, whichever occurs first.

1. Remove wing nut and remove canister cover shown in small illustration inset.
2. Remove wing nut (A) and remove primary element (B) from canister.
3. Thoroughly clean all dirt from inside canister.


NOTE: Some engines may have a dust unloader valve (C) on the air cleaner. If equipped, squeeze valve tip to release any trapped dirt particles.

IMPORTANT: Remove secondary (safety) element (E) ONLY for replacement. DO NOT attempt to clean, wash, or reuse secondary element. Replacement of secondary element is usually necessary ONLY when primary element has a hole in it.


4. To replace secondary element, remove retaining nut (D) and secondary element (E). Immediately replace secondary element with new element to prevent dust from entering air intake system.
5. Install new primary element and tighten wing nut securely. Install cover assembly and tighten retaining wing nut securely.

IMPORTANT: Whenever the air cleaner has been serviced or had cover removed, ALWAYS fully depress the air restriction indicator reset button (if equipped) to assure accurate readings.


6. If equipped, fully depress air restriction indicator reset button and release to reset indicator.

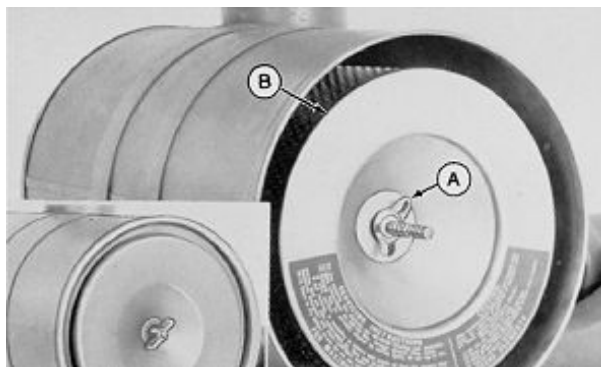

Wing Nut and Primary Element

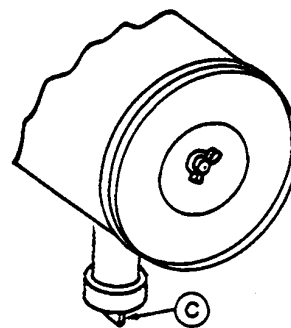

Dust Unloader Valve

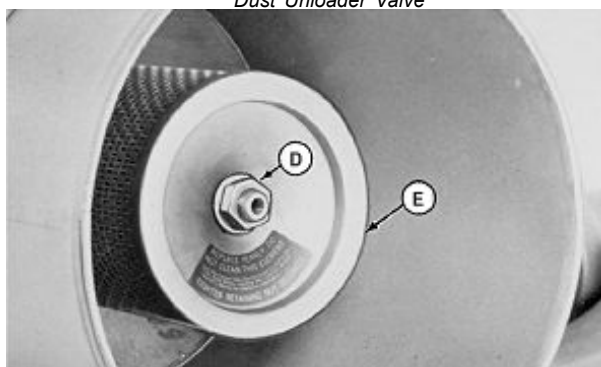

Retaining Nut and Secondary Element

A—Wing Nut
B—Primary Element
C—Dust Unloader Valve

D—Retaining Nut
E—Secondary Element

RG4686—UN—20DEC88

RG4687—UN—20DEC88

RG11068—UN—26JUN00

RG41183,0000054 -19-03JAN07-1/1

Replacing Radial Seal Air Cleaner Filter Element

IMPORTANT: ALWAYS REPLACE primary air cleaner element when air restriction indicator shows a vacuum greater than 625 mm (25 in.) H₂O, is torn, or visibly dirty.

NOTE: Refer to manufacturers' instructions for servicing air cleaners not supplied by John Deere. If engine is NOT equipped with an air restriction indicator, replace air filter element every 500 hours of operation or every 12 months, whichever occurs first.

1. Unlatch and remove dust cup/cover (A) of air cleaner.
2. Move end of filter (B) back and forth gently to break seal.
3. Pull filter (B) off outlet tube and out of housing.
4. Thoroughly clean all dirt from inside housing and from outlet bore.

IMPORTANT: Remove secondary (safety) element (C) ONLY for replacement. DO NOT attempt to clean, wash, or reuse secondary element. Replacement of secondary element is usually necessary ONLY when primary element has a hole in it.

5. To replace secondary element (C), pull filter element out gently. Immediately replace secondary element with new element to prevent dust from entering air intake system.
6. Install new primary filter element. Apply pressure by hand at outer rim of filter.

IMPORTANT: Do NOT use latches on cover to force filter into air cleaner. Using cover to force filter will damage cleaner housing.

7. Close housing with dust unloader valve aimed down and latch latches.

IMPORTANT: Whenever the air cleaner has been serviced or cover has been removed, ALWAYS fully depress the air restriction indicator reset button (if equipped) to assure accurate readings.

8. If equipped, fully depress air restriction indicator reset button and release to reset indicator.



Dust Cup/Cover



Primary Filter Element



Secondary Filter Element

A—Dust Cap/Cover
B—Primary Filter Element

C—Secondary Filter Element

RG11321A—UN—08SEP00

RG11322A—UN—08SEP00

RG11327A—UN—08SEP00

RG41183,0000055 -19-03JAN07-1/1


Replacing Fan and Alternator Belt

Refer to CHECKING BELT TENSIONER SPRING TENSION AND BELT WEAR in Lubrication and Maintenance/500 Hour/12 Month Section for additional information on the belt tensioner.


1. Inspect belts for cracks, fraying, or stretched out areas. Replace if necessary.
2. To replace belt, release tension on belt using a 3/8-inch drive arm (B) on tension arm.
3. Remove poly-vee belt from pulleys and discard belt.
4. Install new belt, making sure belt is correctly seated in all pulley grooves. Refer to belt routing at right for your application.
5. Best method to install belt is:
Back-wrap it around the fan pulley (FD), route it over the alternator (A), over top of the idler pulley (I), then down and around the crankshaft pulley (CSP). Finally, use a 3/8-inch drive arm to rotate the tensioner (T) to the tensioned position and slip the belt (back-wrap) over the coolant pump pulley (CP), then release the tensioner.
6. Apply tension to belt with tensioner. Remove drive arm.
7. Start engine and check belt alignment.

A—Alternator
CSP—Crankshaft Pulley
FD—Fan Drive

I— Idler Pulley
T— Tensioner
CP—Coolant Pump

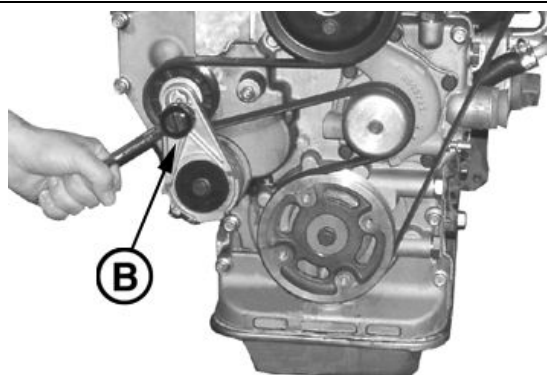

Replacing Belt

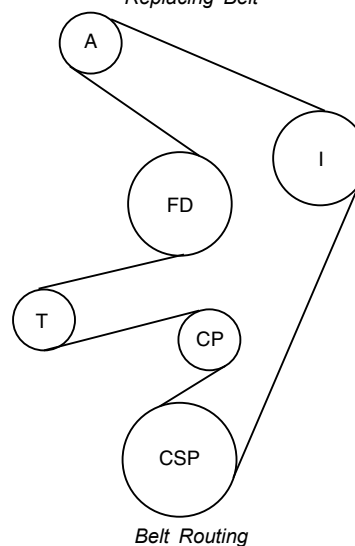

Belt Routing

RG41183,0000056 -19-03JAN07-1/1

RG12800—UN—21JAN03

RG12799—UN—21JAN03

Checking Fuses

Check fuses for electrical system and replace if defective. Refer to manufactures instructions and wiring diagrams for location and types of fuses.


OUOD006,0000111 -19-11OCT07-1/1

Checking Air Compressors (If Equipped)

Air compressors are offered as options with John Deere OEM engines to provide compressed air to operate air-powered devices like vehicle air brakes.

Air compressors are engine-driven piston types. They are either air cooled or cooled with engine coolant. The compressors are lubricated with engine oil. The compressor runs continuously as gear or spline driven by the auxiliary drive of the engine but has "loaded" and "unloaded" operating modes. This is controlled by the vehicle's air system (refer to vehicle technical manual for complete air system checks and services).

See your John Deere engine distributor or servicing dealer for diagnostic and troubleshooting information. If diagnosis leads to an internal fault in the compressor, replace the complete compressor as a new or remanufactured unit.

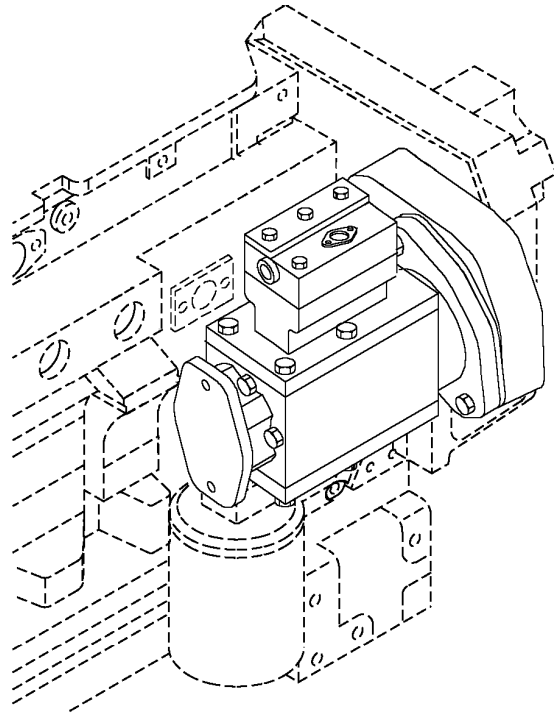

Air Compressor (Optional)


RG12836 —UN—27FEB03

OURGP12,00001E0 -19-26FEB03-1/1

Adjusting Speed Gain (Generator Sets)

An electronic governor is standard equipment for all generator set applications. The Engine Control Unit (ECU) (A) is set to maintain a specific speed during engine operation. It adjusts the amount of fuel being delivered in order to maintain that engine speed when load changes occur. The adjustment range of the gain potentiometer (B) is $\pm 20\%$ of the nominal gain value for the rated speed of the generator set. See your John Deere distributor or servicing dealer for any additional adjustments to the ECU, or for diagnostic and troubleshooting information.

IMPORTANT: Under NO circumstances should the Engine Control Unit (ECU) be opened.

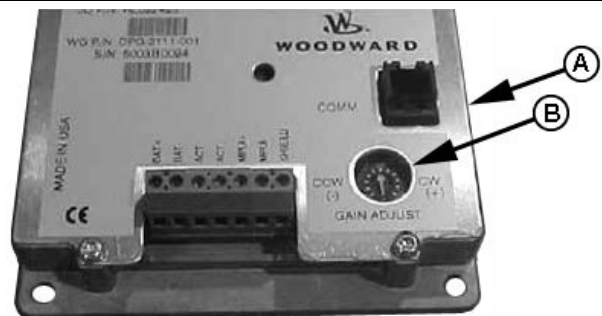

Engine Control Unit

A—Engine Control Unit

B—Gain Potentiometer

RG13537 —UN—07MAY04


OURGP12,00002BC -19-05MAY04-1/1

Priming the Fuel Filter

CAUTION: Escaping fluid under pressure can penetrate the skin causing serious injury. Avoid hazards by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure. Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury may call the Deere & Company Medical Department in Moline, Illinois, or other knowledgeable medical source.

Any time the fuel system has been opened up for service (lines disconnected or filter removed), it will be necessary

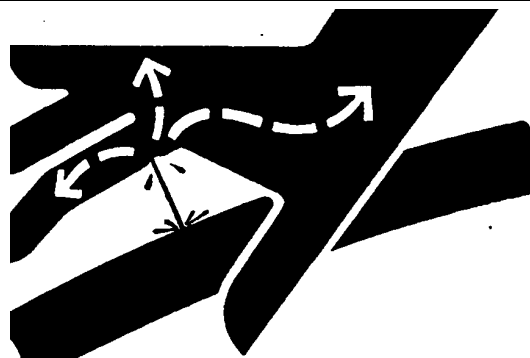

High Pressure Fluids

to prime the fuel filter. Once the fuel filter has been primed, the fuel system will purge itself while cranking the starter.


OUOD006,00000C4 -19-19OCT07-1/2

X9811 —UN—23AUG88

1. Open air bleed plug (A) two full turns by hand.
2. Pump the hand primer (B) on filter mounting base, or (if equipped) the hand primer on fuel transfer pump, until a noticeable amount of fuel and air comes out of vent opening. Continue pumping and close vent screw when fuel starts to flow.

A—Air Bleed Plug

B—Hand Primer

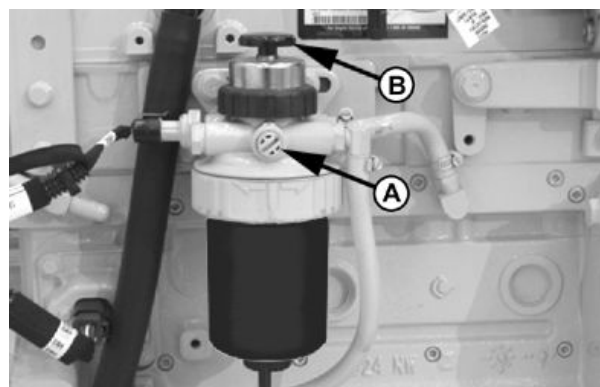

Fuel Filter Air Bleed Plug and Hand Primer

OUOD006,00000C4 -19-19OCT07-2/2

RG15630 —UN—19OCT07

Troubleshooting

General Troubleshooting Information

Troubleshooting engine problems can be difficult. An engine wiring diagram is provided in this section to help isolate electrical problems.

Refer to manufactures literature and diagrams for electrical systems not provided by John Deere.

Later in this section is a list of possible engine problems along with possible causes and corrections. The illustrated diagrams and troubleshooting information are of a general nature, final design of the overall system for your engine application may be different. See your engine distributor or servicing dealer if you are in doubt.

A reliable program for troubleshooting engine problems should include the following basic diagnostic thought process:

- Know the engine and all related systems.
- Study the problem thoroughly.
- Relate the symptoms to your knowledge of engine and systems.
- Diagnose the problem starting with the easiest things first.
- Double-check before beginning the disassembly.
- Determine cause and make a thorough repair.
- After making repairs, operate the engine under normal conditions to verify that the problem and cause was corrected.

RG41183,0000058 -19-16JAN03-1/1

Precautions for Welding

Remove paint before welding or heating (see Safety Section in this manual for more information on paint removal and high-pressure lines).

CAUTION: Avoid potentially toxic fumes and dust. Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch. Do all work outside or in a well ventilated area. Dispose of paint and solvent properly. If you sand or grind paint, avoid breathing the dust by wearing an approved respirator. If you use solvent or paint stripper, remove with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area before welding. Allow fumes to disperse at least 15 minutes before welding or heating.

IMPORTANT: Welding on the engine is **NOT ALLOWED**. If welding must be performed on the machine, follow these precautions.

IMPORTANT: High currents or electrostatic discharge into electronic components from welding may cause permanent damage.

1. Remove paint from the area to be welded and ground cable clamp location.




TS963 —UN—15MAY90

2. Disconnect the negative (-) battery cable(s) or open battery (-) switch if equipped.
3. Disconnect the positive (+) battery cable(s) or open battery (+) switch if equipped.
4. Clear or move any wiring harness sections away from the welding area.
5. Welding on engine components is not allowed.
6. Never connect the welder ground to any engine component or engine driven components that may be connected to the engine.
7. After welding, reverse steps 2—3.

DX,WELDING,PRECAUTIONS -19-06DEC10-1/1

Electrical System Schematic

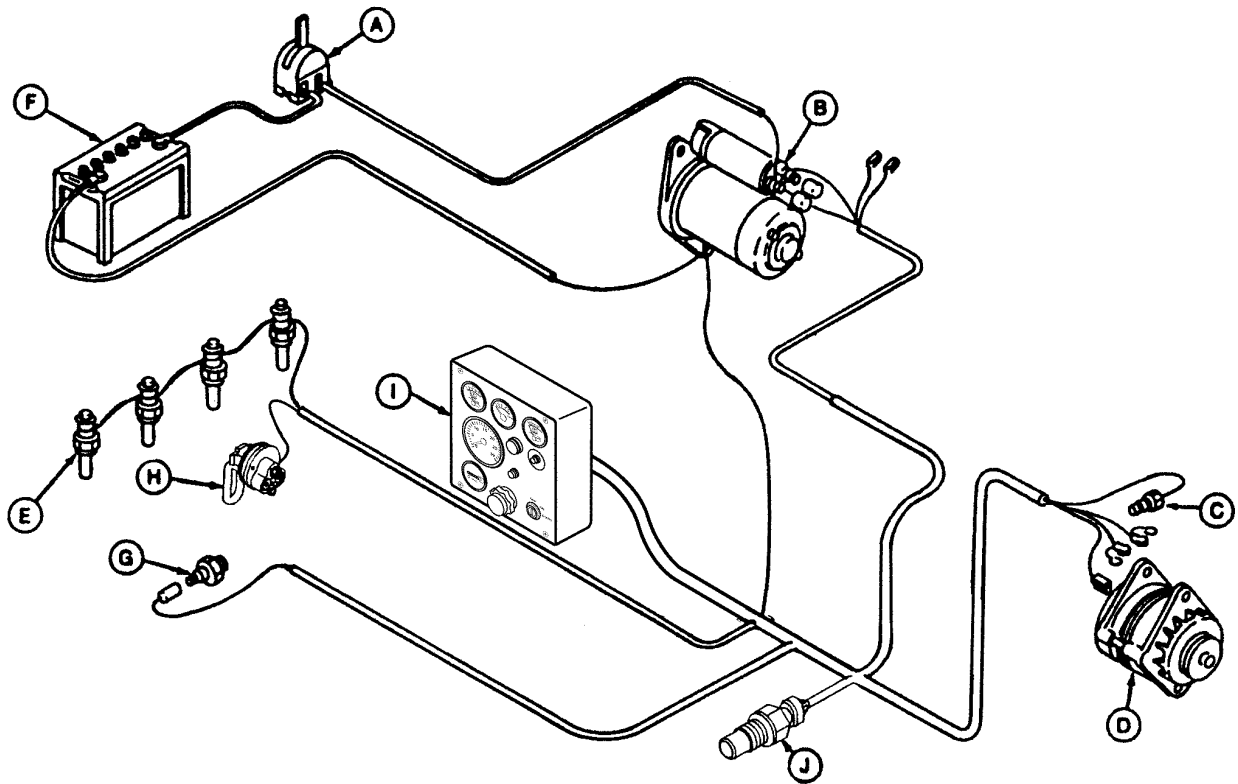

A—Battery Disconnect Switch
(Optional)
B—Starter Motor

C—Coolant Temperature Sensor
D—Alternator
E—Glow Plugs

F—Battery
G—Oil Pressure Sensor
H—Block Heater (Optional)

I—Instrument (Gauge) Panel
J—Speed Sensor

RG13538—UN—10JUN04

OURGP12,00002BB -19-04OCT07-1/1

Engine Troubleshooting

Symptom

Problem

Solution

NOTE: If using BIODIESEL blends above B20, the possibility of some of the symptoms listed below, such as power loss, could increase.

Engine cranks but will not start

No fuel.	Check fuel in tank and manual shut-off valve.
Exhaust restricted.	Check and correct exhaust restriction.
Fuel filter plugged or full of water.	Replace fuel filter or drain water from filter.
Unit injection pumps not getting fuel /or air in fuel system.	Check fuel flow at transfer pump or bleed fuel system.
Faulty injection pumps or nozzles.	Consult authorized diesel repair station for repair or replacement.

Engine hard to start or will not start

Engine starting under load.	Disengage driveline.
Improper starting procedure.	Review starting procedure.
No fuel.	Check fuel tank.
Air in fuel line.	Bleed fuel line.
Cold weather.	Activate glow plugs.
Slow starter speed.	See "Starter Cranks Slowly".
Crankcase oil too heavy.	Use oil of proper viscosity.
Improper type of fuel.	Consult fuel supplier; use proper type fuel for operating conditions.
Water, dirt, or air in fuel system.	Drain, flush, fill, and bleed system.
Clogged fuel filter.	Replace filter element.
Dirty or faulty injection nozzles.	Have authorized servicing dealer or engine distributor check injectors.
Injection shut-off not reset.	Turn key switch to "OFF" then to "ON".

Engine overspeeds at startup (Generator set engines)

Low gain on electronic governor.	Increase governor speed gain.
----------------------------------	-------------------------------

Continued on next page

OUOD006,00000CB -19-19OCT07-1/6

Symptom	Problem	Solution
Sluggish response to load changes (Generator set engines)	Low gain on electronic governor.	Increase governor speed gain.
Engine knocks	Low engine oil level.	Add oil to engine crankcase.
	Unit injection pumps out of time.	See your authorized servicing dealer or engine distributor.
	Hydraulic valve lifters.	See your authorized servicing dealer or engine distributor.
	Low coolant temperature.	Remove and check thermostat.
	Engine overheating.	See "Engine Overheats".
Engine runs irregularly or stalls frequently	Low coolant temperature.	Remove and check thermostat.
	Clogged fuel filter.	Replace fuel filter element.
	Water, dirt, or air in fuel system.	Drain, flush, fill, and bleed system.
	Dirty or faulty injectors.	Have authorized servicing dealer or engine distributor check injectors.
Below normal engine temperature	Defective thermostat.	Remove and check thermostat.
	Defective temperature gauge or sender.	Check gauge, sender, and connections.
Lack of power	Engine overloaded.	Reduce load.
	Intake air restriction.	Service air cleaner.
	Clogged fuel filter.	Replace filter elements.
	Improper type of fuel.	Use proper fuel.
	Overheated engine.	See "Engine Overheats".
	Below normal engine temperature.	Remove and check thermostat.
	Improper valve clearance.	See your authorized servicing dealer or engine distributor.
	Dirty or faulty injectors.	Have authorized servicing dealer or engine distributor check injectors.

Continued on next page

OUOD006,00000CB -19-19OCT07-2/6

Symptom	Problem	Solution
	Injector tip deposits.	Use John Deere approved biodiesel fuel conditioners containing detergents.
	Unit injection pumps out of time	See your authorized servicing dealer or engine distributor.
	Turbocharger not functioning.	See your authorized servicing dealer or engine distributor.
	Leaking exhaust manifold gasket.	See your authorized servicing dealer or engine distributor.
	Restricted fuel hose.	Clean or replace fuel hose.
	Low fast idle speed.	See your authorized servicing dealer or engine distributor.
Low oil pressure	Low oil level.	Add oil.
	Improper type of oil.	Drain, fill crankcase with oil of proper viscosity and quality.
High oil consumption	Crankcase oil too light.	Use proper viscosity oil.
	Oil leaks.	Check for leaks in lines, gaskets, and drain plug.
	Restricted crankcase vent tube.	Clean vent tube.
	Defective turbocharger.	See your authorized servicing dealer or engine distributor.
Engine emits white smoke	Improper type of fuel.	Use proper fuel.
	Low engine temperature.	Warm up engine to normal operating temperature.
	Defective thermostat.	Remove and check thermostat.
	Defective fuel injectors.	See your authorized servicing dealer or engine distributor.
	Engine out of time.	See your authorized servicing dealer or engine distributor.
Engine emits black or gray exhaust smoke	Improper type of fuel.	Use proper fuel.
	Clogged or dirty air cleaner.	Service air cleaner.

Continued on next page

OUOD006,00000CB -19-19OCT07-3/6

Symptom	Problem	Solution
	Engine overloaded.	Reduce load.
	Fuel injectors dirty.	Use John Deere approved Biodiesel or diesel fuel conditioners. If no improvement is seen, see your authorized servicing dealer or engine distributor.
	Engine out of time.	See your authorized servicing dealer or engine distributor.
	Turbocharger not functioning.	See your authorized servicing dealer or engine distributor.
Engine overheats	Engine overloaded.	Reduce load.
	Low coolant level.	Fill radiator to proper level, check radiator and hoses for loose connections or leaks.
	Faulty radiator cap.	Have serviceman check.
	Stretched poly-vee belt or defective belt tensioner.	Check automatic belt tensioner and check belts for stretching. Replace as required.
	Low engine oil level.	Check oil level. Add oil as required.
	Cooling system needs flushing.	Flush cooling system.
	Defective thermostat.	Remove and check thermostat.
	Defective temperature gauge or sender.	Check water temperature with thermometer and replace, if necessary.
High fuel consumption	Incorrect grade of fuel.	Use correct grade of fuel.
	Improper type of fuel.	Use proper type of fuel.
	Clogged or dirty air cleaner.	Service air cleaner.
	Engine overloaded.	Reduce load.
	Improper valve clearance.	See your authorized servicing dealer or engine distributor.
	Injector tip deposits.	Use John Deere approved biodiesel fuel conditioners containing detergents.

Continued on next page

OUOD006,00000CB -19-19OCT07-4/6

Symptom	Problem	Solution
	Fuel injectors dirty.	See your authorized servicing dealer or engine distributor.
	Engine out of time.	See your authorized servicing dealer or engine distributor.
	Defective turbocharger.	See your authorized servicing dealer or engine distributor.
	Low engine temperature.	Check thermostat.
Undercharged electrical system	Excessive electrical load from added accessories.	Remove accessories or install higher output alternator.
	Excessive engine idling.	Increase engine rpm when heavy electrical load is used.
	Poor electrical connections on battery, ground strap, starter, or alternator.	Inspect and clean or tighten connections as necessary.
	Defective battery.	Test battery.
Battery uses too much water	Defective alternator.	Test charging system.
	Cracked battery case.	Check for moisture and replace as necessary.
	Defective battery.	Test battery.
	Battery charging rate too high.	Test charging system.
Batteries will not charge	Loose or corroded connections.	Clean and tighten connections.
	Sulfated or worn-out batteries.	See your authorized servicing dealer or engine distributor.
	Stretched poly-vee belt or defective belt tensioner.	Adjust belt tension or replace belts.
Starter will not crank	Engine driveline engaged.	Disengage engine driveline.
	Loose or corroded connections.	Clean and tighten loose connections.
	Low battery output voltage.	See your authorized servicing dealer or engine distributor.
	Faulty start circuit relay.	See your authorized servicing dealer or engine distributor.
	Blown main system fuse.	Replace electrical system fuse.

Continued on next page

OUOD006,00000CB -19-19OCT07-5/6

Troubleshooting

Symptom	Problem	Solution
Starter cranks slowly	Low battery output.	See your authorized servicing dealer or engine distributor.
	Crankcase oil too heavy.	Use proper viscosity oil.
	Loose or corroded connections.	Clean and tighten loose connections.
Entire electrical system does not function	Faulty battery connection.	Clean and tighten connections.
	Sulfated or worn-out batteries.	See your authorized servicing dealer or engine distributor.
	Blown main system fuse.	Replace electrical system fuse.

OUOD006,00000CB -19-19OCT07-6/6

Storage

Engine Storage Guidelines

IMPORTANT: Special considerations should be taken prior to storage when using BioDiesel. See [BioDiesel Fuel](#) in the Fuels, Lubricants, and Coolant Section.

1. John Deere engines can be stored outside for up to three months with no long-term preparation if covered by a waterproof covering. No outside storage is recommended without a waterproof covering.
2. John Deere engines can be stored in a standard overseas shipping container for up to three months with no long-term preparation.
3. John Deere engines can be stored inside for up to six months with no long-term preparation.
4. John Deere engines expected to be stored more than six months **must** have long-term storage preparation. See [Preparing Engine for Long-Term Storage](#) in the Storage Section.

OURGP12,00000DF -19-04FEB15-1/1

Preparing Engine for Long-Term Storage

IMPORTANT: Any time the engine is not used for over six months, the following recommendations for storing it and removing it from storage helps to minimize corrosion and deterioration.

IMPORTANT: Long-term storage is not advised when using BioDiesel. For storage longer than one year, use straight hydrocarbon fuel.

If BioDiesel must be used it is recommended the blend not exceed B7 and a high-quality fuel stabilizer be used. Storage should not exceed one year.

For more information see [BioDiesel Fuel](#) in the Fuels, Lubricants, and Coolants Section.

NOTE: The following storage preparations are used for long-term engine storage up to one year. After that, the engine should be started, warmed up, and retreated for an extended storage period.

1. Change engine oil and replace filter. Used oil does not give adequate protection. Add 30 mL of rust preventive oil to the engine crankcase for every 1 L of engine oil, or 1 oz. of rust preventative oil per 1 qt. of engine oil. This rust preventive oil should be an SAE 10W oil with 1%-4% morpholine or equivalent vapor corrosion inhibitor, such as NOX RUST VCI-10 OIL from Daubert Chemical Company, Inc.
 2. Replace air cleaner.
 3. Draining and flushing of cooling system is not necessary if the engine is only stored for less than one year. However, for extended storage periods of a year or longer, it is recommended that the cooling system be drained, flushed, and refilled. Refill with appropriate coolant. See [Diesel Engine Coolant \(engine with wet sleeve cylinder liners\)](#) in the Fuels, Lubricants, and Coolants Section.
 4. Prepare a solution of diesel fuel and rust preventive oil in a temporary container, add 78 mL of rust preventive oil per 1 L of diesel fuel, 10 oz. of rust preventive oil per 1 gal. of diesel fuel.
 5. Remove existing lines and plugs as required. Run a temporary line from the temporary container to the engine fuel intake before the fuel filters, and another temporary line from the fuel return to the temporary container, so rust preventive oil solution is circulated through the injection system during cranking.
- IMPORTANT:** Do not operate starter more than 30 seconds at a time. Wait at least 2 minutes for starter to cool before trying again.
6. Crank the engine several revolutions with starter. Do not allow the engine to start. This allows rust preventive oil solution to circulate.
See your authorized dealer for the proper procedure for your application.
 7. Remove temporary lines installed in Step 5 and replace any lines or plugs previously removed.
 8. Loosen (or remove) and store fan and alternator poly-vee belt.
 9. Remove and clean batteries. Store them in a cool, dry place and keep them fully charged.
 10. Disengage the clutch for any driveline.
 11. Clean the exterior of the engine with salt-free water and touch up any scratched or chipped painted surfaces with a good quality paint.
 12. Coat all exposed bare metal surfaces with grease or corrosion inhibitor if not feasible to paint.
 13. Seal all openings on engine with plastic bags and tape.
 14. Store the engine in a dry protected place. If engine must be stored outside, cover it with a waterproof canvas or other suitable protective material and use a strong waterproof tape.

OUOD006,00000FC -19-28APR16-1/1

Removing Engine from Long Term Storage

Refer to the appropriate section for detailed services listed below or have your authorized servicing dealer or engine distributor perform services that you may not be familiar with.

1. Remove all protective coverings from engine. Unseal all openings in engine and remove covering from electrical systems.
2. Remove the batteries from storage. Install batteries (fully charged) and connect the terminals.
3. Install fan/alternator poly-vee belt if removed.
4. Fill fuel tank.
5. Perform all appropriate prestarting checks. (See DAILY PRESTARTING CHECKS in Lubrication and Maintenance/Daily Section.)
6. Crank engine for 20 seconds with starter (do not allow the engine to start). Wait 2 minutes and crank engine an additional 20 seconds to assure bearing surfaces are adequately lubricated.
7. Start engine and run at low idle and no load for several minutes. Warm up carefully and check all gauges for correct readings before placing engine under load.
8. On the first day of operation after storage, check overall engine for leaks and check all gauges for correct readings.

IMPORTANT: DO NOT operate starter more than 30 seconds at a time. Wait at least 2 minutes for starter to cool before trying again.

RG, RG34710, 5613 -19-20MAY96-1/1

Specifications

General OEM Engine Specifications

ITEM	UNIT OF MEASURE	4024HF	5030HF
Number of Cylinders	—	4	5
Bore	mm (in.)	86 (3.39)	86 (3.39)
Stroke	mm (in.)	105 (4.13)	105 (4.13)
Displacement	L (cu. in.)	2.44 (149)	3.05 (186)
Compression Ratio ^a	—	18.2:1	18.2:1
Max. Crank Pressure	kPa (in. H ₂ O)	0.5 (2)	0.5 (2)
Oil Pressure At Rated Speed - 2800 rpm - Gen (Prime) - Gen (Standby) - HF295, 2400 rpm - 2800 rpm, 62 kW (82 hp) - 2800 rpm, 74 kW (99 hp) - 2400 rpm, 57 kW (76 hp) - 2400 rpm, 62 kW (82 hp) - 2400 rpm, 68 kW (91 hp)	kPa (psi)	380 (55) 273 (40) 273 (40) 320 (46)	273 (40) 276 (40) 340 (49) 360 (52) 320 (46) 320 (46) 325 (47)
Oil Pressure At Low Idle	kPa (psi)	250 (36)	250 (36)
Coolant Temperature- Range - Industrial - Gen	°C (°F)	82—94 (180—201) 82—94 (180—201)	89—100 (192—212) 82—94 (180—201)
Coolant Temperature- Maximum - Industrial - Gen	°C (°F)	105 (221) 110 (230)	110 (230) 110 (230)
Cooling System Capacity	L (qt)	2.6 (2.7)	2.9 (3.1)
Length	mm (in.)	662 (26.1)	799 (31.5)
Width	mm (in.)	566 (22.3)	566 (22.3)
Height	mm (in.)	772 (30.4)	800 (31.5)
Weight	kg (lb)	251 (554)	287 (633)

NOTE: Engines with suffix "H" are turbocharged and aftercooled.

^aPiston compression ratio may vary based on production date.

OUOD006,00000B0 -19-08JUL08-1/1

Engine Power Rating and Speed Specifications

NOTE: Specifications are subject to change without notice.

Engine speeds listed are as preset to factory specification. In some cases, slow idle speed will be reset depending upon specific vehicle application requirements. Refer to your machine

technical manual for engine speeds that are different from those preset at the factory.

Power ratings specify flywheel power for a bare engine without the drag effect of a cooling fan or other accessories like an air compressor.

POWER RATINGS ON DYNAMOMETER FOR OEM ENGINES

Engine Model	Fuel System Option Code or Hz Rating	Engine Application	Slow Idle (rpm)	Fast Idle (rpm)	Rated Speed at Full Load (rpm)	Power Rating kW (HP) ^a
4024TF220	50 Hz	Gen Set	1400	1560	1500	21 (28)
	50 Hz	Gen Set	1400	1560	1500	31 (42)
	60 Hz	Gen Set	1400	1870	1800	36 (48)
	1602, 1608, 1657	Industrial	900	3000	2800	37 (49)
	1615	Industrial	900	2550	2400	42 (57)
	1601, 1654	Industrial	900	3000	2800	45 (60)
	1601, 1603, 1654	Industrial	900	3000	2800	49 (66)
4024TF281	60 Hz	Gen Set			1800	36 (49)
	1632, 1657	Industrial	900		2800	36 (48)
5030HF220	50 Hz	Gen Set	1400	1560	1500	62 (84)
	60 Hz	Gen Set	1400	1870	1800	72 (96)
	1606	Industrial	900	3000	2800	74 (99)
5030TF220	50 Hz	Gen Set	1400	1560	1500	41 (56)
	1604, 1655	Industrial	900	3000	2800	56 (75)
	60 Hz	Gen Set	1400	1870	1800	60 (80)
	1605, 1656	Industrial	900	3000	2800	63 (84)

^aPower rating is under full load and at rated speed listed. Gen set power ratings are standby power.

JR74534,0000460 -19-28MAY13-1/1

Engine Crankcase Oil Capacities

To determine the option code for the oil fill quantity of your engine, refer to the engine option code label affixed to the rocker arm cover. The first two digits of the code (19) identify the oil pan option group. The last two digits of each code identify the specific oil pan on your engine.

NOTE: Crankcase oil capacity may vary slightly. ALWAYS fill crankcase to within crosshatch marks on dipstick. DO NOT overfill.


The following table lists approximate engine crankcase oil capacities for each "19__" option code for these engines.

Engine Model	Option Code	Crankcase Oil Capacity L (qt)
4024	1901	8 (8.5)
4024	1909	8 (8.5)
4024	1911	8 (8.5)
4024	1912	8 (8.5)
4024	1921	8 (8.5)
4024	1924	8 (8.5)
4024	1925	8 (8.5)
4024	1926	8 (8.5)
5030	1902	11 (11.5)
5030	1910	11 (11.5)
5030	1913	11 (11.5)
5030	1914	11 (11.5)

JR74534,0000461 -19-09JAN12-1/1

Unified Inch Bolt and Screw Torque Values

 TS1671 —UN—01MAY03




Bolt or Screw Size	SAE Grade 1 ^a				SAE Grade 2 ^b				SAE Grade 5, 5.1 or 5.2				SAE Grade 8 or 8.2			
	Hex Head ^c		Flange Head ^d		Hex Head ^c		Flange Head ^d		Hex Head ^c		Flange Head ^d		Hex Head ^c		Flange Head ^d	
	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in
1/4	3.1	27.3	3.2	28.4	5.1	45.5	5.3	47.3	7.9	70.2	8.3	73.1	11.2	99.2	11.6	103
													N·m	lb·ft	N·m	lb·ft
5/16	6.1	54.1	6.5	57.7	10.2	90.2	10.9	96.2	15.7	139	16.8	149	22.2	16.4	23.7	17.5
									N·m	lb·ft	N·m	lb·ft				
3/8	10.5	93.6	11.5	102	17.6	156	19.2	170	27.3	20.1	29.7	21.9	38.5	28.4	41.9	30.9
					N·m	lb·ft	N·m	lb·ft								
7/16	16.7	148	18.4	163	27.8	20.5	30.6	22.6	43	31.7	47.3	34.9	60.6	44.7	66.8	49.3
	N·m	lb·ft	N·m	lb·ft												
1/2	25.9	19.1	28.2	20.8	43.1	31.8	47	34.7	66.6	49.1	72.8	53.7	94	69.3	103	75.8
9/16	36.7	27.1	40.5	29.9	61.1	45.1	67.5	49.8	94.6	69.8	104	77	134	98.5	148	109
5/8	51	37.6	55.9	41.2	85	62.7	93.1	68.7	131	96.9	144	106	186	137	203	150
3/4	89.5	66	98	72.3	149	110	164	121	230	170	252	186	325	240	357	263
7/8	144	106	157	116	144	106	157	116	370	273	405	299	522	385	572	422
1	216	159	236	174	216	159	236	174	556	410	609	449	785	579	860	634
1-1/8	305	225	335	247	305	225	335	247	685	505	751	554	1110	819	1218	898
1-1/4	427	315	469	346	427	315	469	346	957	706	1051	775	1552	1145	1703	1256
1-3/8	564	416	618	456	564	416	618	456	1264	932	1386	1022	2050	1512	2248	1658
1-1/2	743	548	815	601	743	548	815	601	1665	1228	1826	1347	2699	1991	2962	2185

The nominal torque values listed are for general use only with the assumed wrenching accuracy of 20%, such as a manual torque wrench. DO NOT use these values if a different torque value or tightening procedure is given for a specific application. For lock nuts, for stainless steel fasteners, or for nuts on U-bolts, see the tightening instructions for the specific application.

Replace fasteners with the same or higher property class. If higher property class fasteners are used, tighten these to the strength of the original.

- Make sure that fastener threads are clean.
- Apply a thin coat of Hy-Gard™ or equivalent oil under the head and on the threads of the fastener, as shown in the following image.
- Be conservative with the amount of oil to reduce the potential for hydraulic lockup in blind holes due to excessive oil.
- Properly start thread engagement.

TS1741 —UN—22MAY18

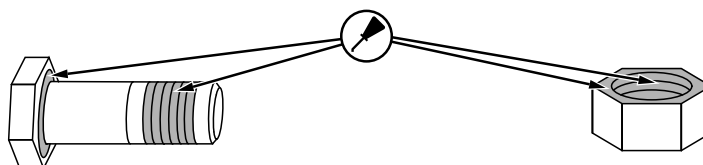

^aGrade 1 applies for hex cap screws over 6 in (152 mm) long, and for all other types of bolts and screws of any length.

^bGrade 2 applies for hex cap screws (not hex bolts) up to 6 in (152 mm) long.


^cHex head column values are valid for ISO 4014 and ISO 4017 hex head, ISO 4162 hex socket head, and ISO 4032 hex nuts.

^dHex flange column values are valid for ASME B18.2.3.9M, ISO 4161, or EN 1665 hex flange products.

DX,TORQ1 -19-30MAY18-1/1

Metric Bolt and Screw Torque Values

TS1742 —UN—31MAY18

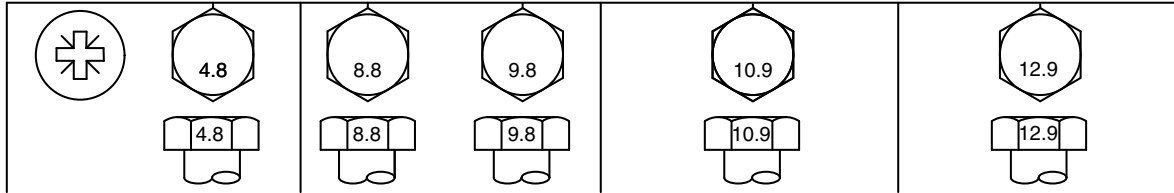


Bolt or Screw Size	Class 4.8				Class 8.8 or 9.8				Class 10.9				Class 12.9			
	Hex Head ^a		Flange Head ^b		Hex Head ^a		Flange Head ^b		Hex Head ^a		Flange Head ^b		Hex Head ^a		Flange Head ^b	
	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in
M6	3.6	31.9	3.9	34.5	6.7	59.3	7.3	64.6	9.8	86.7	10.8	95.6	11.5	102	12.6	112
									N·m	lb·ft	N·m	lb·ft	N·m	lb·ft	N·m	lb·ft
M8	8.6	76.1	9.4	83.2	16.2	143	17.6	156	23.8	17.6	25.9	19.1	27.8	20.5	30.3	22.3
			N·m	lb·ft	N·m	lb·ft	N·m	lb·ft								
M10	16.9	150	18.4	13.6	31.9	23.5	34.7	25.6	46.8	34.5	51	37.6	55	40.6	60	44.3
	N·m	lb·ft														
M12	—	—	—	—	55	40.6	61	45	81	59.7	89	65.6	95	70.1	105	77.4
M14	—	—	—	—	87	64.2	96	70.8	128	94.4	141	104	150	111	165	122
M16	—	—	—	—	135	99.6	149	110	198	146	219	162	232	171	257	190
M18	—	—	—	—	193	142	214	158	275	203	304	224	322	245	356	263
M20	—	—	—	—	272	201	301	222	387	285	428	316	453	334	501	370
M22	—	—	—	—	365	263	405	299	520	384	576	425	608	448	674	497
M24	—	—	—	—	468	345	518	382	666	491	738	544	780	575	864	637
M27	—	—	—	—	683	504	758	559	973	718	1080	797	1139	840	1263	932
M30	—	—	—	—	932	687	1029	759	1327	979	1466	1081	1553	1145	1715	1265
M33	—	—	—	—	1258	928	1398	1031	1788	1319	1986	1465	2092	1543	2324	1714
M36	—	—	—	—	1617	1193	1789	1319	2303	1699	2548	1879	2695	1988	2982	2199

The nominal torque values listed are for general use only with the assumed wrenching accuracy of 20%, such as a manual torque wrench. DO NOT use these values if a different torque value or tightening procedure is given for a specific application. For lock nuts, for stainless steel fasteners, or for nuts on U-bolts, see the tightening instructions for the specific application.

Replace fasteners with the same or higher property class. If higher property class fasteners are used, tighten these to the strength of the original.

- Make sure that fastener threads are clean.
- Apply a thin coat of Hy-Gard™ or equivalent oil under the head and on the threads of the fastener, as shown in the following image.
- Be conservative with the amount of oil to reduce the potential for hydraulic lockup in blind holes due to excessive oil.
- Properly start thread engagement.

TS1741 —UN—22MAY18

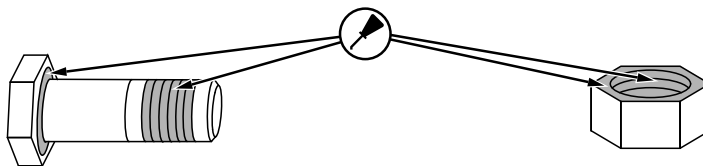

^aHex head column values are valid for ISO 4014 and ISO 4017 hex head, ISO 4162 hex socket head, and ISO 4032 hex nuts.

^bHex flange column values are valid for ASME B18.2.3.9M, ISO 4161, or EN 1665 hex flange products.

DX,TORQ2 -19-30MAY18-1/1

Lubrication and Maintenance Records

Using Lubrication and Maintenance Records

Refer to specific Lubrication and Maintenance Section for detailed service procedures.

1. Keep a record of the number of hours you operate your engine by regular observation of hour meter.
2. Check your record regularly to learn when your engine needs service.
3. DO ALL the services within an interval section. Write the number of hours (from your service records) and

the date in the spaces provided. For a complete listing of all items to be performed and the service intervals required, refer to the quick-reference chart near the front of the Lubrication and Maintenance Section.

IMPORTANT: The service recommendations covered in this manual are for the accessories that are provided by John Deere. Follow manufacturer's service recommendations for servicing engine-driven equipment or other accessories not supplied by Deere.

RG, RG34710, 5620 -19-20MAY96-1/1

Daily (Prestarting) Service

- Check engine oil level.
- Check coolant level.

IMPORTANT: Drain water by loosening drain plug on fuel/water separator bowl. Premature

unit injection pump failure may occur if water is not drained daily.

- Check fuel filter/water separator bowl.
- Check air cleaner dust unloader valve and air restriction indicator, if equipped.
- Visual walkaround inspection.

RG41183, 000006B -19-21JAN03-1/1

500 Hour/12 Month Service

- Change engine oil and filter.¹
- Replace fuel filter element.
- Clean crankcase vent tube.
- Check air intake system.
- Check engine speeds
- Check belt tensioner and belt wear.
- Check engine electrical ground connection.

- Service fire extinguisher.
- Check engine mounts.
- Service battery.
- Check cooling system.
- Replenish SCAs as needed.
- Test diesel engine coolant.
- Pressure test cooling system.

Hours									
Date									
Hours									
Date									
Hours									
Date									
Hours									
Date									
Hours									
Date									
Hours									
Date									
Hours									
Date									
Hours									
Date									

¹If John Deere PLUS-50 or ACEA - E4/E5/E6/E7 oil is NOT used along with a John Deere oil filter, the oil and filter change interval is reduced by 50 percent to every 250 hours.

OUOD006, 0000072 -19-03JAN07-1/1

2000 Hour/24 Month Service

- Check crankshaft vibration damper (If equipped).

- Flush cooling system.¹
- Test thermostats.

Hours									
Date									
Hours									
Date									
Hours									
Date									
Hours									
Date									
Hours									
Date									
Hours									
Date									
Hours									
Date									
Hours									
Date									

¹If John Deere COOL-GARD is used, the flushing interval may be extended to 3000 hours, or 36 months. If John Deere COOL-GARD is used and the coolant is tested annually AND additives are replenished as needed by adding a supplemental coolant additive, the flushing interval may be extended to 5000 hours or 60 months, whichever occurs first.

RG41183,000006D -19-27OCT15-1/1

Service as Required

- Add coolant
- Replace air cleaner.
- Replace poly-vee belt.

- Check fuses
- Check air compressor (if equipped)
- Adjust speed gain (Generator sets)
- Bleed fuel system

Hours									
Date									
Hours									
Date									
Hours									
Date									
Hours									
Date									
Hours									
Date									
Hours									
Date									
Hours									
Date									
Hours									
Date									

OURGP12,00000FE -19-18MAY04-1/1

Warranty

John Deere Warranty in OEM Applications

Overview

This section focuses on John Deere engines marketed in products manufactured by companies other than John Deere or its affiliates, and on John Deere repower engines in all applications. Herein appears the original warranty applicable to the engine as delivered to the retail purchaser on or after 1 May 2010. The following is information about the warranty and warranty service.

NOTE: “John Deere” means John Deere Power Systems with respect to users in the United States, John Deere Limited with respect to users in Canada, and Deere & Company or its subsidiary responsible for making John Deere equipment in other countries where the user is located.

Promptly register your engine online at <https://www.johndeere.com/enginewarranty>

When Warranty Service Is Needed

The nearest dealer stands ready with genuine parts and trained and equipped personnel should the need arise. If following the Operator’s Manual delivered with the engine/machine are not adequate to correct an engine problem, contact the nearest John Deere service dealer for assistance. Authorized engine service dealers can be found at: <https://www.johndeere.com/> (click on “Dealer Locator”).

NOTE: When requesting warranty service, the purchaser must be prepared to provide proof that the engine is within the warranty period.

The following information is always required: Engine serial number, date of delivery, engine owner, name and location of dealer and specific person contacted, date of contact, nature of engine problem, and outcome of the service dealer contact.

Given that normally it is the dealer contacted who in the end will provide the service required, maintaining a purchaser-dealer relationship of mutual respect from the beginning is always helpful.

Privacy Notice

At John Deere your privacy is important to us. We collect, use, and disclose your personal information in accordance with the John Deere privacy statement. For instance, we collect, use, and disclose your personal information to provide you with the products and services that you request; to communicate with you as our customer (examples include warranty and product improvement programs) and to meet safety and legal requirements; and for marketing and promotional purposes. Sometimes, we may ask our John Deere affiliates, dealers, or business partners to do work for us which involves your information. For complete details on your privacy rights and to obtain a copy of the John Deere Privacy Statement, please visit our website at <https://www.johndeere.com/>.

Warranty Duration

Unless otherwise provided in writing by John Deere, John Deere makes the following warranty to the first retail purchaser and each subsequent purchaser (if purchase is made prior to the expiration of applicable warranty) of each John Deere new off-highway engine marketed as part of a product manufactured by a company other than John Deere or its affiliates and on each John Deere engine used in an off-highway repower application:

- 12 months, unlimited hours of use, or
- 24 months and before the accumulation of 2000 hours of use.

NOTE: In the absence of a functional hourmeter, hours of use will be determined on the basis of 12 hours of use per calendar day.

Warranty Coverage

This warranty applies to the engine and to integral components and accessories sold by John Deere, and delivered to the first retail purchaser on or after 1 May 2010.

All John Deere-warranted parts and components of John Deere engines which, as delivered to the purchaser, are defective in materials and/or workmanship will be repaired or replaced, as John Deere elects. Warrantable repairs will be made without charge for parts or engine repair labor, including reasonable labor costs to remove and reinstall non-engine parts or components of the equipment in which the engine is installed. If required, reasonable labor costs for engine removal and reinstallation will also be included. All coverage is based on the defect appearing within the warranty period as measured from the date of delivery to the first retail purchaser.

Obtaining Warranty Service

Warranty service must be requested of the nearest authorized John Deere engine service outlet before the expiration of the warranty. An *authorized* service outlet is a John Deere engine distributor, a John Deere engine service dealer, or a John Deere equipment dealer selling and servicing equipment with an engine of the type covered by this warranty. (See When Warranty Service is Needed above.)

Authorized service outlets will use only new or remanufactured parts or components furnished or approved by John Deere.

NOTE: Authorized engine service locations are listed on the Internet at <https://www.johndeere.com/> (Click on “Dealer Locator”).

At the time of requesting warranty service, the purchaser must be prepared to present evidence of the date of delivery of the engine.

Continued on next page

JR74534,0000462 -19-05JUL16-1/3

John Deere reimburses authorized service outlets for limited travel expenses incurred in making warranty service repairs in non-John Deere applications when travel is actually performed. The limit, as of the date of publication of this booklet, is US\$400.00 (US\$500.00 if engine is marine) or equivalent. **If distances and travel times are greater than reimbursed by John Deere, the service outlet will charge the purchaser for the difference.**

Warranty Exclusions

John Deere's obligations will not apply to components and accessories which are not furnished or installed by John Deere, nor to failures caused by such items, except as required by law.

Purchaser's Responsibilities

The cost of normal maintenance and depreciation.

Periodic cleaning of the diesel particulate filter (DPF).

Consequences of negligence, misuse, or accident involving the product, or improper application, installation, or storage.

Consequences of service performed by someone other than an authorized John Deere engine service outlet.

Consequences of any product modification or alteration not approved by John Deere, including, but not limited to, tampering with engine fuel and air delivery systems.

Consequences of failure of non-product components.

Consequences of fuels, lubricants, or coolants that fail to meet the specifications and requirements listed in the Operator's Manual.

The effects of cooling system neglect as manifested in cylinder liner or cylinder block cavitation ("pitting", "erosion", "electrolysis").

Any premium for overtime labor requested by the purchaser.

Costs of transporting the product or the equipment in which it is installed to and from the location at which the warranty service is performed, if such costs are in excess of the travel reimbursement payable to the dealer had the warranty service been performed at the product's location.

Costs incurred in gaining access; for example, overcoming physical barriers such as walls, fences, floors, decks, or similar structures impeding access to the product, rental of cranes or similar, or construction of ramps or lifts or protective structures for product removal and reinstallation.

Incidental travel costs including meals, lodging, and similar, and any travel time or mileage costs in excess of the maximum allowance.

Service outlet costs incurred in solving or attempting to solve non-warrantable problems.

Services performed by a party other than an authorized John Deere service dealer.

Charges by dealers for initial start-up and inspection deemed unnecessary by John Deere when an Operator's Manual is supplied with the product are followed.

Costs related to interpretation or translation services.

No Representations or Implied Warranty

Where permitted by law, neither John Deere nor any company affiliated with it makes any guaranties, warranties, conditions, representations or promises, express or implied, oral or written, as to the nonoccurrence of any defect or the quality of performance of its engines other than those set forth in this booklet, and DOES NOT MAKE ANY IMPLIED WARRANTY OR CONDITIONS OF MERCHANTABILITY OR FITNESS otherwise provided for in the Uniform Commercial Code or required by any Sale of Goods Act or any other statute. This exclusion includes fundamental terms. In no event will a John Deere engine distributor or engine service dealer, John Deere equipment dealer, or John Deere or any company affiliated with John Deere be liable for incidental or consequential damages or injuries including, but not limited to, loss of profits, loss of crops, rental of substitute equipment or other commercial loss, damage to the equipment in which the engine is installed or for damage suffered by purchaser as a result of fundamental breaches of contract or breach of fundamental terms, unless such damages or injuries are caused by the gross negligence or intentional acts of the foregoing parties.

Remedy Limitation

The remedies set forth in this warranty are the purchaser's exclusive remedies in connection with the performance of, or any breach of guaranty, condition, or warranty in respect of new John Deere engines. In the event the above warranty fails to correct purchaser's performance problems caused by defects in workmanship and/or materials, purchaser's exclusive remedy shall be limited to payment by John Deere of actual damages in an amount not to exceed the cost of the engine.

No Seller's Warranty

No person or entity, other than John Deere, who sells the engine or product in which the engine has been installed makes any guaranty or warranty of its own on any engine warranted by John Deere unless it delivers to the purchaser a separate written guaranty certificate specifically guaranteeing the engine, in which case John Deere shall have no obligation to the purchaser. Neither original equipment manufacturers, engine or equipment distributors, engine or equipment dealers, nor any other person or entity, has any authority to make any representation or promise on behalf of John Deere or to modify the terms or limitations of this warranty in any way.

Replacement Parts Warranty

John Deere and John Deere Reman parts and components (excluding replacement engines) installed during engine warranty service are warranted for the remaining warranty period of the engine or the applicable warranty term for the installed service part, whichever is greater. A new or remanufactured engine replacing a failed engine under warranty is warranted for 90 days or the remaining warranty period of the original engine, whichever is greater.

Warranty Transfer

The remainder of the original engine warranty and the emissions control-related warranty may be transferred to a subsequent owner of the engine. The Engine Warranty Transfer card should be used to report the transfer to John Deere. If a card is not available, contact your Dealer or simply send the following information to JDPS Warranty Administration at Diesel-US@JohnDeere.com.

1. The complete 13-character engine serial number.
2. The name and mailing address of the original purchaser.
3. Delivery date to the original purchaser.
4. Hours at the time of transfer.
5. Date of transfer to the new owner.
6. Name and mailing address of the new owner.
7. How the engine/drivetrain being used, i.e., what equipment it powers, by manufacturer and model.
8. Equipment it powers, by manufacturer and model.

Purchased Extended Warranty

Extended warranty may be purchased on most engines in many areas of the world. John Deere engine distributors and equipment dealers, and dealers of manufacturers using John Deere engines in their products, have details. John Deere may also be contacted at U.S.A. fax number 1-309-749-0816, or in Europe fax number 33.2.38.84.62.66.

Emissions Warranties

Emissions warranties appear in the Operator's Manual furnished with the engine/machine. **(Warning: Statutes providing severe penalties for tampering with emissions controls may apply at the user's location.)** John Deere may also be contacted at U.S.A. fax number 1-309-749-0816; or in Europe fax number 33.2.38.84.62.66.

Local Warranty Requirements

Warranties required by local statutes will be furnished by the seller.

Option Codes (Engine Manufacturing Configuration)

When in need of engine replacement parts, your authorized John Deere service dealer will need to know the corresponding "Option Codes" for your engine. The option code label on the engine rocker arm cover may become damaged over time. By recording the four-digit codes when the engine is new, and storing this manual where it can be found when parts are needed, fast, accurate parts ordering and service will be assured. (See Engine Option Codes in the Record Keeping Section).

Should there be a question about an engine option code, note the engine serial number and call 1-800-JDENGINE from the U.S.A. or Canada, or fax U.S.A. number 1-309-749-0816; or E-mail at diesel-us@johndeere.com, Attention: Warranty Administration; or in Europe fax number 33.2.38.84.62.66, or E-mail at saranservice@johndeere.com.

Registering The Engine For Warranty

Completion and submission of the John Deere Engine Warranty Registration form (cut out sheet found in this manual) is very important. John Deere will not deny warranty service on an engine within its warranty period if the engine has not been registered. However, registering your engine will assure your servicing dealer that the engine is within the warranty period.

The easiest way to register your engine is via the Internet. Go to website <https://www.johndeere.com/enginewarranty>. You can use the sheet in this manual to gather the information needed to register the warranty.

NOTE: Information provided on the form must be legible!


Typing is preferred, but legible handwritten reports are acceptable. "Block" numbers and Roman alphabet letters should be used. For example: 1,2,3,4 and A, B, C, D.

All requested information should be given. Much of it contributes to reports, including those required by governments.

The purchaser's telephone number or E-mail address allows John Deere to make contact should there be questions concerning the registration. The purchaser should sign and date the form.

JR74534,0000462 -19-05JUL16-3/3

Emissions Control System Certification Label

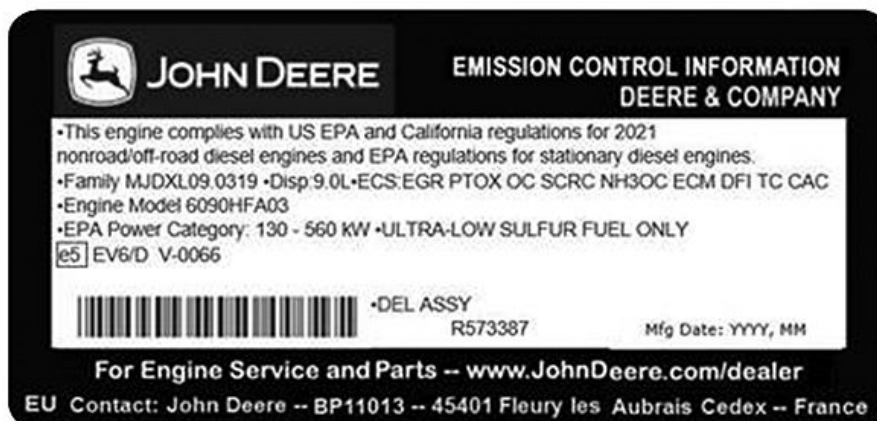

Engine Emissions Label

⚠ CAUTION: Statutes providing severe penalties for tampering with emissions controls may apply to the user or dealer.

The emissions warranty applies to those engines marketed by John Deere that have been certified by the United States Environmental Protection Agency (EPA) and/or California Air Resources Board (CARB); and used in the United States and Canada in Non-road equipment. The presence of an emissions label like the one shown signifies that the engine has been certified with the EPA and/or CARB. The EPA and CARB warranties only apply to new engines having the certification label affixed to the engine and sold as stated above in the geographic areas. The presence of an EU number signifies that the engine has been certified with the European Union countries per Regulation (EU) 2016/1628 and supplementing legislation. The EPA and/or CARB emissions warranties do not apply to the EU countries.

The emissions label has applicable US EPA and/or CARB regulatory year. The regulatory year determines which warranty statement is applicable to engine. See "EPA Non-road Emissions Control Warranty Statement—Compression Ignition" and "CARB Non-road Emissions Control Warranty Statement—Compression Ignition". For additional regulatory year warranty statements, see www.JohnDeere.com or contact the nearest John Deere service dealer for assistance.

Emission Control System(s) Laws

The U.S. EPA and California ARB prohibit the removal or rendering inoperative of any device or element of design installed on or in engines/equipment in compliance with applicable emission regulations prior to or after the sale and delivery of the engines/equipment to the ultimate purchaser.

DX,EMISSIONS,LABEL -19-05FEB21-1/1

RG33429 —UN—04FEB21

EPA Non-road Emissions Control Warranty Statement—Compression Ignition

DXLOGOV1 —UN—28APR09



JOHN DEERE

U.S. AND CANADA EMISSION CONTROL WARRANTY STATEMENT YOUR WARRANTY RIGHTS AND OBLIGATIONS

To determine if the John Deere engine qualifies for the additional warranties set forth below, look for the "Emissions Control Information" label located on the engine. If the engine is operated in the United States or Canada and the Emissions Control information label states: "This engine complies with US EPA regulations for nonroad and stationary diesel engines", or "This engine conforms to US EPA nonroad compression-ignition regulations", refer to the "U.S. and Canada Emission Control Warranty Statement." If the engine is operated in California, and the label states: "This engine complies with US EPA and CARB regulations for nonroad diesel engines", or "This engine conforms to US EPA and California nonroad compression-ignition emission regulations", also refer to the "California Emission Control Warranty Statement."

Warranties stated on this certificate refer only to emissions-related parts and components of your engine. The complete engine warranty, less emissions-related parts and components, is provided separately. If you have any questions about your warranty rights and responsibilities, you should contact John Deere at 1-319-292-5400.

JOHN DEERE'S WARRANTY RESPONSIBILITY

John Deere warrants to the ultimate purchaser and each subsequent purchaser that this off-road diesel engine including all parts of its emission-control system was designed, built and equipped so as to conform at the time of the sale with Section 213 of the Clean Air Act and is free from defects in materials and workmanship which would cause the engine to fail to conform with applicable US EPA regulations for a period of five years from the date the engine is placed into service or 3,000 hours of operation, whichever first occurs.

Where a warrantable condition exists, John Deere will repair or replace, as it elects, any part or component with a defect in materials or workmanship that would increase the engine's emissions of any regulated pollutant within the stated warranty period at no cost to you, including expenses related to diagnosing and repairing or replacing emission-related parts. Warranty coverage is subject to the limitations and exclusions set forth herein. Emission-related components include engine parts developed to control emissions related to the following:

Air-Induction System

Fuel System

Ignition System

Exhaust Gas Recirculation Systems

Aftertreatment Devices

Crankcase Ventilation Valves

Sensors

Engine Electronic Control Units

EMISSION WARRANTY EXCLUSIONS

John Deere may deny warranty claims for malfunctions or failures caused by:

- Non-performance of maintenance requirements listed in the Operator's Manual
- The use of the engine/equipment in a manner for which it was not designed
- Abuse, neglect, improper maintenance or unapproved modifications or alterations
- Accidents for which it does not have responsibility or by acts of God

The off-road diesel engine is designed to operate on diesel fuel as specified in the Fuels, Lubricants and Coolants section in the Operators Manual. Use of any other fuel can harm the emissions control system of the engine/equipment and is not approved for use.

To the extent permitted by law John Deere is not liable for damage to other engine components caused by a failure of an emission-related part, unless otherwise covered by standard warranty.

THIS WARRANTY IS EXPRESSLY IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. REMEDIES UNDER THIS WARRANTY ARE LIMITED TO THE PROVISIONS OF MATERIAL AND SERVICES AS SPECIFIED HEREIN. WHERE PERMITTED BY LAW, NEITHER JOHN DEERE NOR ANY AUTHORIZED JOHN DEERE ENGINE DISTRIBUTOR, DEALER, OR REPAIR FACILITY OR ANY COMPANY AFFILIATED WITH JOHN DEERE WILL BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Emission_CI_EPA (18Dec09)

Continued on next page

DX,EMISSIONS,EPA -19-12DEC12-1/2



JOHN DEERE

**U.S. AND CANADA EMISSION CONTROL WARRANTY STATEMENT
YOUR WARRANTY RIGHTS AND OBLIGATIONS**

To determine if the John Deere engine qualifies for the additional warranties set forth below, look for the "Emissions Control Information" label located on the engine. If the engine is operated in the United States or Canada and the Emissions Control information label states: "This engine complies with US EPA regulations for nonroad and stationary diesel engines", or "This engine conforms to US EPA nonroad compression-ignition regulations", refer to the "U.S. and Canada Emission Control Warranty Statement." If the engine is operated in California, and the label states: "This engine complies with US EPA and CARB regulations for nonroad diesel engines", or "This engine conforms to US EPA and California nonroad compression-ignition emission regulations", also refer to the "California Emission Control Warranty Statement."

Warranties stated on this certificate refer only to emissions-related parts and components of your engine. The complete engine warranty, less emissions-related parts and components, is provided separately. If you have any questions about your warranty rights and responsibilities, you should contact John Deere at 1-319-292-5400.

JOHN DEERE'S WARRANTY RESPONSIBILITY

John Deere warrants to the ultimate purchaser and each subsequent purchaser that this off-road diesel engine including all parts of its emission-control system was designed, built and equipped so as to conform at the time of the sale with Section 213 of the Clean Air Act and is free from defects in materials and workmanship which would cause the engine to fail to conform with applicable US EPA regulations for a period of five years from the date the engine is placed into service or 3,000 hours of operation, whichever first occurs.

Where a warrantable condition exists, John Deere will repair or replace, as it elects, any part or component with a defect in materials or workmanship that would increase the engine's emissions of any regulated pollutant within the stated warranty period at no cost to you, including expenses related to diagnosing and repairing or replacing emission-related parts. Warranty coverage is subject to the limitations and exclusions set forth herein. Emission-related components include engine parts developed to control emissions related to the following:

Air-Induction System
Fuel System
Ignition System
Exhaust Gas Recirculation Systems

Aftertreatment Devices
Crankcase Ventilation Valves
Sensors
Engine Electronic Control Units

EMISSION WARRANTY EXCLUSIONS

John Deere may deny warranty claims for malfunctions or failures caused by:

- Non-performance of maintenance requirements listed in the Operator's Manual
- The use of the engine/equipment in a manner for which it was not designed
- Abuse, neglect, improper maintenance or unapproved modifications or alterations
- Accidents for which it does not have responsibility or by acts of God

The off-road diesel engine is designed to operate on diesel fuel as specified in the Fuels, Lubricants and Coolants section in the Operators Manual. Use of any other fuel can harm the emissions control system of the engine/equipment and is not approved for use.

To the extent permitted by law John Deere is not liable for damage to other engine components caused by a failure of an emission-related part, unless otherwise covered by standard warranty.

THIS WARRANTY IS EXPRESSLY IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. REMEDIES UNDER THIS WARRANTY ARE LIMITED TO THE PROVISIONS OF MATERIAL AND SERVICES AS SPECIFIED HEREIN. WHERE PERMITTED BY LAW, NEITHER JOHN DEERE NOR ANY AUTHORIZED JOHN DEERE ENGINE DISTRIBUTOR, DEALER, OR REPAIR FACILITY OR ANY COMPANY AFFILIATED WITH JOHN DEERE WILL BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Emission_CI_EPA (18Dec09)

TS1721 —UN—15JUL13

DX,EMISSIONS,EPA -19-12DEC12-2/2

CARB Non-road Emissions Control Warranty Statement—Compression Ignition

Emissions Control Warranty Statement 2019 through 2021

DXLOGOV1 —UN—28APR09



JOHN DEERE

CALIFORNIA EMISSIONS CONTROL WARRANTY STATEMENT YOUR WARRANTY RIGHTS AND OBLIGATIONS

To determine if the John Deere engine qualifies for the additional warranties set forth below, look for the "Emission Control Information" label located on the engine. If the engine is operated in the United States or Canada and the engine label states: "This engine complies with US EPA regulations for nonroad and stationary diesel engines", or "This engine complies with US EPA regulations for stationary emergency diesel engines", refer to the "U.S. and Canada Emission Control Warranty Statement." If the engine is operated in California, and the engine label states: "This engine complies with US EPA and CARB regulations for nonroad diesel engines" also refer to the "California Emissions Control Warranty Statement."

Warranties stated on this certificate refer only to emissions-related parts and components of your engine. The complete engine warranty, less emission-related parts and components, is provided separately. If you have any questions about your warranty rights and responsibilities, you should contact John Deere at 1-319-292-5400.

CALIFORNIA EMISSIONS CONTROL WARRANTY STATEMENT:

The California Air Resources Board (CARB) is pleased to explain the emission-control system warranty on 2019 through 2021 off-road diesel engines. In California, new off-road engines must be designed, built and equipped to meet the State's stringent anti-smog standards. John Deere must warrant the emission control system on your engine for the periods of time listed below provided there has been no abuse, neglect or improper maintenance of your engine.

Your emission control system may include parts such as the fuel injection system and the air induction system. Also included may be hoses, belts, connectors and other emission-related assemblies.

John Deere warrants to the ultimate purchaser and each subsequent purchaser that this off-road diesel engine was designed, built, and equipped so as to conform at the time of sale with all applicable regulations adopted by CARB and is free from defects in materials and workmanship which would cause the failure of a warranted part to be identical in all material respects to the part as described in John Deere's application for certification for a period of five years from the date the engine is delivered to an ultimate purchaser or 3,000 hours of operation, whichever occurs first for all engines rated at 19 kW and greater. In the absence of a device to measure hours of use, the engine shall be warranted for a period of five years.

EMISSIONS WARRANTY EXCLUSIONS:

John Deere may deny warranty claims for failures caused by the use of an add-on or modified part which has not been exempted by the CARB. A modified part is an aftermarket part intended to replace an original emission-related part which is not functionally identical in all respects and which in any way affects emissions. An add-on part is any aftermarket part which is not a modified part or a replacement part.

In no event will John Deere, any authorized engine distributor, dealer, or repair facility, or any company affiliated with John Deere be liable for incidental or consequential damage.

Continued on next page

DX,EMISSIONS,CARB -19-26AUG20-1/8

JOHN DEERE'S WARRANTY RESPONSIBILITY:

Where a warrantable condition exists, John Deere will repair or replace, as it elects, your off-road diesel engine at no cost to you, including diagnosis, parts or labor. Warranty coverage is subject to the limitations and exclusions set forth herein. The off-road diesel engine is warranted for a period of five years from the date the engine is delivered to an ultimate purchaser or 3,000 hours of operation, whichever occurs first. The following are emissions-related parts:

Air Induction System	Emission control labels	Advanced Oxides of Nitrogen (NOx) Controls
• Intake manifold • Turbocharger • Charge air cooler	Particulate Controls	• NOx absorbers and catalysts
Fuel Metering system	• Any device used to capture particulate emissions • Any device used in the regeneration of the capturing system • Enclosures and manifolding • Smoke Puff Limiters	SCR systems and urea containers/dispensing systems
• Fuel injection system	Positive Crankcase Ventilation (PCV) System	Miscellaneous Items used in Above Systems
Exhaust Gas Recirculation	• PCV valve • Oil filler cap	• Electronic control units, sensors, actuators, wiring harnesses, hoses, connectors, clamps, fittings, gasket, mounting hardware
• EGR valve		
Catalyst or Thermal Reactor Systems		
• Catalytic converter • Exhaust manifold		

Any warranted emissions-related part scheduled for replacement as required maintenance is warranted by John Deere for the period of time prior to the first scheduled replacement point for the part. Any warranted emissions-related part not scheduled for replacement as required maintenance or scheduled only for regular inspection is warranted by John Deere for the stated warranty period.

OWNER'S WARRANTY RESPONSIBILITIES:

As the off-road diesel engine owner you are responsible for the performance of the required maintenance listed in your Operator's Manual. John Deere recommends that the owner retain all receipts covering maintenance on the off-road diesel engine, but John Deere cannot deny warranty solely for the lack of receipts or for the owner's failure to ensure the performance of all scheduled maintenance. However, as the off-road diesel engine owner, you should be aware that John Deere may deny you warranty coverage if your off-road diesel engine or a part has failed due to abuse, neglect, improper maintenance or unapproved modifications.

The off-road diesel engine is designed to operate on diesel fuel as specified in the Fuels, Lubricants and Coolants section in the Operators Manual. Use of any other fuel may result in the engine no longer operating in compliance with applicable emissions requirements.

The owner is responsible for initiating the warranty process, and should present the machine to the nearest authorized John Deere dealer as soon as a problem is suspected. The warranty repairs should be completed by the authorized John Deere dealer as quickly as possible.

Emissions regulations require the customer to bring the unit to an authorized servicing dealer when warranty service is required. As a result, John Deere is NOT liable for travel or mileage on emissions warranty service calls.

Emission_CI_CARB (01Feb17)

Continued on next page

DX,EMISSIONS,CARB -19-26AUG20-2/8

Emissions Control Warranty Statement 2019 through 2021

DXLOGOV1 —UN—28APR09



JOHN DEERE

CALIFORNIA EMISSIONS CONTROL WARRANTY STATEMENT YOUR WARRANTY RIGHTS AND OBLIGATIONS

To determine if the John Deere engine qualifies for the additional warranties set forth below, look for the "Emission Control Information" label located on the engine. If the engine is operated in the United States or Canada and the engine label states: "This engine complies with US EPA regulations for nonroad and stationary diesel engines", or "This engine complies with US EPA regulations for stationary emergency diesel engines", refer to the "U.S. and Canada Emission Control Warranty Statement." If the engine is operated in California, and the engine label states: "This engine complies with US EPA and CARB regulations for nonroad diesel engines" also refer to the "California Emissions Control Warranty Statement."

Warranties stated on this certificate refer only to emissions-related parts and components of your engine. The complete engine warranty, less emission-related parts and components, is provided separately. If you have any questions about your warranty rights and responsibilities, you should contact John Deere at 1-319-292-5400.

CALIFORNIA EMISSIONS CONTROL WARRANTY STATEMENT:

The California Air Resources Board (CARB) is pleased to explain the emission-control system warranty on 2019 through 2021 off-road diesel engines. In California, new off-road engines must be designed, built and equipped to meet the State's stringent anti-smog standards. John Deere must warrant the emission control system on your engine for the periods of time listed below provided there has been no abuse, neglect or improper maintenance of your engine.

Your emission control system may include parts such as the fuel injection system and the air induction system. Also included may be hoses, belts, connectors and other emission-related assemblies.

John Deere warrants to the ultimate purchaser and each subsequent purchaser that this off-road diesel engine was designed, built, and equipped so as to conform at the time of sale with all applicable regulations adopted by CARB and is free from defects in materials and workmanship which would cause the failure of a warranted part to be identical in all material respects to the part as described in John Deere's application for certification for a period of five years from the date the engine is delivered to an ultimate purchaser or 3,000 hours of operation, whichever occurs first for all engines rated at 19 kW and greater. In the absence of a device to measure hours of use, the engine shall be warranted for a period of five years.

EMISSIONS WARRANTY EXCLUSIONS:

John Deere may deny warranty claims for failures caused by the use of an add-on or modified part which has not been exempted by the CARB. A modified part is an aftermarket part intended to replace an original emission-related part which is not functionally identical in all respects and which in any way affects emissions. An add-on part is any aftermarket part which is not a modified part or a replacement part.

In no event will John Deere, any authorized engine distributor, dealer, or repair facility, or any company affiliated with John Deere be liable for incidental or consequential damage.

Continued on next page

DX,EMISSIONS,CARB -19-26AUG20-3/8

RG29280 —UN—02FEB17

JOHN DEERE'S WARRANTY RESPONSIBILITY:

Where a warrantable condition exists, John Deere will repair or replace, as it elects, your off-road diesel engine at no cost to you, including diagnosis, parts or labor. Warranty coverage is subject to the limitations and exclusions set forth herein. The off-road diesel engine is warranted for a period of five years from the date the engine is delivered to an ultimate purchaser or 3,000 hours of operation, whichever occurs first. The following are emissions-related parts:

Air Induction System	Emission control labels	Advanced Oxides of Nitrogen (NOx) Controls
- Intake manifold - Turbocharger - Charge air cooler	Particulate Controls - Any device used to capture particulate emissions - Any device used in the regeneration of the capturing system - Enclosures and manifolding - Smoke Puff Limiters	NOx absorbers and catalysts
Fuel Metering system		SCR systems and urea containers/dispensing systems
Fuel injection system		Miscellaneous Items used in Above Systems Electronic control units, sensors, actuators, wiring harnesses, hoses, connectors, clamps, fittings, gasket, mounting hardware
Exhaust Gas Recirculation	Positive Crankcase Ventilation (PCV) System	
EGR valve	- PCV valve - Oil filler cap	
Catalyst or Thermal Reactor Systems		
- Catalytic converter - Exhaust manifold		

Any warranted emissions-related part scheduled for replacement as required maintenance is warranted by John Deere for the period of time prior to the first scheduled replacement point for the part. Any warranted emissions-related part not scheduled for replacement as required maintenance or scheduled only for regular inspection is warranted by John Deere for the stated warranty period.

OWNER'S WARRANTY RESPONSIBILITIES:

As the off-road diesel engine owner you are responsible for the performance of the required maintenance listed in your Operator's Manual. John Deere recommends that the owner retain all receipts covering maintenance on the off-road diesel engine, but John Deere cannot deny warranty solely for the lack of receipts or for the owner's failure to ensure the performance of all scheduled maintenance. However, as the off-road diesel engine owner, you should be aware that John Deere may deny you warranty coverage if your off-road diesel engine or a part has failed due to abuse, neglect, improper maintenance or unapproved modifications.

The off-road diesel engine is designed to operate on diesel fuel as specified in the Fuels, Lubricants and Coolants section in the Operators Manual. Use of any other fuel may result in the engine no longer operating in compliance with applicable emissions requirements.

The owner is responsible for initiating the warranty process, and should present the machine to the nearest authorized John Deere dealer as soon as a problem is suspected. The warranty repairs should be completed by the authorized John Deere dealer as quickly as possible.

Emissions regulations require the customer to bring the unit to an authorized servicing dealer when warranty service is required. As a result, John Deere is NOT liable for travel or mileage on emissions warranty service calls.

Emission_CI_CARB (01Feb17)

Continued on next page

DX,EMISSIONS,CARB -19-26AUG20-4/8

RG29281 —UN—27FEB17

Emissions Control Warranty Statement 2022 through 2024

DXLOGOV1 —UN—28APR09



JOHN DEERE

CALIFORNIA EMISSIONS CONTROL WARRANTY STATEMENT YOUR WARRANTY RIGHTS AND OBLIGATIONS

To determine if the John Deere engine qualifies for the additional warranties set forth below, look for the "Emission Control Information" label located on the engine. If the engine is operated in the United States or Canada and the engine label states: "This engine complies with US EPA regulations for nonroad and stationary diesel engines", or "This engine complies with US EPA regulations for stationary emergency diesel engines", refer to the "U.S. and Canada Emission Control Warranty Statement." If the engine is operated in California, and the engine label states: "This engine complies with US EPA and California regulations for nonroad/off-road diesel engines" also refer to the "California Emissions Control Warranty Statement."

Warranties stated on this certificate refer only to emissions-related parts and components of your engine. The complete engine warranty, less emission-related parts and components, is provided separately. If you have any questions about your warranty rights and responsibilities, you should contact John Deere at 1-319-292-5400.

CALIFORNIA EMISSIONS CONTROL WARRANTY STATEMENT:

The California Air Resources Board (CARB) is pleased to explain the emission-control system warranty on 2022 through 2024 off-road diesel engines. In California, new off-road engines must be designed, built and equipped to meet the State's stringent anti-smog standards. John Deere must warrant the emission control system on your engine for the periods of time listed below provided there has been no abuse, neglect or improper maintenance of your engine.

Your emission control system may include parts such as the fuel injection system and the air induction system. Also included may be hoses, belts, connectors and other emission-related assemblies.

John Deere warrants to the ultimate purchaser and each subsequent purchaser that this off-road diesel engine was designed, built, and equipped so as to conform at the time of sale with all applicable regulations adopted by CARB. John Deere warrants that this engine is free from defects in materials and workmanship which would cause the failure of emissions warranted parts to be identical in all material respects to the part as described in John Deere's application for certification for a period of five years from the date the engine is delivered to an ultimate purchaser or 3,000 hours of operation, whichever occurs first. This applies to all engines rated at 19 kW and greater. In the absence of a device to measure hours of use, the engine shall be warranted for a period of five years.

EMISSIONS WARRANTY EXCLUSIONS:

John Deere may deny warranty claims for failures caused by the use of an add-on or modified part which has not been exempted by the CARB. A modified part is an aftermarket part intended to replace an original emission-related part which is not functionally identical in all respects and which in any way affects emissions. An add-on part is any aftermarket part which is not a modified part or a replacement part.

In no event will John Deere, any authorized engine distributor, dealer, or repair facility, or any company affiliated with John Deere be liable for incidental or consequential damage.

Continued on next page

DX,EMISSIONS,CARB -19-26AUG20-5/8

JOHN DEERE'S WARRANTY RESPONSIBILITY:

Where a warrantable condition exists, John Deere will repair or replace, as it elects, your off-road diesel engine at no cost to you, including diagnosis, parts or labor. Warranty coverage is subject to the limitations and exclusions set forth herein. The off-road diesel engine is warranted for a period of five years from the date the engine is delivered to an ultimate purchaser or 3,000 hours of operation, whichever occurs first. The following are emissions-related parts:

Air Induction System	Emission control labels	Advanced Oxides of Nitrogen (NOx) Controls
• Intake manifold • Turbocharger • Charge air cooler	Particulate Controls	• NOx absorbers and catalysts
Fuel Metering system	• Any device used to capture particulate emissions • Any device used in the regeneration of the capturing system • Enclosures and manifolding • Smoke Puff Limiters	SCR systems and urea containers/dispensing systems
• Fuel injection system		Miscellaneous Items used in Above Systems
Exhaust Gas Recirculation	Positive Crankcase Ventilation (PCV) System	• Electronic control units, sensors, actuators, wiring harnesses, hoses, connectors, clamps, fittings, gasket, mounting hardware
• EGR valve	• PCV valve • Oil filler cap	
Catalyst or Thermal Reactor Systems		
• Catalytic converter • Exhaust manifold		

Any warranted emissions-related part scheduled for replacement as required maintenance is warranted by John Deere for the period of time prior to the first scheduled replacement point for the part. Any warranted emissions-related part not scheduled for replacement as required maintenance or scheduled only for regular inspection is warranted by John Deere for the stated warranty period.

OWNER'S WARRANTY RESPONSIBILITIES:

As the off-road diesel engine owner you are responsible for the performance of the required maintenance listed in your Operator's Manual. John Deere recommends that the owner retain all receipts covering maintenance on the off-road diesel engine, but John Deere cannot deny warranty solely for the lack of receipts or for the owner's failure to ensure the performance of all scheduled maintenance. However, as the off-road diesel engine owner, you should be aware that John Deere may deny you warranty coverage if your off-road diesel engine or a part has failed due to abuse, neglect, improper maintenance or unapproved modifications.

The off-road diesel engine is designed to operate on diesel fuel as specified in the Fuels, Lubricants and Coolants section in the Operators Manual. Use of any other fuel may result in the engine no longer operating in compliance with applicable emissions requirements.

The owner is responsible for initiating the warranty process, and should present the machine to the nearest authorized John Deere dealer as soon as a problem is suspected. The warranty repairs should be completed by the authorized John Deere dealer as quickly as possible.

Emissions regulations require the customer to bring the unit to an authorized servicing dealer when warranty service is required. As a result, John Deere is NOT liable for travel or mileage on emissions warranty service calls.

Emission_CI_CARB (14Apr20)

Continued on next page

DX,EMISSIONS,CARB -19-26AUG20-6/8

Emissions Control Warranty Statement 2022 through 2024

DXLOGOV1 —UN—28APR09



JOHN DEERE

CALIFORNIA EMISSIONS CONTROL WARRANTY STATEMENT YOUR WARRANTY RIGHTS AND OBLIGATIONS

To determine if the John Deere engine qualifies for the additional warranties set forth below, look for the "Emission Control Information" label located on the engine. If the engine is operated in the United States or Canada and the engine label states: "This engine complies with US EPA regulations for nonroad and stationary diesel engines", or "This engine complies with US EPA regulations for stationary emergency diesel engines", refer to the "U.S. and Canada Emission Control Warranty Statement." If the engine is operated in California, and the engine label states: "This engine complies with US EPA and California regulations for nonroad/off-road diesel engines" also refer to the "California Emissions Control Warranty Statement."

Warranties stated on this certificate refer only to emissions-related parts and components of your engine. The complete engine warranty, less emission-related parts and components, is provided separately. If you have any questions about your warranty rights and responsibilities, you should contact John Deere at 1-319-292-5400.

CALIFORNIA EMISSIONS CONTROL WARRANTY STATEMENT:

The California Air Resources Board (CARB) is pleased to explain the emission-control system warranty on 2022 through 2024 off-road diesel engines. In California, new off-road engines must be designed, built and equipped to meet the State's stringent anti-smog standards. John Deere must warrant the emission control system on your engine for the periods of time listed below provided there has been no abuse, neglect or improper maintenance of your engine.

Your emission control system may include parts such as the fuel injection system and the air induction system. Also included may be hoses, belts, connectors and other emission-related assemblies.

John Deere warrants to the ultimate purchaser and each subsequent purchaser that this off-road diesel engine was designed, built, and equipped so as to conform at the time of sale with all applicable regulations adopted by CARB. John Deere warrants that this engine is free from defects in materials and workmanship which would cause the failure of emissions warranted parts to be identical in all material respects to the part as described in John Deere's application for certification for a period of five years from the date the engine is delivered to an ultimate purchaser or 3,000 hours of operation, whichever occurs first. This applies to all engines rated at 19 kW and greater. In the absence of a device to measure hours of use, the engine shall be warranted for a period of five years.

EMISSIONS WARRANTY EXCLUSIONS:

John Deere may deny warranty claims for failures caused by the use of an add-on or modified part which has not been exempted by the CARB. A modified part is an aftermarket part intended to replace an original emission-related part which is not functionally identical in all respects and which in any way affects emissions. An add-on part is any aftermarket part which is not a modified part or a replacement part.

In no event will John Deere, any authorized engine distributor, dealer, or repair facility, or any company affiliated with John Deere be liable for incidental or consequential damage.

Continued on next page

DX,EMISSIONS,CARB -19-26AUG20-7/8

RG32758 —UN—19AUG20

JOHN DEERE'S WARRANTY RESPONSIBILITY:

Where a warrantable condition exists, John Deere will repair or replace, as it elects, your off-road diesel engine at no cost to you, including diagnosis, parts or labor. Warranty coverage is subject to the limitations and exclusions set forth herein. The off-road diesel engine is warranted for a period of five years from the date the engine is delivered to an ultimate purchaser or 3,000 hours of operation, whichever occurs first. The following are emissions-related parts:

Air Induction System

- Intake manifold
- Turbocharger
- Charge air cooler

Fuel Metering system

- Fuel injection system

Exhaust Gas Recirculation

- EGR valve

Catalyst or Thermal Reactor Systems

- Catalytic converter
- Exhaust manifold

Emission control labels

Particulate Controls

- Any device used to capture particulate emissions
- Any device used in the regeneration of the capturing system
- Enclosures and manifolding
- Smoke Puff Limiters

Positive Crankcase Ventilation (PCV) System

- PCV valve
- Oil filler cap

Advanced Oxides of Nitrogen (NOx) Controls

- NOx absorbers and catalysts

SCR systems and urea containers/dispensing systems

Miscellaneous Items used in Above Systems

- Electronic control units, sensors, actuators, wiring harnesses, hoses, connectors, clamps, fittings, gasket, mounting hardware

Any warranted emissions-related part scheduled for replacement as required maintenance is warranted by John Deere for the period of time prior to the first scheduled replacement point for the part. Any warranted emissions-related part not scheduled for replacement as required maintenance or scheduled only for regular inspection is warranted by John Deere for the stated warranty period.

OWNER'S WARRANTY RESPONSIBILITIES:

As the off-road diesel engine owner you are responsible for the performance of the required maintenance listed in your Operator's Manual. John Deere recommends that the owner retain all receipts covering maintenance on the off-road diesel engine, but John Deere cannot deny warranty solely for the lack of receipts or for the owner's failure to ensure the performance of all scheduled maintenance. However, as the off-road diesel engine owner, you should be aware that John Deere may deny you warranty coverage if your off-road diesel engine or a part has failed due to abuse, neglect, improper maintenance or unapproved modifications.

The off-road diesel engine is designed to operate on diesel fuel as specified in the Fuels, Lubricants and Coolants section in the Operators Manual. Use of any other fuel may result in the engine no longer operating in compliance with applicable emissions requirements.

The owner is responsible for initiating the warranty process, and should present the machine to the nearest authorized John Deere dealer as soon as a problem is suspected. The warranty repairs should be completed by the authorized John Deere dealer as quickly as possible.

Emissions regulations require the customer to bring the unit to an authorized servicing dealer when warranty service is required. As a result, John Deere is NOT liable for travel or mileage on emissions warranty service calls.

Emission_CI_CARB (14Apr20)

DX,EMISSIONS,CARB -19-26AUG20-8/8

RG32759 —UN—19AUG20

John Deere Service Literature Available

Technical Information

Technical information can be purchased from John Deere. Publications are available in print or CD-ROM format.

Orders can be made using one of the following:

- John Deere Technical Information Store:
www.JohnDeere.com/TechInfoStore
- Call 1-800-522-7448
- Contact your John Deere dealer

Available information includes:

PARTS CATALOGS list service parts available for your machine with exploded view illustrations to help you identify the correct parts. It is also useful in assembling and disassembling.



TS189 — UN — 17JAN89

DX,SERVLIT -19-07DEC16-1/4

OPERATOR'S MANUALS providing safety, operating, maintenance, and service information.



TS191 — UN — 02DEC88

DX,SERVLIT -19-07DEC16-2/4

TECHNICAL MANUALS outlining service information for your machine. Included are specifications, illustrated assembly and disassembly procedures, hydraulic oil flow diagrams, and wiring diagrams. Some products have separate manuals for repair and diagnostic information. Some components, such as engines, are available in a separate component technical manual.



TS224 — UN — 17JAN89

Continued on next page

DX,SERVLIT -19-07DEC16-3/4

EDUCATIONAL CURRICULUM including five comprehensive series of books detailing basic information regardless of manufacturer:

- Agricultural Primer series covers technology in farming and ranching.
- Farm Business Management series examines “real-world” problems and offers practical solutions in the areas of marketing, financing, equipment selection, and compliance.
- Fundamentals of Services manuals show you how to repair and maintain off-road equipment.
- Fundamentals of Machine Operation manuals explain machine capacities and adjustments, how to improve machine performance, and how to eliminate unnecessary field operations.
- Fundamentals of Compact Equipment manuals provide instruction in servicing and maintaining equipment up to 40 PTO horsepower.



TS1663 —UN—10OCT97

DX,SERVLIT -19-07DEC16-4/4

Index

	Page		Page
A			
Acid burns.....	30-7	Thermostat.....	35-4, 35-6
Additional Service Information.....	40-1	Crankcase vent tube, cleaning	30-4
Air compressor, checking	40-8	D	
Air intake system, checking	30-4	DG14 Diagnostic Gauge	
Alternator		Essential Menus.....	15-7
Replacing Belt		Main Menu	15-6
Belt Routing.....	40-7	Using.....	15-5
Alternator belt, replacing.....	40-7	Diesel engine oil	
Auxiliary gear drive, limitations	15-13	Non-Emissions certified and certified tier	
Aviation fuels	10-4	1 and stage I	10-7
Avoid static electricity risk when fueling	05-10	Extended service intervals	10-8
B		Diesel engines, cold weather effect.....	10-5
Batteries		Diesel fuel.....	10-1
Charge/Boost.....	15-18	Supplemental additives.....	10-2
Servicing	30-7	Diesel fuel, testing	10-4
Battery acid burns.....	30-7	E	
Battery explosion.....	30-7	Effect of cold weather on diesel engines	10-5
Battery Handling, Safety		Emission system	
Safety, Battery Handling	05-12	Certification label	65-4
Belt tensioner.....	30-5	Emissions	
Belts, replacing	40-7	Required language	
Biodiesel fuel	10-3	EPA	20-1
Bolt and screw torque values		Engine	
Metric	55-5	Break-in.....	15-12
Unified inch	55-4	Warming.....	15-15
Break-in engine oil		Engine coolant	
Non-Emissions certified and certified tier		Disposing of	10-12
1, tier 2, tier 3, stage I, stage II, and stage III.....	10-6	Engine mounts	
Break-in, engine	15-12	Checking.....	30-7
Burner fuels	10-4	Engine oil	
C		Break-In	
Chart, service interval.....	20-2, 20-3	Non-Emissions certified and certified	
Cold weather		tier 1, tier 2, tier 3, stage I, stage II,	
Starting.....	15-15	and stage III.....	10-6
Compressor, air, checking	40-8	Capacity	55-3
Coolant		Changing.....	30-1
Adding.....	40-2	Diesel	
Diesel engine		Non-Emissions certified and certified	
Engine with wet sleeve cylinder liners.....	10-10	tier 1 and stage I.....	10-7
Disposing	10-12	Extended service intervals.....	10-8
Mixing with concentrate, water quality	10-11	F	
Replenishing supplemental additives.....	30-10	Fan belt, replacing	40-7
Testing.....	30-11	Filter, replacing	
Testing freeze point.....	10-12	Fuel	30-3
Warm temperature climates	10-11	Oil.....	30-1
Cooling system		Fire extinguisher, servicing.....	30-7
Adding coolant	40-2	Fuel	
Checking	30-9	Aviation	10-4
Flushing	35-2	Biodiesel	10-3
Pressure testing	30-12	Burner	10-4
Pressure testing radiator cap	30-12		

Continued on next page

	Page		Page
Diesel	10-1		
Handling and storing	10-2	O	
Jet	10-4	Oil	
Kerosene	10-4	Changing	30-1
Lubricity	10-2	Engine	
Fuel filter		Non-Emissions certified and certified	
Priming	40-9	tier 1 and stage I	10-7
Fuel filter, replacing	30-3	Oil filter	
Fuel system		Replacing	30-1
Replacing filter	30-3	Oil filters	10-9
Fuses, checking	40-7	Operating engine	
		Break-in	15-12
G		Normal	15-11
Generator (Standby) Applications	20-3	Starting	15-14
Glow plugs, activating	15-15		
		P	
H		Pre start cleaning	
Hardware torque values		Guide	40-3
Metric	55-5	Prestarting checks	
Unified inch	55-4	Daily	25-1
		Priming fuel filter	40-9
I		Proposition 65	05-2
Identification Views	-6	PV101 Diagnostic Gauge	
		Essential Menus	15-5
J		Main Menu	15-4
Jet fuels	10-4	Using	15-3
		PV101 Instrument Panel	
L		Component function	15-1
Long-term storage		PV480 Diagnostic Gauge	
Preparing engine	50-1	Essential Menus	15-11
Lubricant		Main menu	15-10
Mixing	10-8	Using	15-9
Lubricant Storage		PV480 Instrument Panel	
Storage, Lubricant	10-9	Component function	15-8
Lubricants, safety	10-8		
Lubrication and maintenance		R	
As required		Radiator cap testing	30-12
Pre-start cleaning guide	40-3	Refueling, avoid static electricity risk	05-10
Lubrication and Maintenance			
Service Interval Chart	20-2, 20-3	S	
Lubricity of diesel fuel	10-2	Safety	
		Protect against noise	05-6
M		Safe maintenance, practice	05-4
Maintenance interval chart		Safety, Avoid High-Pressure Fluids	
Generator (Standby) applications	20-3	Avoid High-Pressure Fluids	05-9
Standard industrial applications	20-2	Safety, Handle Fuel Safely, Avoid Fires	
Metric bolt and screw torque values	55-5	Avoid Fires, Handle Fuel Safely	05-10
Mixing lubricants	10-8	Safety, lubricants	10-8
Mounts, engine		Service	
Checking	30-7	As required	
		Pre-start cleaning guide	40-3
		Battery	30-7
		Fire extinguisher	30-7

Continued on next page

	Page		Page
Intervals	20-2, 20-3	Troubleshooting	
Service Information, Additional	40-1	Electrical	45-2
Service intervals		Engine	45-3
Extended diesel engine oil		General	45-1
Non-Emissions certified and certified			
tier 1 and stage I	10-8	U	
Signal words, understand	05-1	Unified inch bolt and screw torque values	55-4
Specifications	55-1		
Battery capabilities	30-7	V	
Belt tensioner	30-5	Vibration Damper	
Oil capacity	55-3	Inspecting	35-1
Power ratings	55-2		
Speed gain, adjusting, gen sets	40-8	W	
Storage		Warming engine	15-15
Guidelines	50-1	Warranty	
Removing from	50-2	Information and registration	-3
Storing fuel	10-2	Non-road emissions control warranty	
Supplemental coolant additives		statement--compression ignition	
Replenishing	30-10	CARB	65-7
		EPA	65-5
T		OEM applications	65-1
Tensioner, belt	30-5	Welding precautions, Safety	45-1
Testing diesel fuel	10-4		
Torque charts			
Metric	55-5		
Unified inch	55-4		

